




SCPH-100 SERIES

SERVICE MANUAL

5th Edition

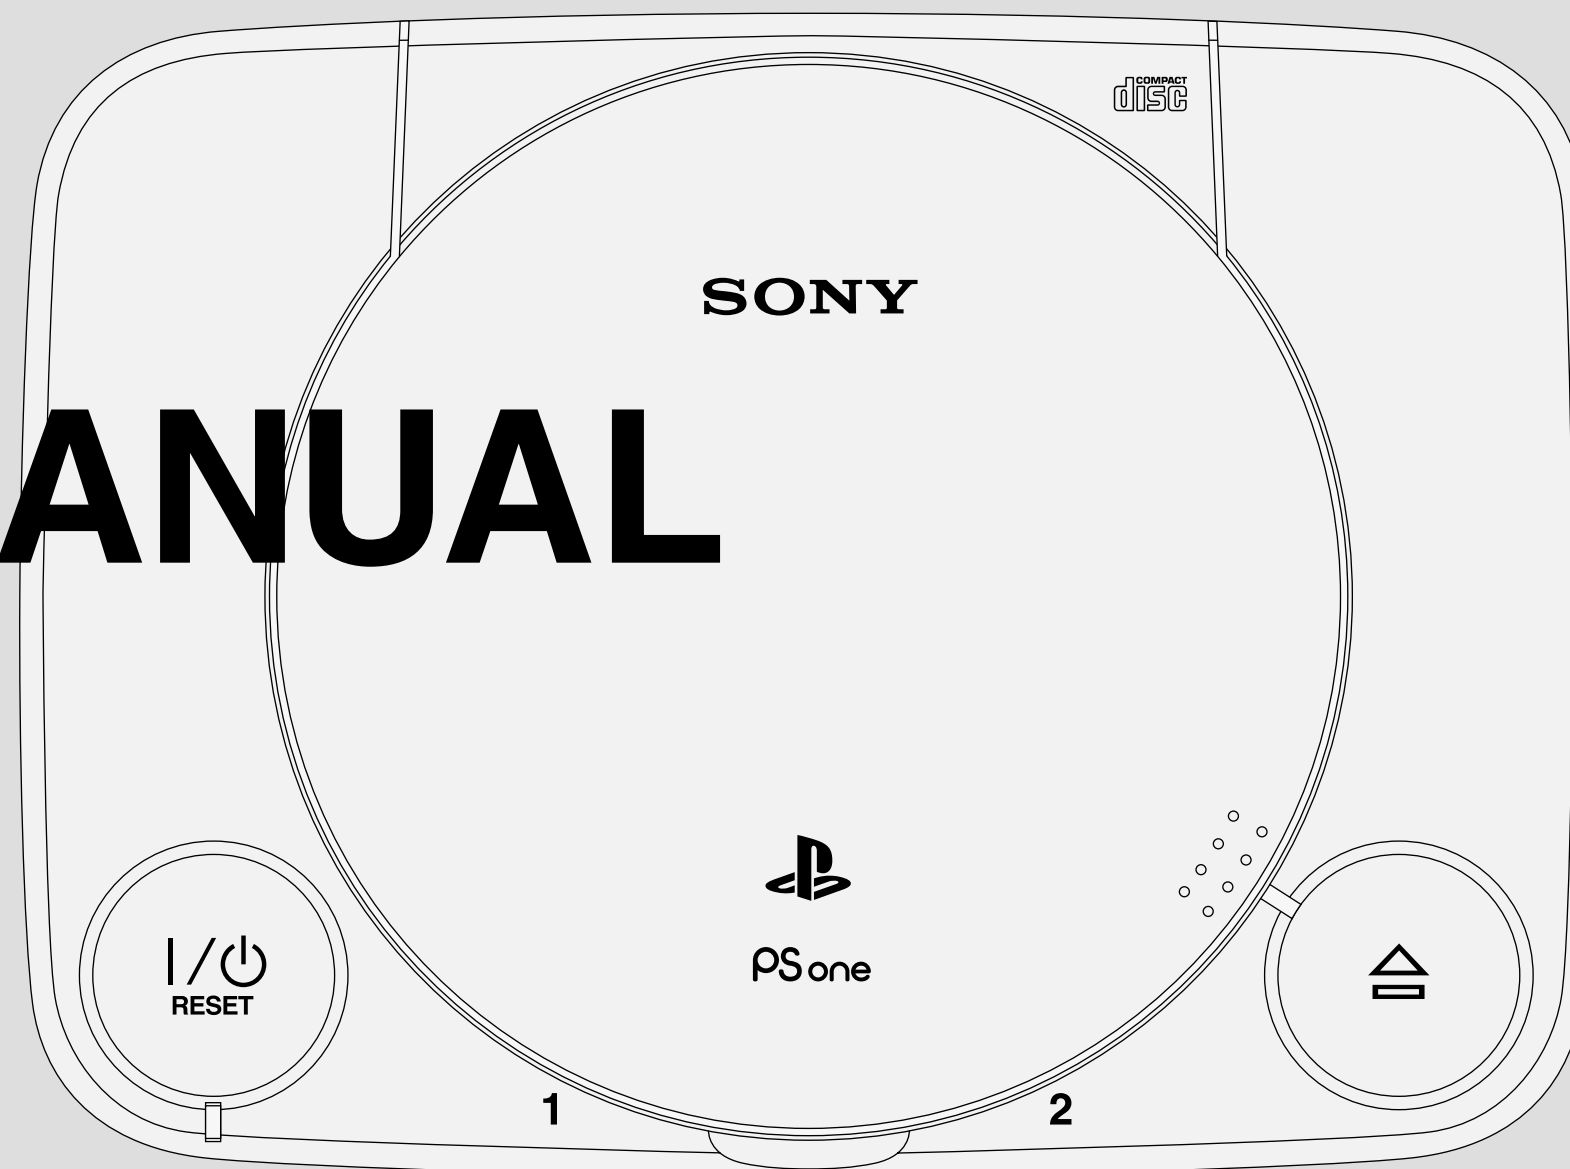

PSone™



Sony Computer Entertainment Inc.
Customer Service Department
Published in Japan c.12.2001 9-927-088-03

Notice

This manual is copyrighted by Sony Computer Entertainment Inc. All rights Reserved.

No re-produced or transferred required except permission by Sony Computer Entertainment Inc.

No commercial use and rental required.

Revisions

This manual compiled by 5th edition of SCPH-100’s Design data.

Design and specifications will be subject to change without notice.

So, the latest versions of Service Manual, Technical Memo and SCEI. Service Promotion Dept.’s Home Page “PS SERVICE PLAZA” should be used together with this manual.

PS SERVICE PLAZA web site: <http://svc.scei.sony.co.jp/>

TABLE OF CONTENTS

1. SPECIFICATIONS 1-1

2. EXPLODED VIEW

2-1. Main Block 2-1

3. ADJUSTMENTS

3-1. Check Specification 3-1

3-2. Adjustment & Check Tool 3-2

3-3. Attention 3-2

4. BLOCK DIAGRAM

4-1. Overall Block Diagram (PM-41 (-11/-21/-31/-41/-51/-61) Board)..... 4-1

4-2. Overall Block Diagram (PM-41 (-71) Board) 4-3

5. DIAGRAMS

5-1. Printed Wiring Board (PM-41 (-11) Board) (SCPH-100) 5-1

5-2. Printed Wiring Board (PM-41 (-21/-31) Board) (SCPH-100/101/102) 5-3

5-3. Printed Wiring Board (PM-41 (-41/-51) Board) (SCPH-100/101/102/103) .. 5-5

5-4. Printed Wiring Board (PM-41 (-61) Board) (SCPH-100/101/102/103) 5-7

5-5. Printed Wiring Board (PM-41 (-71) Board) (SCPH-100/101/102/103) 5-9

5-6. Schematic Diagram (PM-41 (-11/-21/-31/-41/-51/-61) Board (1/15))..... 5-11

5-7. Schematic Diagram (PM-41 (-71) Board (2/15)) 5-13

5-8. Schematic Diagram (PM-41 (-11/-21/-31) Board (3/15)) 5-15

5-9. Schematic Diagram (PM-41 (-41/-51) Board (4/15)) 5-17

5-10. Schematic Diagram (PM-41 (-61) Board (5/15)) 5-19

5-11. Schematic Diagram (PM-41 (-71) Board (6/15)) 5-21

5-12. Schematic Diagram (PM-41 (-11/-21/-31/-41/-51/-61) Board (7/15)) 5-23

5-13. Schematic Diagram (PM-41 (-71) Board (8/15)) 5-25

5-14. Schematic Diagram (PM-41 (-11/-21/-31/-41/-51/-61) Board (9/15)) 5-27

5-15. Schematic Diagram (PM-41 (-71) Board (10/15)) 5-29

5-16. Schematic Diagram (PM-41 (-11) Board (11/15)) 5-31

5-17. Schematic Diagram (PM-41 (-21/-31/-41/-51/-61) Board (12/15)) 5-33

5-18. Schematic Diagram (PM-41 (-71) Board (13/15)) 5-35

5-19. Schematic Diagram (PM-41 (-11/-21/-31/-41/-51/-61) Board (14/15)) 5-37

5-20. Schematic Diagram (PM-41 (-71) Board (15/15)) 5-39

6. ELECTRICAL PARTS LIST

• PM-41 Board 6-1

SECTION 1
SPECIFICATIONS

SCPH-100

General
Power requirements
 DC IN 7.5 V
Power consumption
 9 W
Dimensions
 193 × 36 × 143 mm (w/h/d)
Mass
 550 g
Operating Temperature
 5°C - 35°C

Laser diode properties
 • Material : GaAlAs
 • Wavelength : λ=780 nm
 • Emission duration : Continuous
 • Laser output : Less than 44.6 μW
(measured at a distance of 200 mm from the lens surface on the optical pick-up block)

Inputs/outputs on the front
Controller ports (2)
MEMORY CARD slots (2)

Outputs on the rear
AV MULTI OUT connector (1)

AC power adaptor
Power requirements
 100 V AC, 50/60 Hz
Output voltage and current
 7.5 V, 2.0 A max.
Dimensions
 50 × 27 × 78 mm (w/h/d)
Mass
 160 g

Supplied accessories
AC Adaptor (1)
AV Cable
(integrated audio/video) (1)
Analog Controller
(DUALSHOCK™) (1)
Instruction Manual (1)

Design and specifications are subject to change without notice.

SCPH-101

General
Power requirements
 DC IN 7.5 V
Power consumption
 9 W
Dimensions
 193 × 38 × 144 mm (w/h/d)
 (7 5/8 × 1 1/2 × 5 3/4 inches)
Mass
 560 g (1 lb 3 oz)
Operating Temperature
 41°F - 95°F (5°C - 35°C)

Laser diode properties
 • Material : GaAlAs
 • Wavelength : λ=780 nm
 • Emission duration : Continuous
 • Laser output : Less than 44.6 μW
(measured at a distance of 200 mm from the lens surface on the optical pick-up block)

Inputs/outputs on the front
Controller ports (2)
MEMORY CARD slots (2)

Outputs on the rear
AV MULTI OUT connector (1)

Supplied accessories
AC Adaptor (1)
AV Cable
(integrated audio/video) (1)
Analog Controller
(DUALSHOCK™) (1)
Instruction Manual (1)

Design and specifications are subject to change without notice.

SCPH-102

General
Power requirements
 DC IN 7.5 V
Power consumption
 9 W
Dimensions
 193 × 38 × 144 mm (w/h/d)
Mass
 560 g
Operating Temperature
 41°F - 95°F (5°C - 35°C)

Laser diode properties
 • Material : GaAlAs
 • Wavelength : λ=780 nm
 • Emission duration : Continuous
 • Laser output : Less than 44.6 μW
(measured at a distance of 200 mm from the lens surface on the optical pick-up block)

Inputs/outputs on the front
Controller ports (2)
MEMORY CARD slots (2)

Outputs on the rear
AV MULTI OUT connector (1)

Supplied accessories
AC Adaptor (1)
AV Cable
(integrated audio/video) (1)
Analog Controller
(DUALSHOCK™) (1)
Instruction Manual (1)

Design and specifications are subject to change without notice.

SCPH-103

General
Power requirements
 DC IN 7.5 V
Power consumption
 9 W
Dimensions
 193 × 38 × 144 mm (w/h/d)
Mass
 560 g
Operating Temperature
 5°C - 35°C

Laser diode properties
 • Material : GaAlAs
 • Wavelength : λ=780 nm
 • Emission duration : Continuous
 • Laser output : Less than 44.6 μW
(measured at a distance of 200 mm from the lens surface on the optical pick-up block)

Inputs/outputs on the front
Controller ports (2)
MEMORY CARD slots (2)

Outputs on the rear
AV MULTI OUT connector (1)

Supplied accessories
AC Adaptor (1)
AV Cable
(integrated audio/video) (1)
Analog Controller
(DUALSHOCK™) (1)
Instruction Manual (1)

Design and specifications are subject to change without notice.

SECTION 2
EXPLODED VIEW

- NOTE:**
- The mechanical parts with no reference number in the exploded views are not supplied.
 - -XX and -X mean standardized parts, so they may have some difference from the original one.
 - Accessories and packing materials are given in the last of this parts list.

The components identified by mark $\triangle$ or dotted line with mark. $\triangle$ are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque $\triangle$ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

NOTE:

- SC Classification :
S : Stocked parts U : Unsupplied parts
O : Ordered parts

CAUTION
Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

2-1. MAIN BLOCK

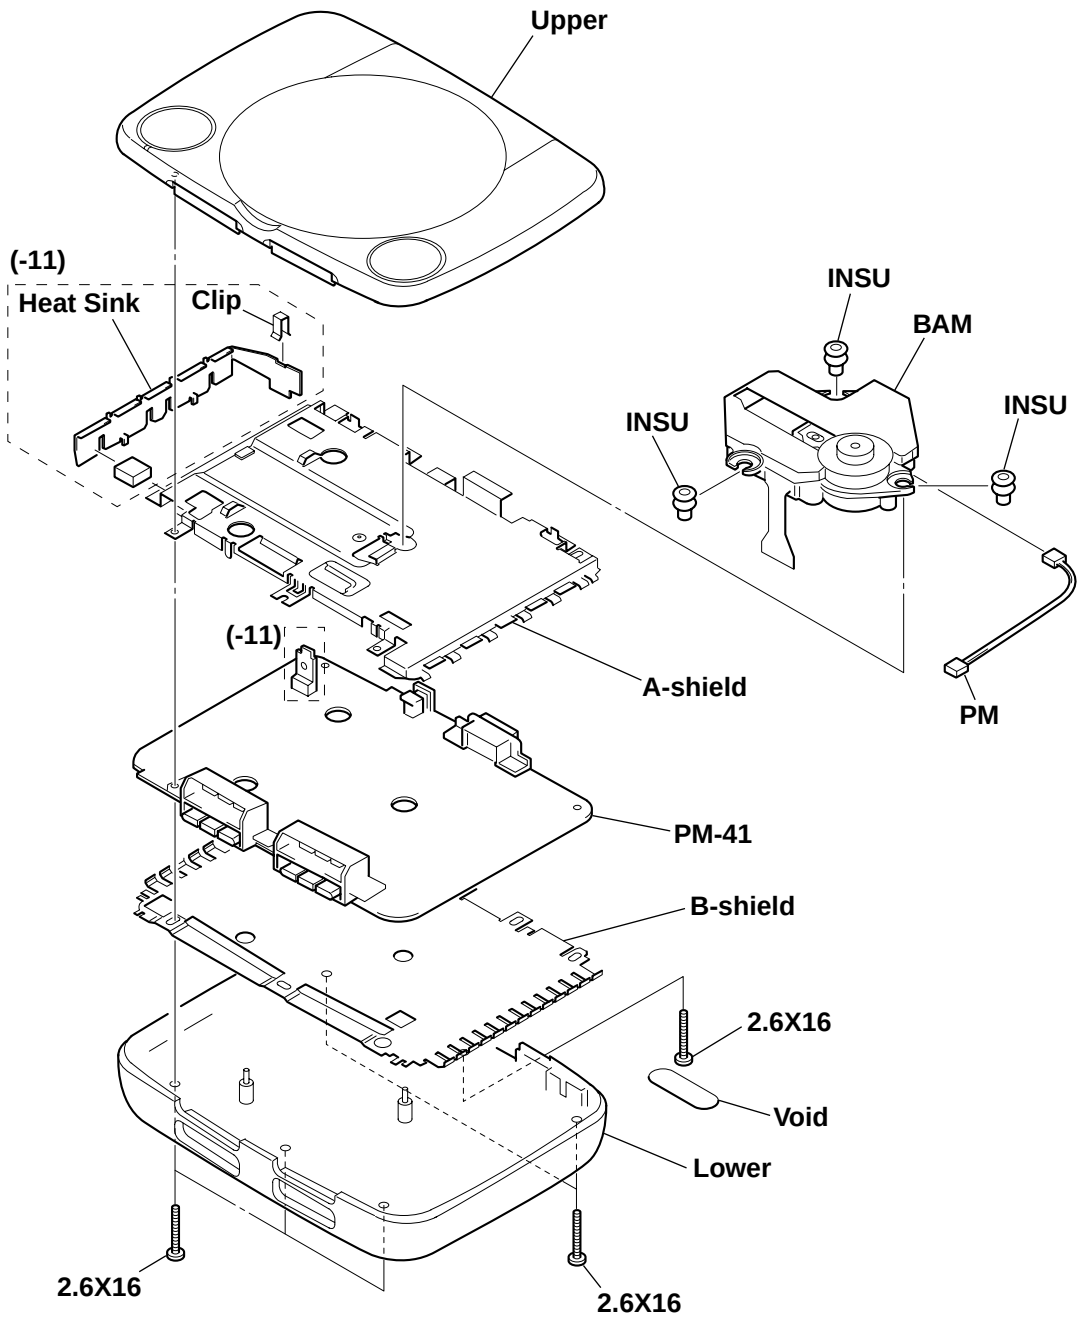

SC	Ref. No.	Part No.	Description	Remark
0	A-shield	X-3950-906-1	SHIELD (A) ASSY (-11/-21/-31/-41/-51/-61)	
0	A-shield	X-3952-077-1	SHIELD (A) ASSY (-71)	
0	B-shield	3-063-429-01	SHIELD (B) (-11/-21/-31/-41/-51/-61)	
0	B-shield	3-069-803-01	SHIELD (B) (-71)	
S $\triangle$	BAM	8-820-135-01	DEVICE, OPTICAL KSM-440BAM/C1NP	
0	Clip	3-063-704-01	CLIP (-11)	
0	Heat Sink	3-063-703-01	HEAT SINK (-11)	
S	INSU	3-063-428-01	INSULATOR (A) (-11)	
S	INSU	3-965-376-11	INSULATOR (-21/-31/-41/-51/-61/-71)	
0	Lower	X-3952-076-1	CABINET (LOWER) ASSY (100,102,103)	
0	Lower	X-3952-079-1	CABINET (LOWER) ASSY (101)	
0	PM	1-954-377-31	HARNESS (PM-86)	
0 $\triangle$	PM-41	A-6713-742-A	PM-41 BOARD, COMPLETE (100:-11/-21/-31)	
0 $\triangle$	PM-41	A-6713-768-A	PM-41 BOARD, COMPLETE (101:-21/-31)	
0 $\triangle$	PM-41	A-6713-776-A	PM-41 BOARD, COMPLETE (102:-21/-31)	
0 $\triangle$	PM-41	A-6713-853-A	PM-41 BOARD, COMPLETE (100:-41/-51)	
0 $\triangle$	PM-41	A-6713-854-A	PM-41 BOARD, COMPLETE (101:-41/-51)	
0 $\triangle$	PM-41	A-6713-855-A	PM-41 BOARD, COMPLETE (102:-41/-51)	
0 $\triangle$	PM-41	A-6713-864-A	PM-41 BOARD, COMPLETE (103:-41/-51)	
0 $\triangle$	PM-41	A-6713-902-A	PM-41 BOARD, COMPLETE (101:-61)	
0 $\triangle$	PM-41	A-6713-903-A	PM-41 BOARD, COMPLETE (100:-61)	
0 $\triangle$	PM-41	A-6713-904-A	PM-41 BOARD, COMPLETE (102:-61)	
0 $\triangle$	PM-41	A-6713-906-A	PM-41 BOARD, COMPLETE (103:-61)	
0 $\triangle$	PM-41	A-6715-470-A	PM-41 BOARD, COMPLETE (100:-71)	
0 $\triangle$	PM-41	A-6715-471-A	PM-41 BOARD, COMPLETE (101:-71)	
0 $\triangle$	PM-41	A-6715-483-A	PM-41 BOARD, COMPLETE (102:-71)	
0 $\triangle$	PM-41	A-6715-484-A	PM-41 BOARD, COMPLETE (103:-71)	
0	Upper	X-3952-075-1	CABINET (UPPER) ASSY (100,102,103)	
0	Upper	X-3952-078-1	CABINET (UPPER) ASSY (101)	
0	Void	3-064-752-01	TAPE, VOID (100)	
0	Void	3-065-630-01	TAPE (B), VOID (101)	
0	Void	3-065-656-01	TAPE (C), VOID (102)	
0	Void	3-066-884-02	TAPE (D), VOID (103)	
0	Void	3-075-101-01	TAPE (KR3), VOID (103D)	
0	2.6X16	3-063-705-01	SCREW (2.6X16), TAPPING	


The components identified by mark $\triangle$ or dotted line with mark. $\triangle$ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque $\triangle$ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

SECTION 3
ADJUSTMENTS

3-1. CHECK SPECIFICATION

RF level 0.90 to 1.35 Vp-p (Check point : Between CL704 (HOT) and CL710 (VC).)

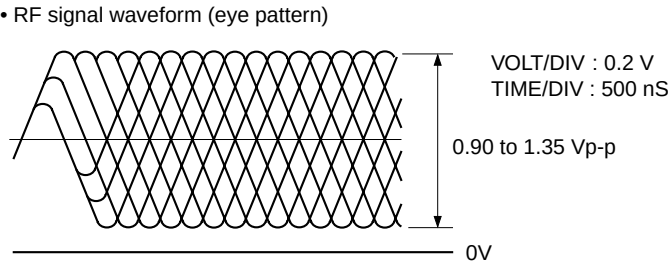

Use SCD-2700 DISC when measured RF level.
Use the oscilloscope with input impedance more than 10 MΩ.

RF Jitter Below 9.0 nS (Measuring by KJM-6135S JITTER METER.)

Below 27.0 nS (Measuring by KJM-6235S JITTER METER.)


PP level 1.1 ± 0.6 Vp-p (Check point : Between CL776 (HOT) and CL710 (VC).)

Use LPF (fc = 10 kHz)

Tracking level 1.25 ± 0.65 Vp-p (Check point : Between CL709 (HOT) and CL710 (VC).)

Caution. Vc Line (CL710) do not make common use with GND line.

Check Point for PU-41 Board. (Refer to each printed wiring boards)

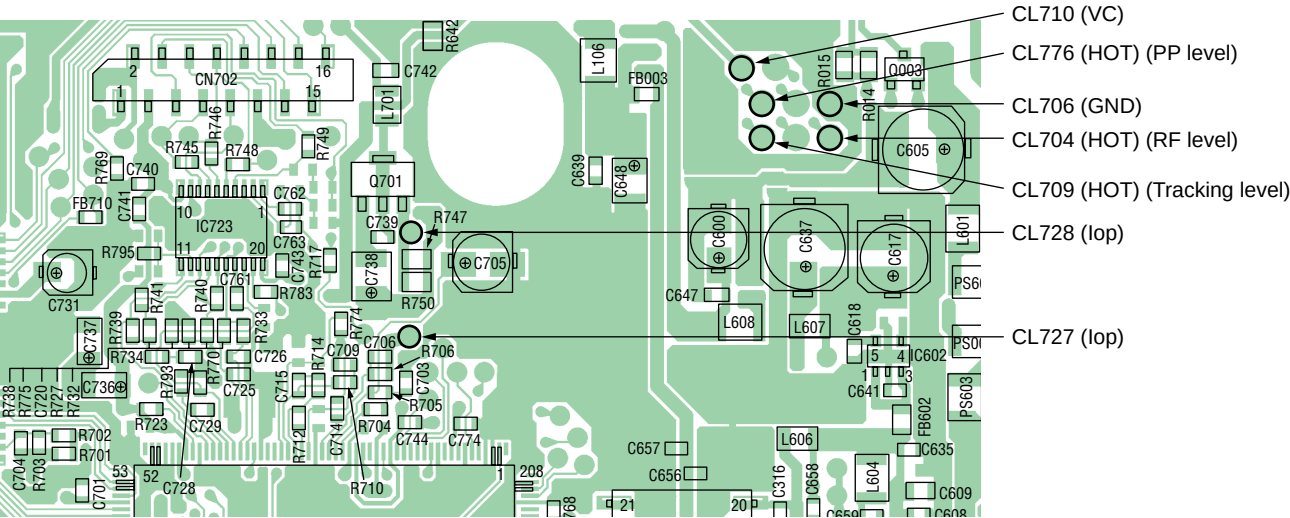

3-2. ADJUSTMENT & CHECK TOOL

SCD-2700 TEST DISC
(J-2504-010-A)

QA DISC
PTPX-97001 for Japan & Asia area.
(J-2504-013-A)
PUPX-93001 for USA & Canada area.
(J-2504-009-A)
PEPX-94001 for Europe, Australia, Galf area.
(J-2504-007-A)

AGING DISC
PTPX-97002 for Japan & Asia area.
(J-2504-019-A)
PUPX-93002 for USA & Canada area.
(J-2504-020-A)
PEPX-94002 for Europe, Australia, Galf area.
(J-2504-017-A)

ANALOG CONTROLLER SERVICE DISC
PTPX-97012 for Japan & Asia area.
(J-2504-021-A)
PUPX-93010 for USA & Canada area.
(J-2504-022-A)
PEPX-94009 for Europe, Australia, Galf area.
(J-2504-023-A)

ANALOG CONTROLLER CHECKER (PRE-H3000)
(J-2504-008-A)

SWITCH ON JIG (PRJ-001)
(J-2504-003-A)

3-3. ATTENTION


Dielectric voltage withstand of Optical Device.
After repair complete. Dielectric voltage withstand test and Insulation resistance test to be conducted according to the regulation of IEC-65 EN60065 or UL1492 or 電気用品取締法 .

About replacement of Optical Device.
Check the specification of RF level, Jitter, Eye pattern, Focus gain and Tracking error using Check jig before replacing the Optical Device.
When Optical Device satisfied those specification, Playback QA DISC or AGING DISC for checking double speed ability and sleding mechanism.


SECTION 4

BLOCK DIAGRAM

4-1. OVERALL BLOCK DIAGRAM (PM-41 (-11/-21/-31/-41/-51/-61) BOARD)

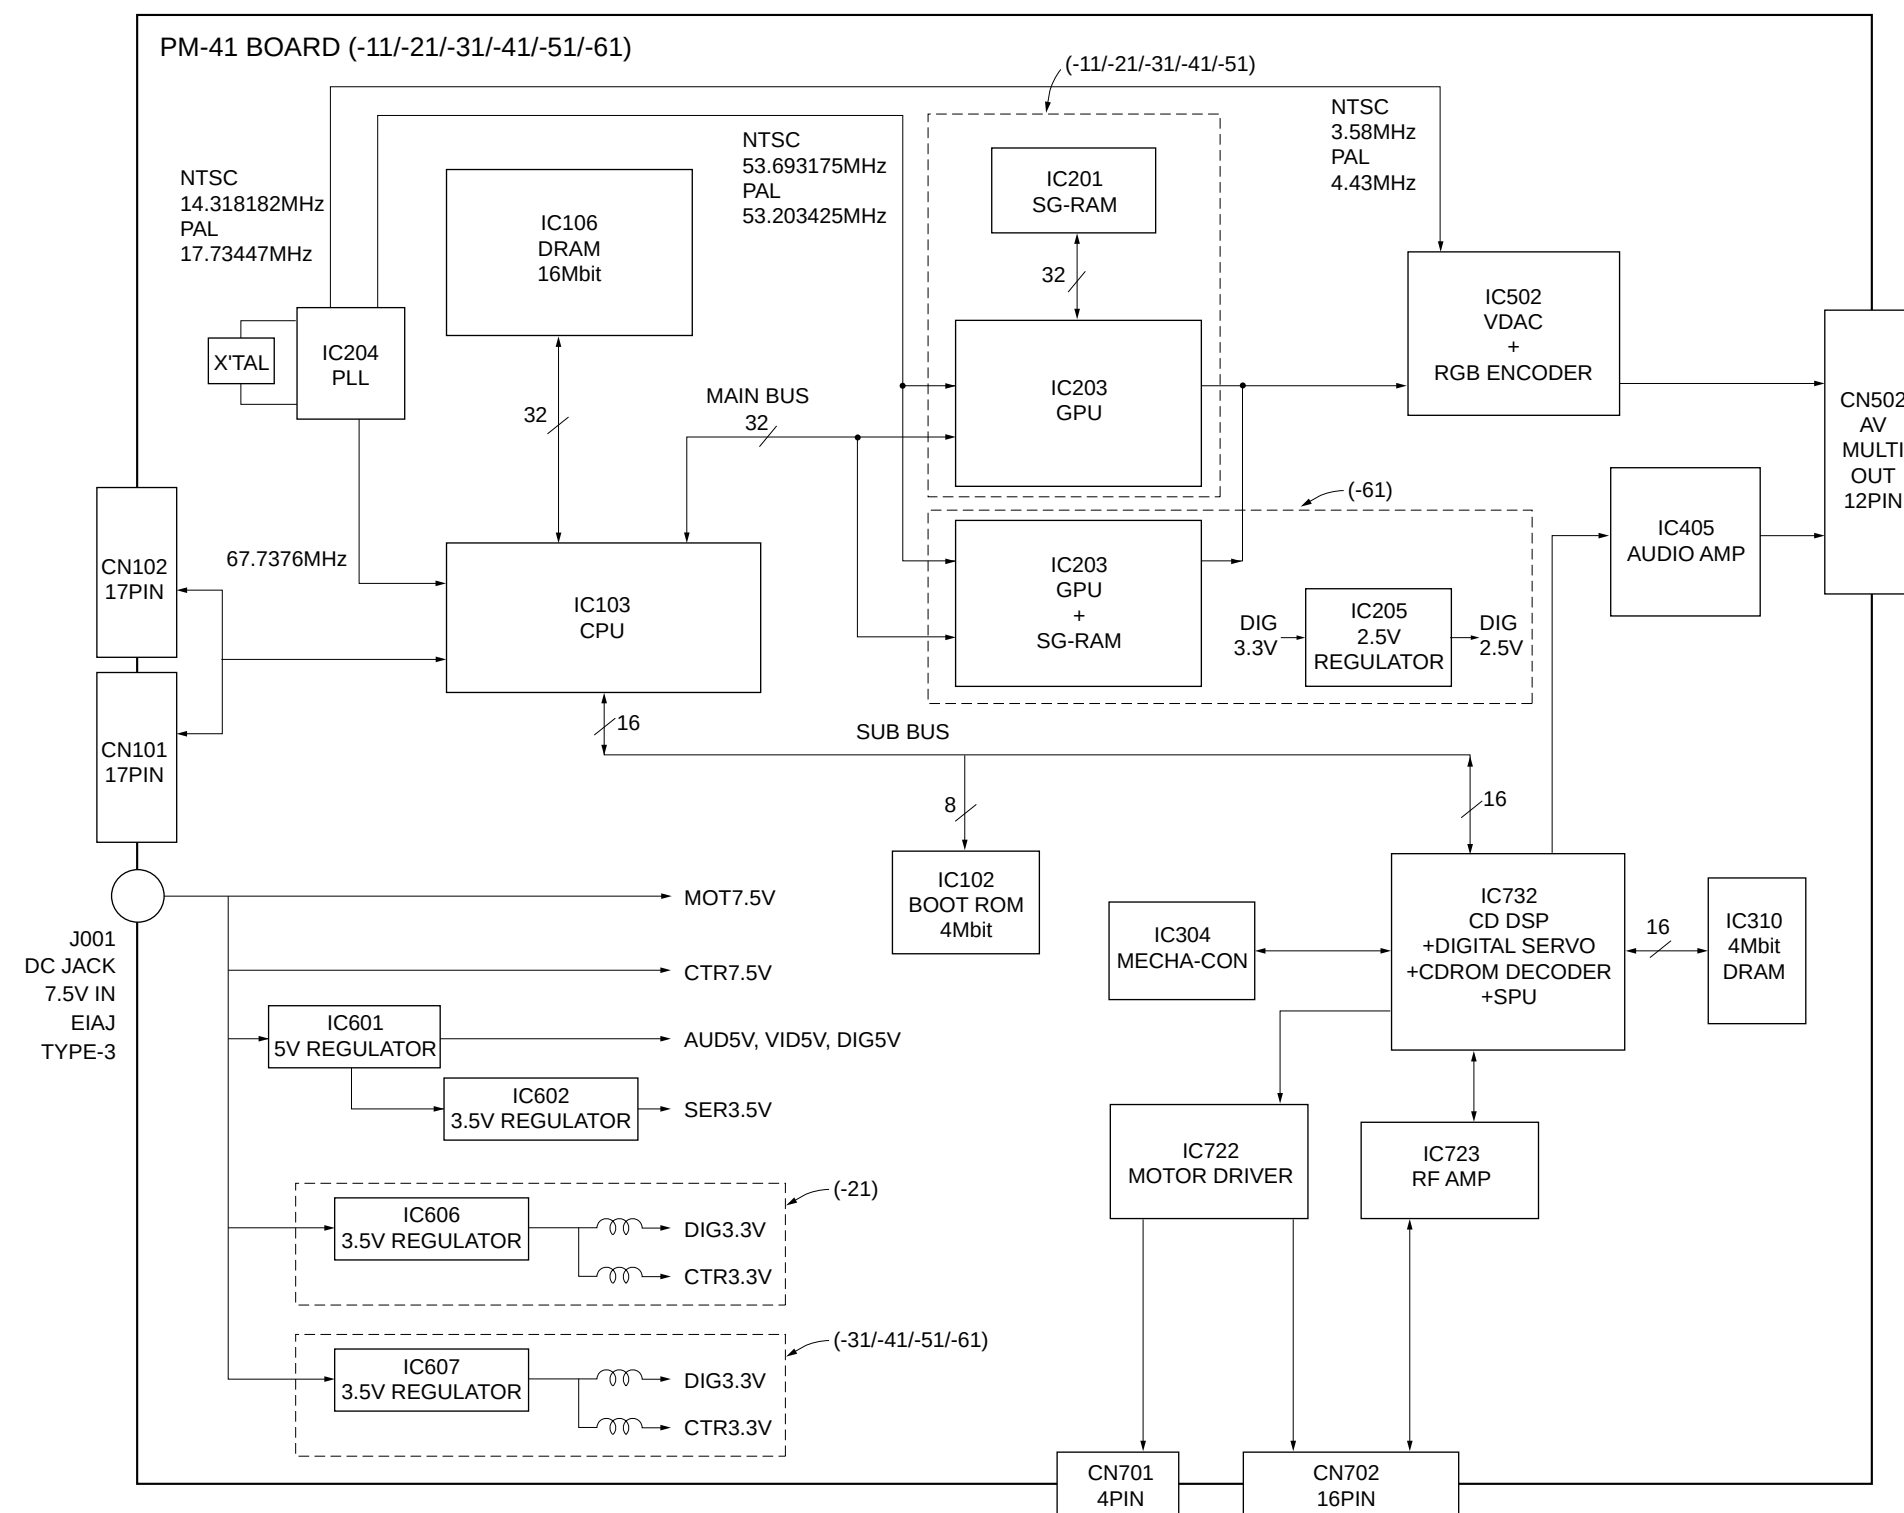

4-2. OVERALL BLOCK DIAGRAM (PM-41 (-71) BOARD)

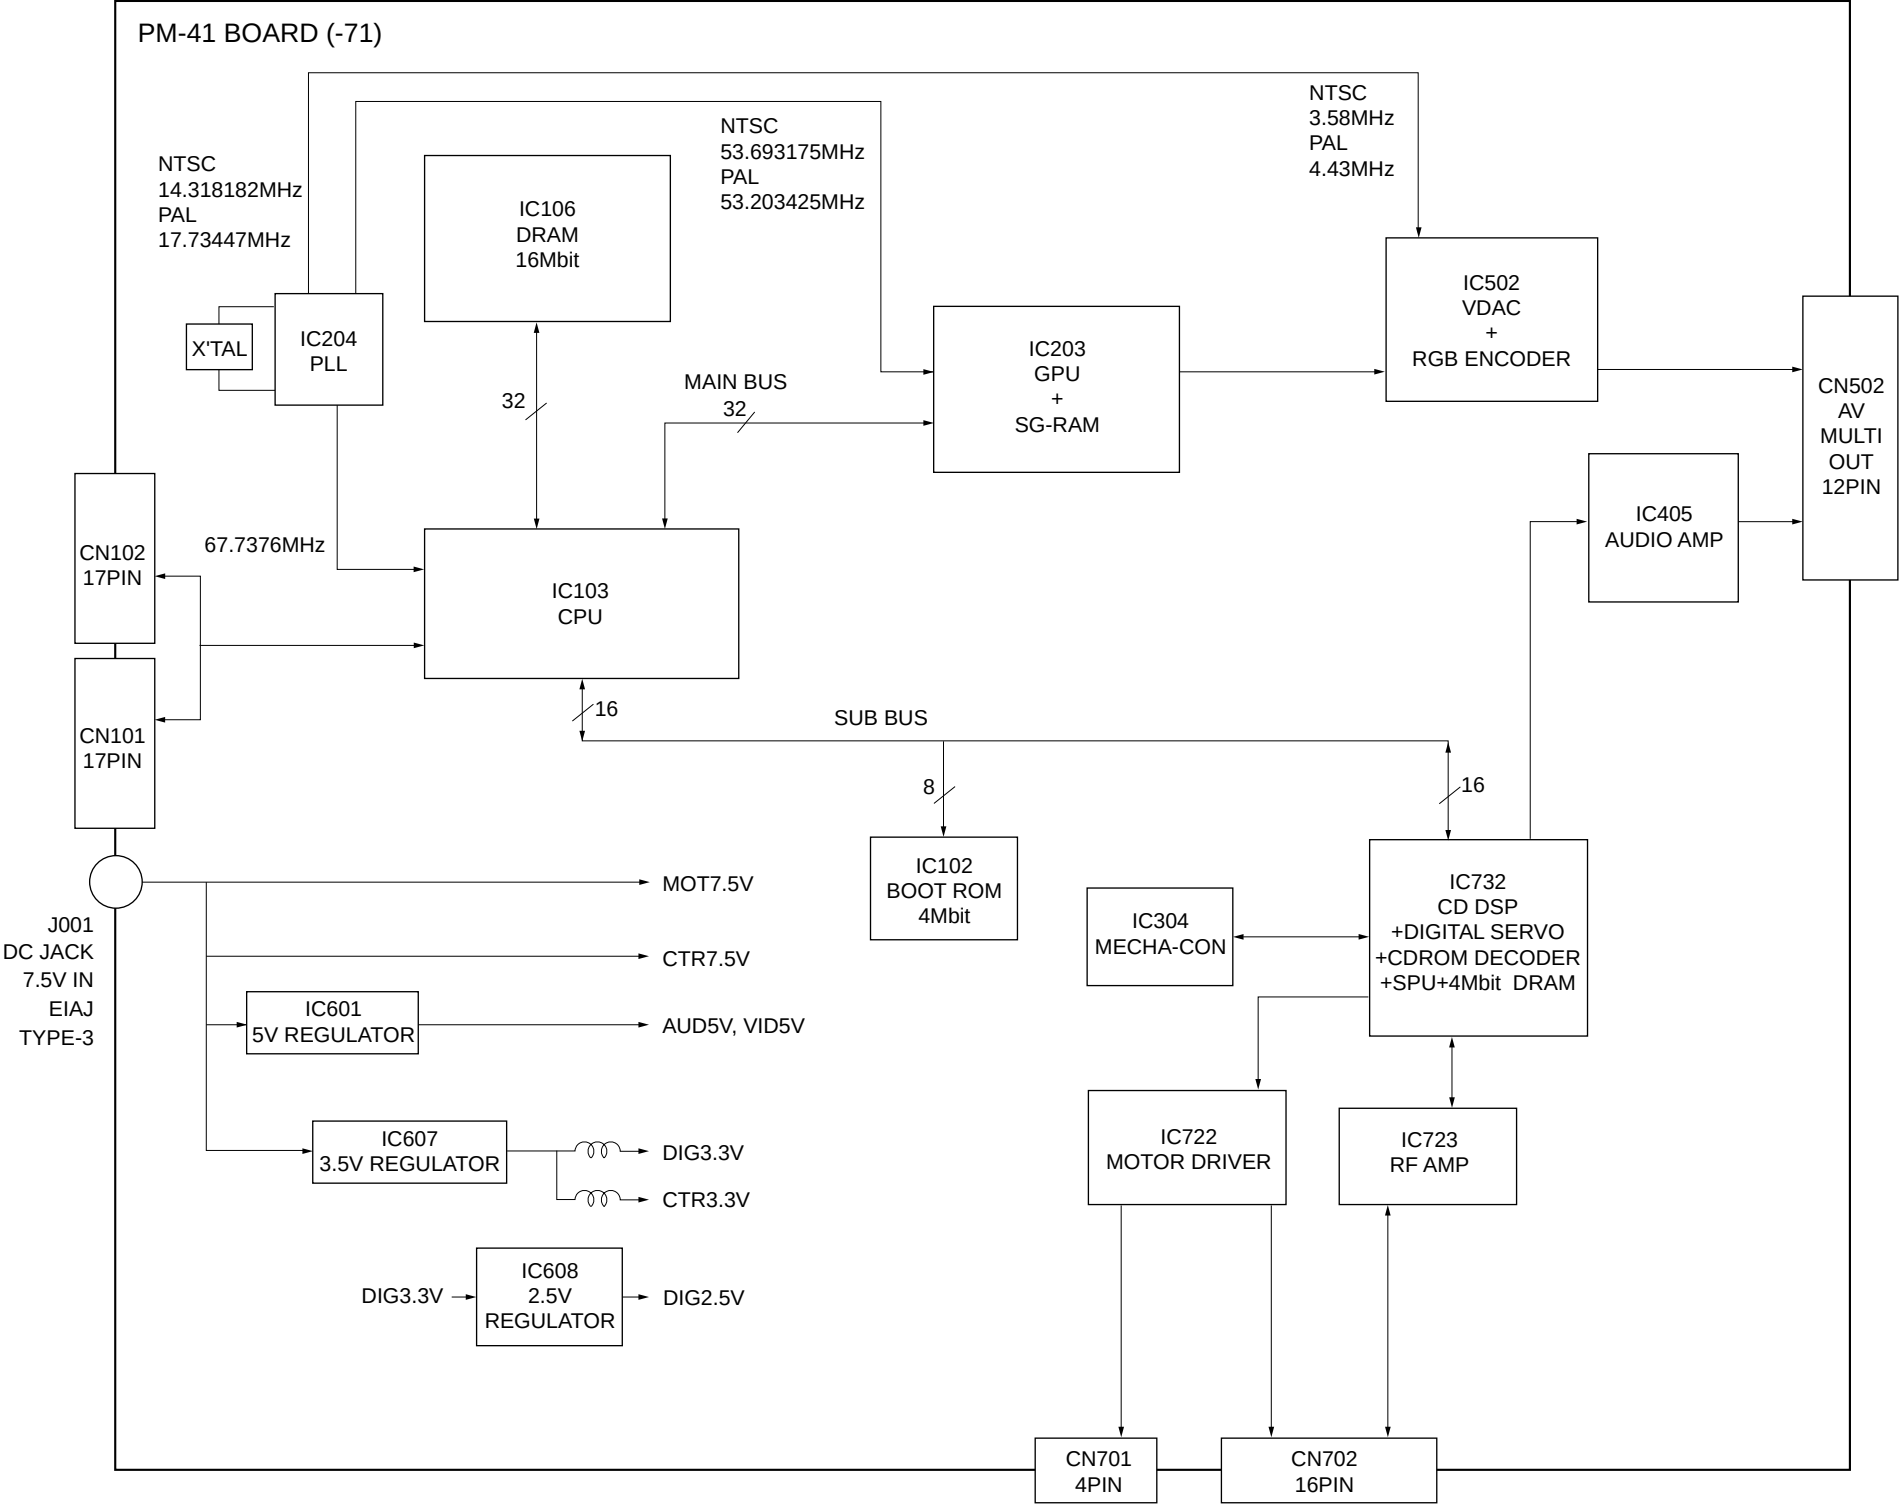

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.

Note on Printed Wiring Boards :


- Through hole is omitted.
-  : Pattern on the side which is seen.
- Chip parts.




Note on Schematic Diagram :

- Caution when replacing chip parts.
New parts must be attached after removal of chip.
Be careful not to heat the minus side of tantalum capacitor, because it is damaged by the heat.
- All capacitors are in μF unless otherwise noted. pF : μF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/16 W or less unless otherwise specified.
- Chip resistor are 1/10 W or 1/16 W unless otherwise noted.
 $\text{k}\Omega$: 1000 Ω , $\text{M}\Omega$: 1000 $\text{k}\Omega$.
-  : B+ Line. *
-  : IN/OUT direction of (+, -) B LINE. *
- Circled numbers refer to waveforms. *
- * Indicated by the color red.


5-2. PRINTED WIRING BOARD (PM-41 (-21/-31) BOARD) (SCPH-100/101/102)

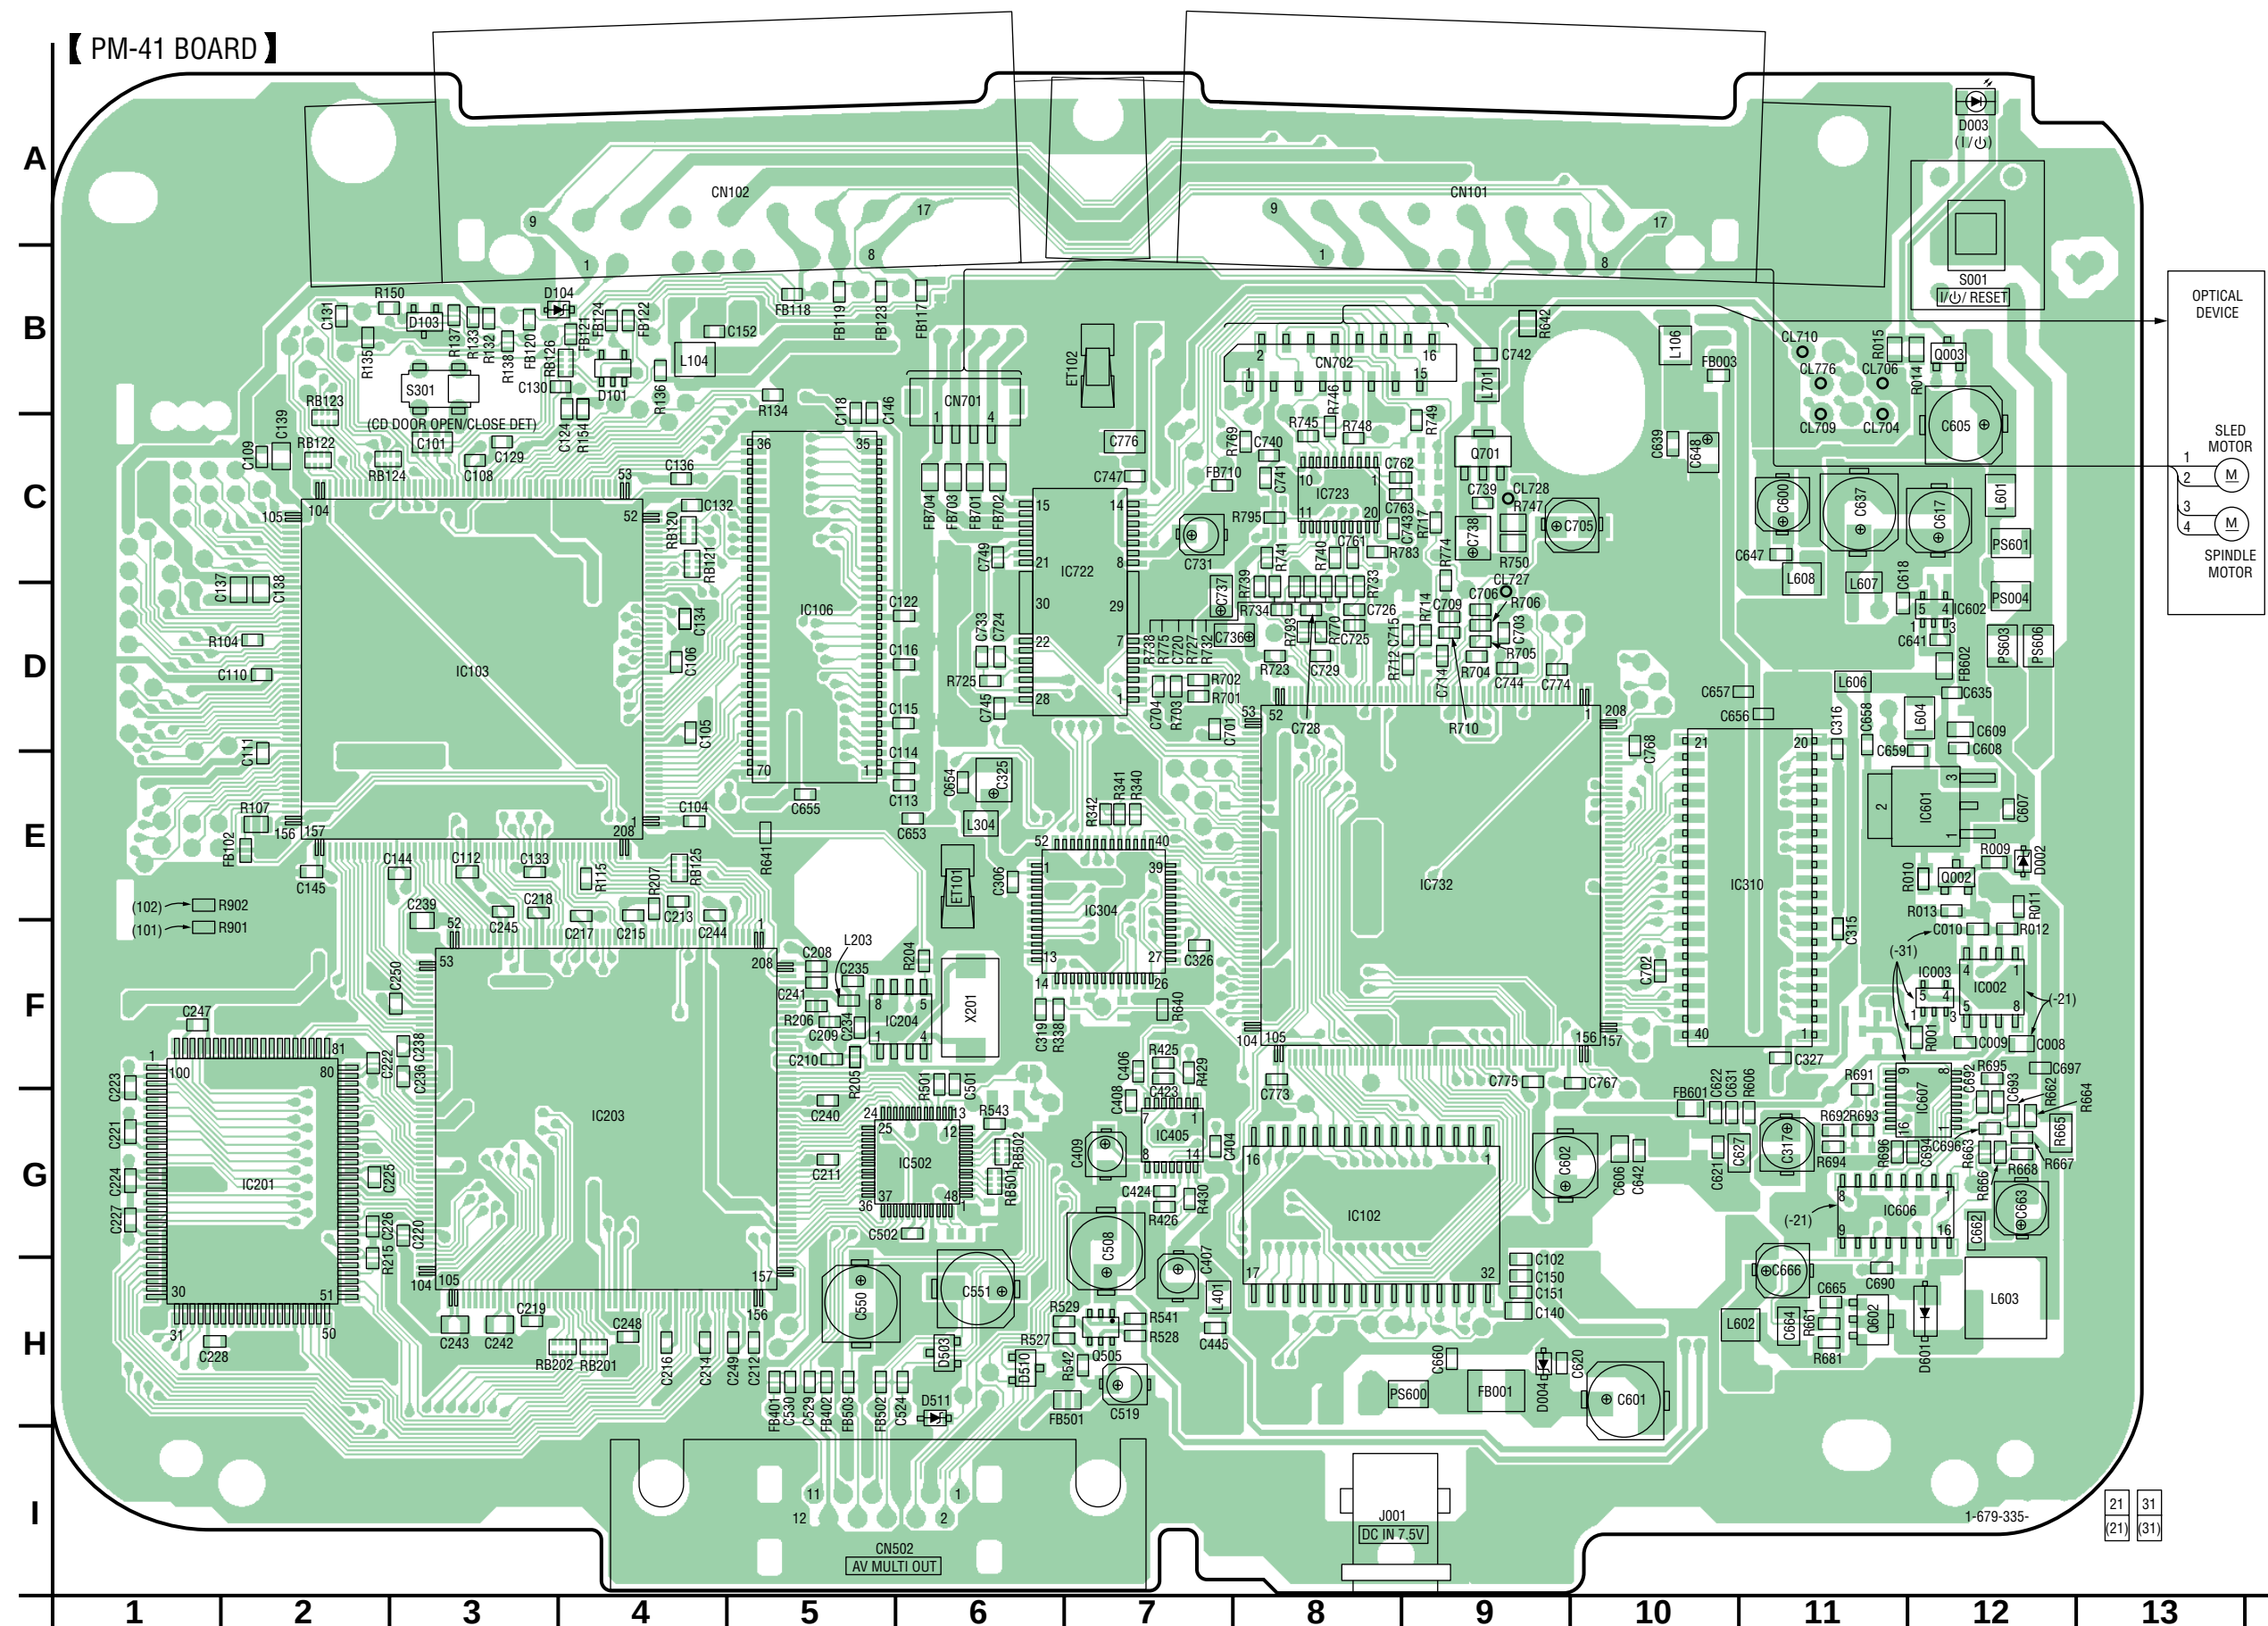

5-4. PRINTED WIRING BOARD (PM-41 (-61) BOARD) (SCPH-100/101/102/103)

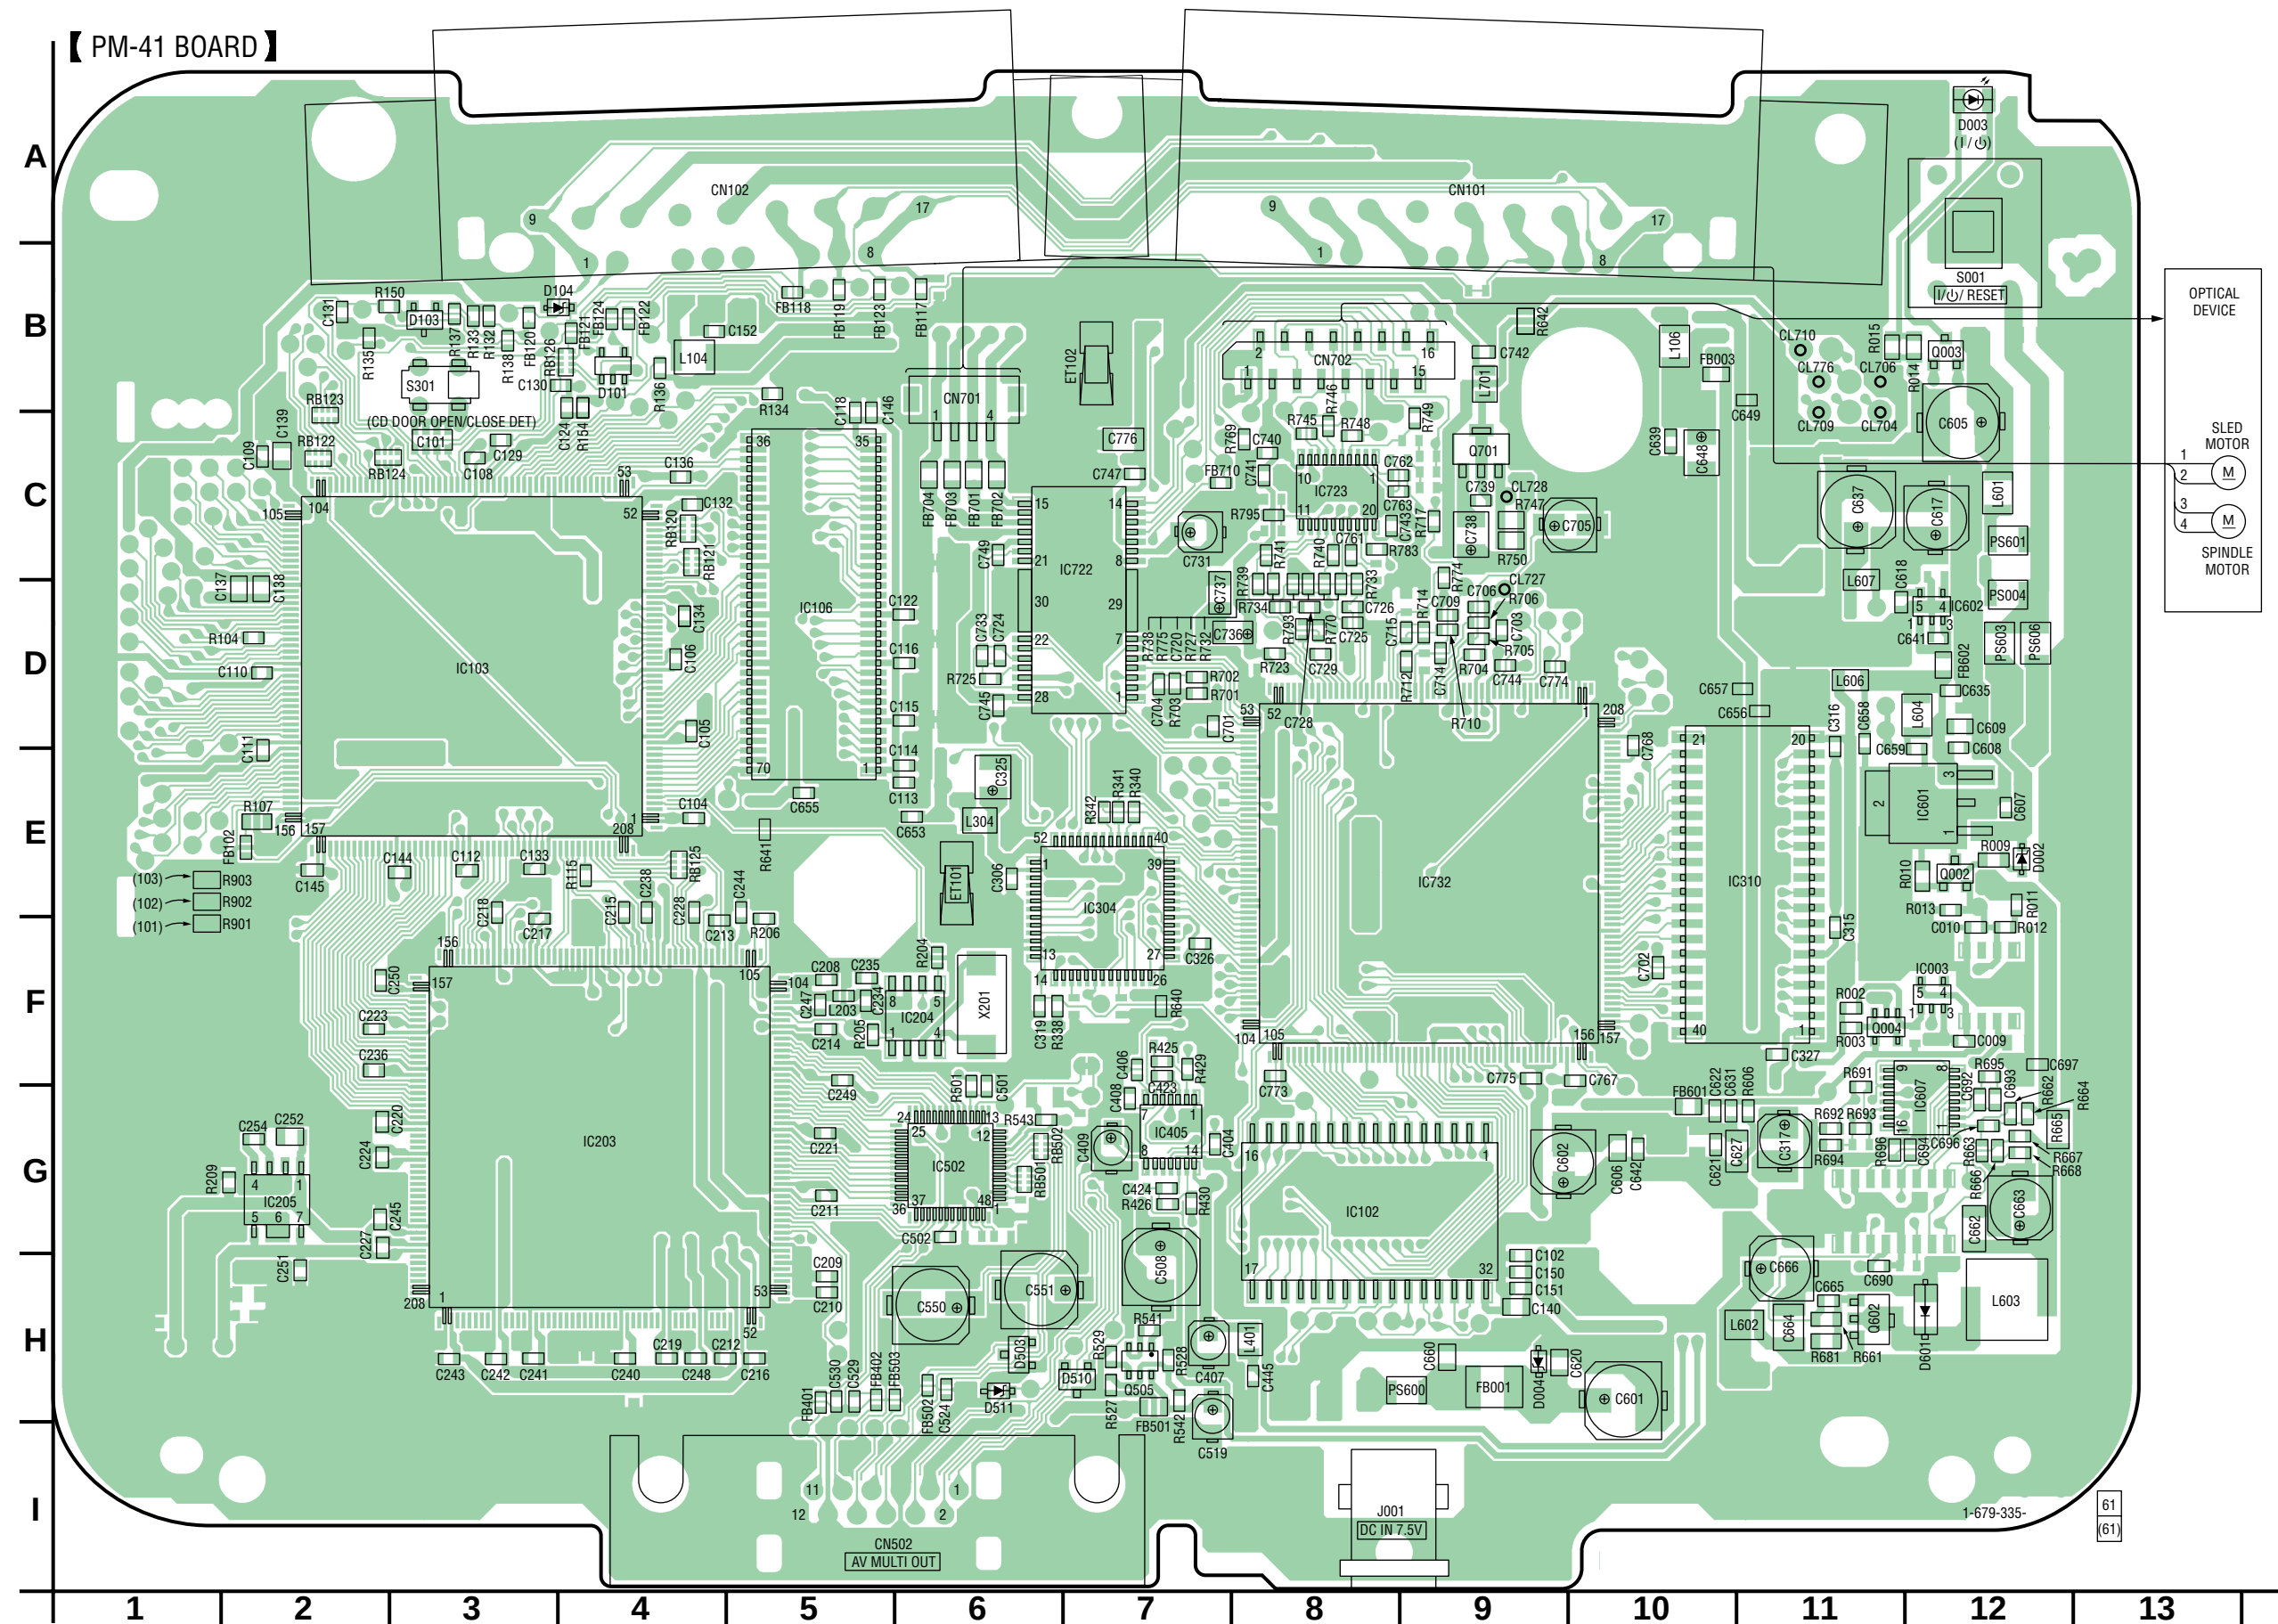


5-5. PRINTED WIRING BOARD (PM-41 (-71) BOARD) (SCPH-100/101/102/103)

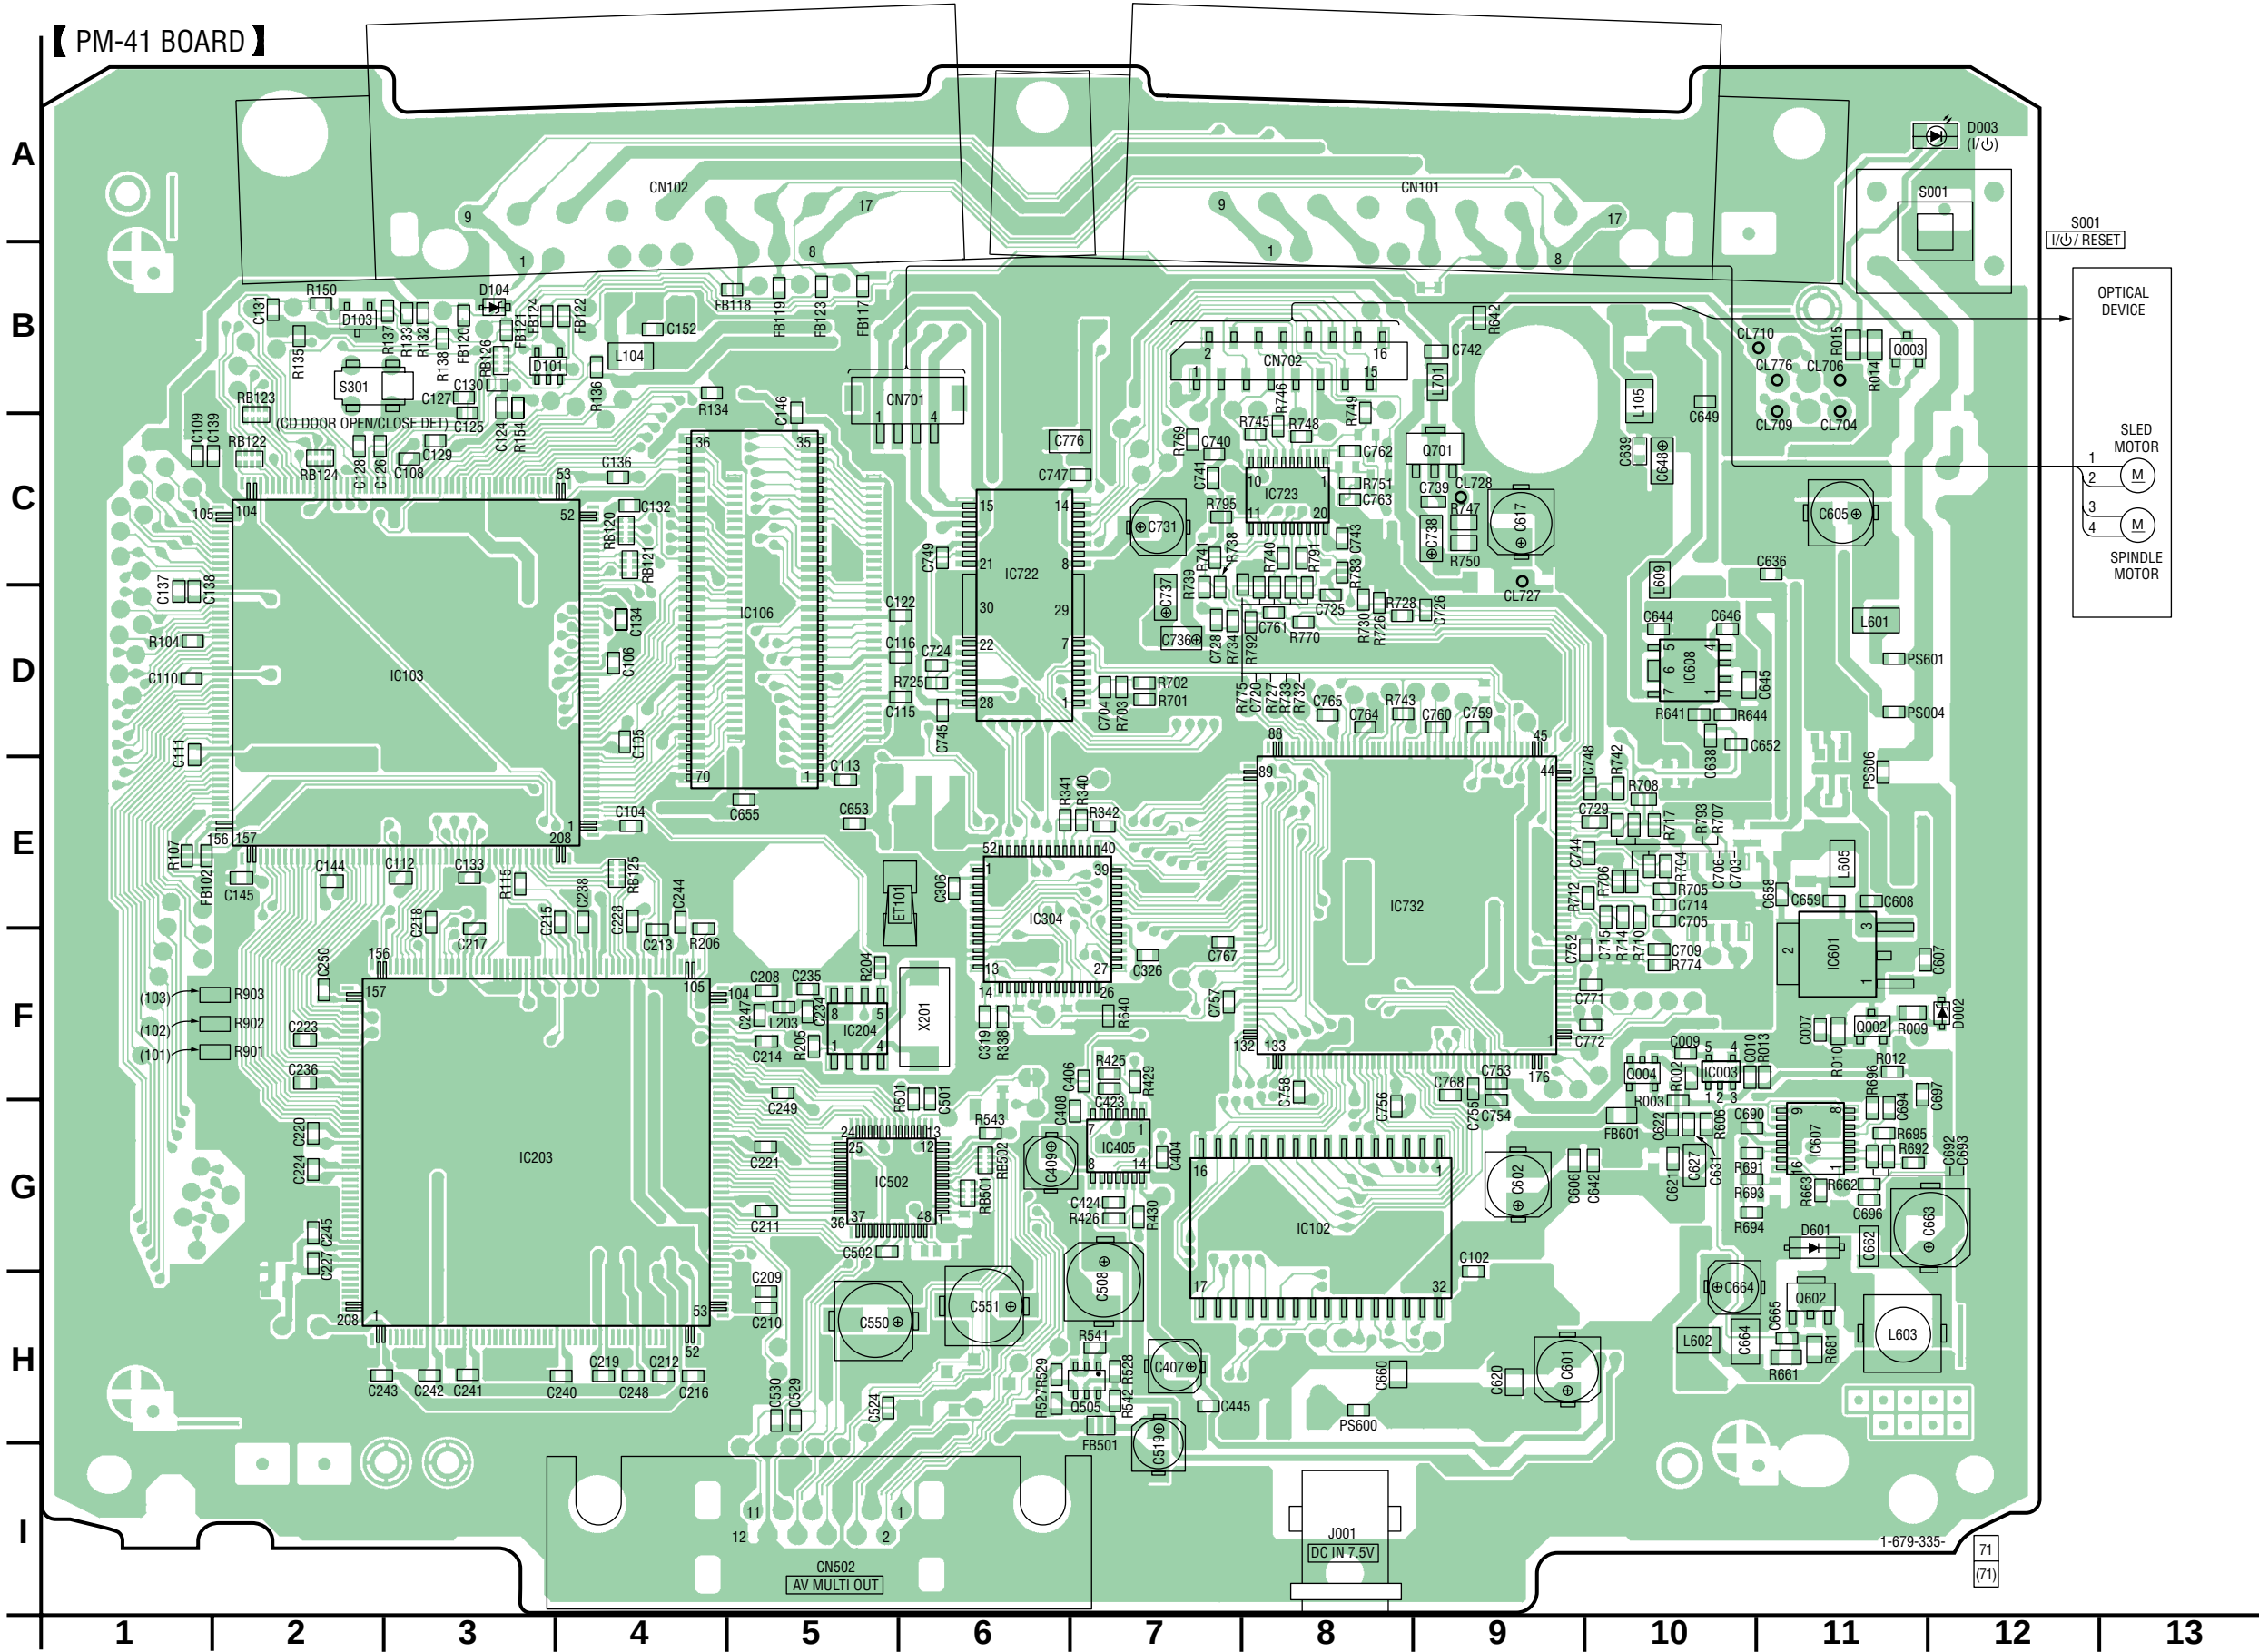


5-6. SCHEMATIC DIAGRAM (PM-41 (-11/-21/-31/-41/-51/-61) BOARD (1/15))

PM-41 (-11/-21/-31/-41/-51/-61) BOARD (1/15)

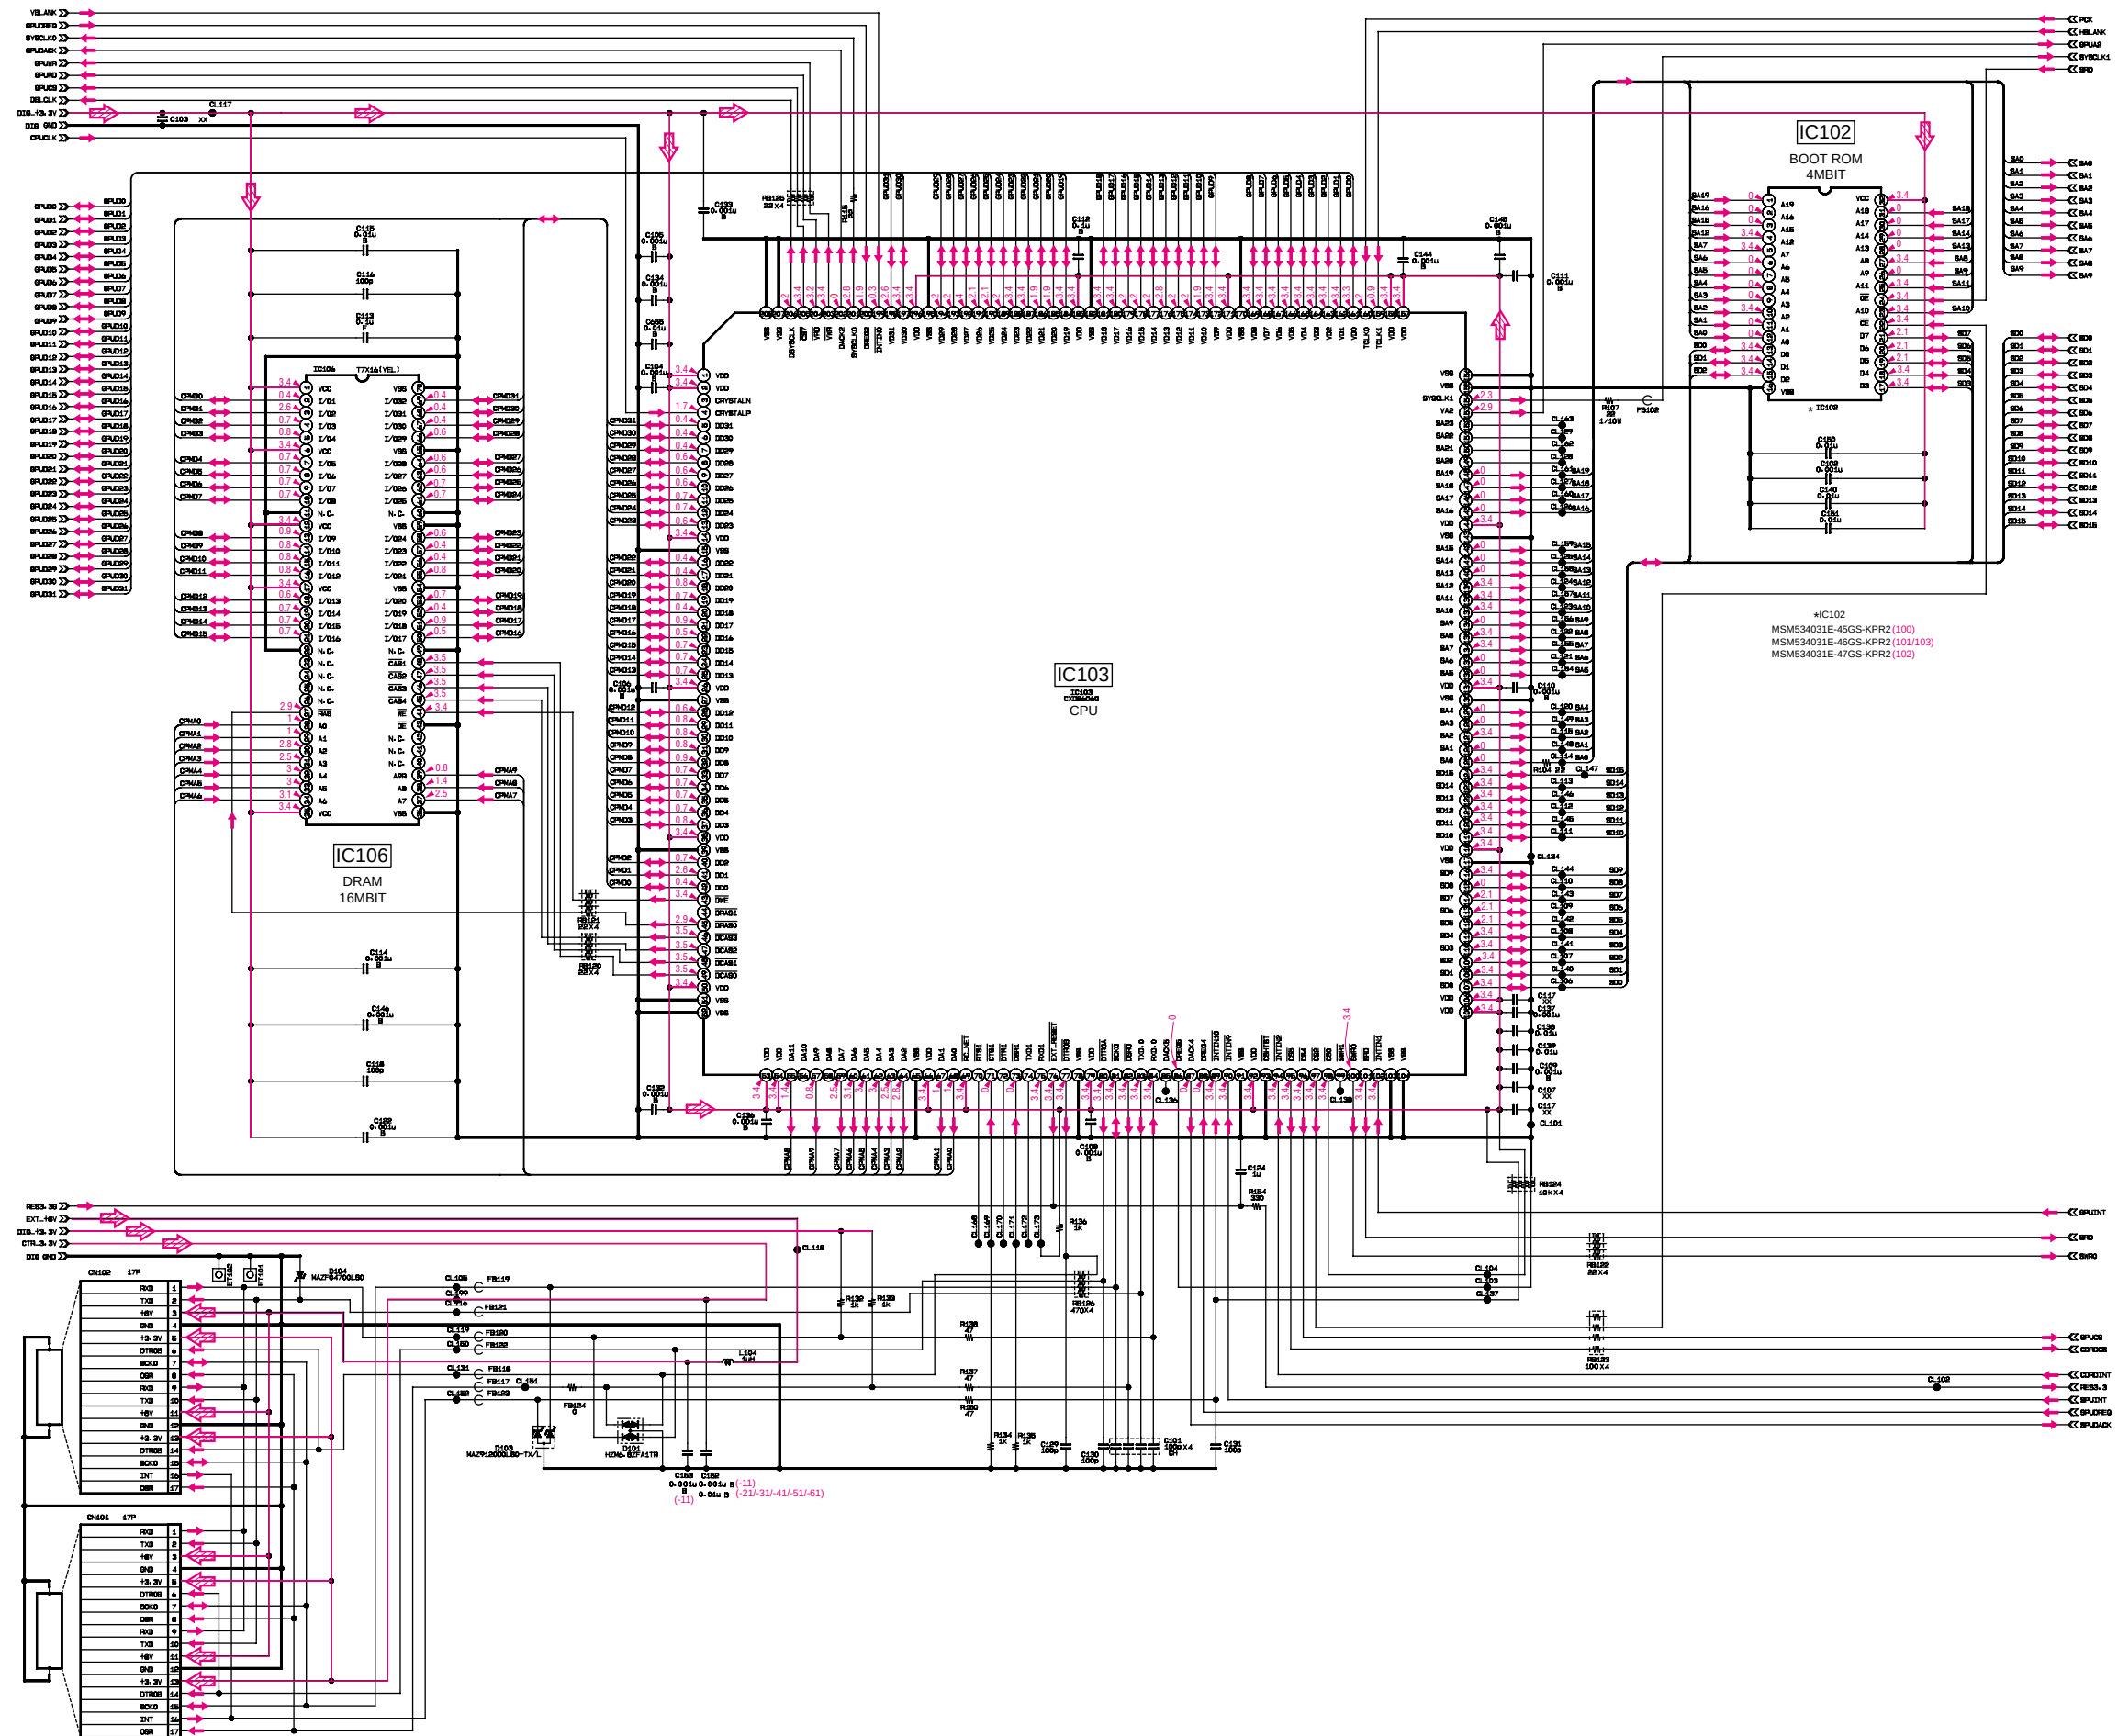


5-7. SCHEMATIC DIAGRAM (PM-41 (-71) BOARD (2/15))

PM-41 (-71) BOARD (2/15)

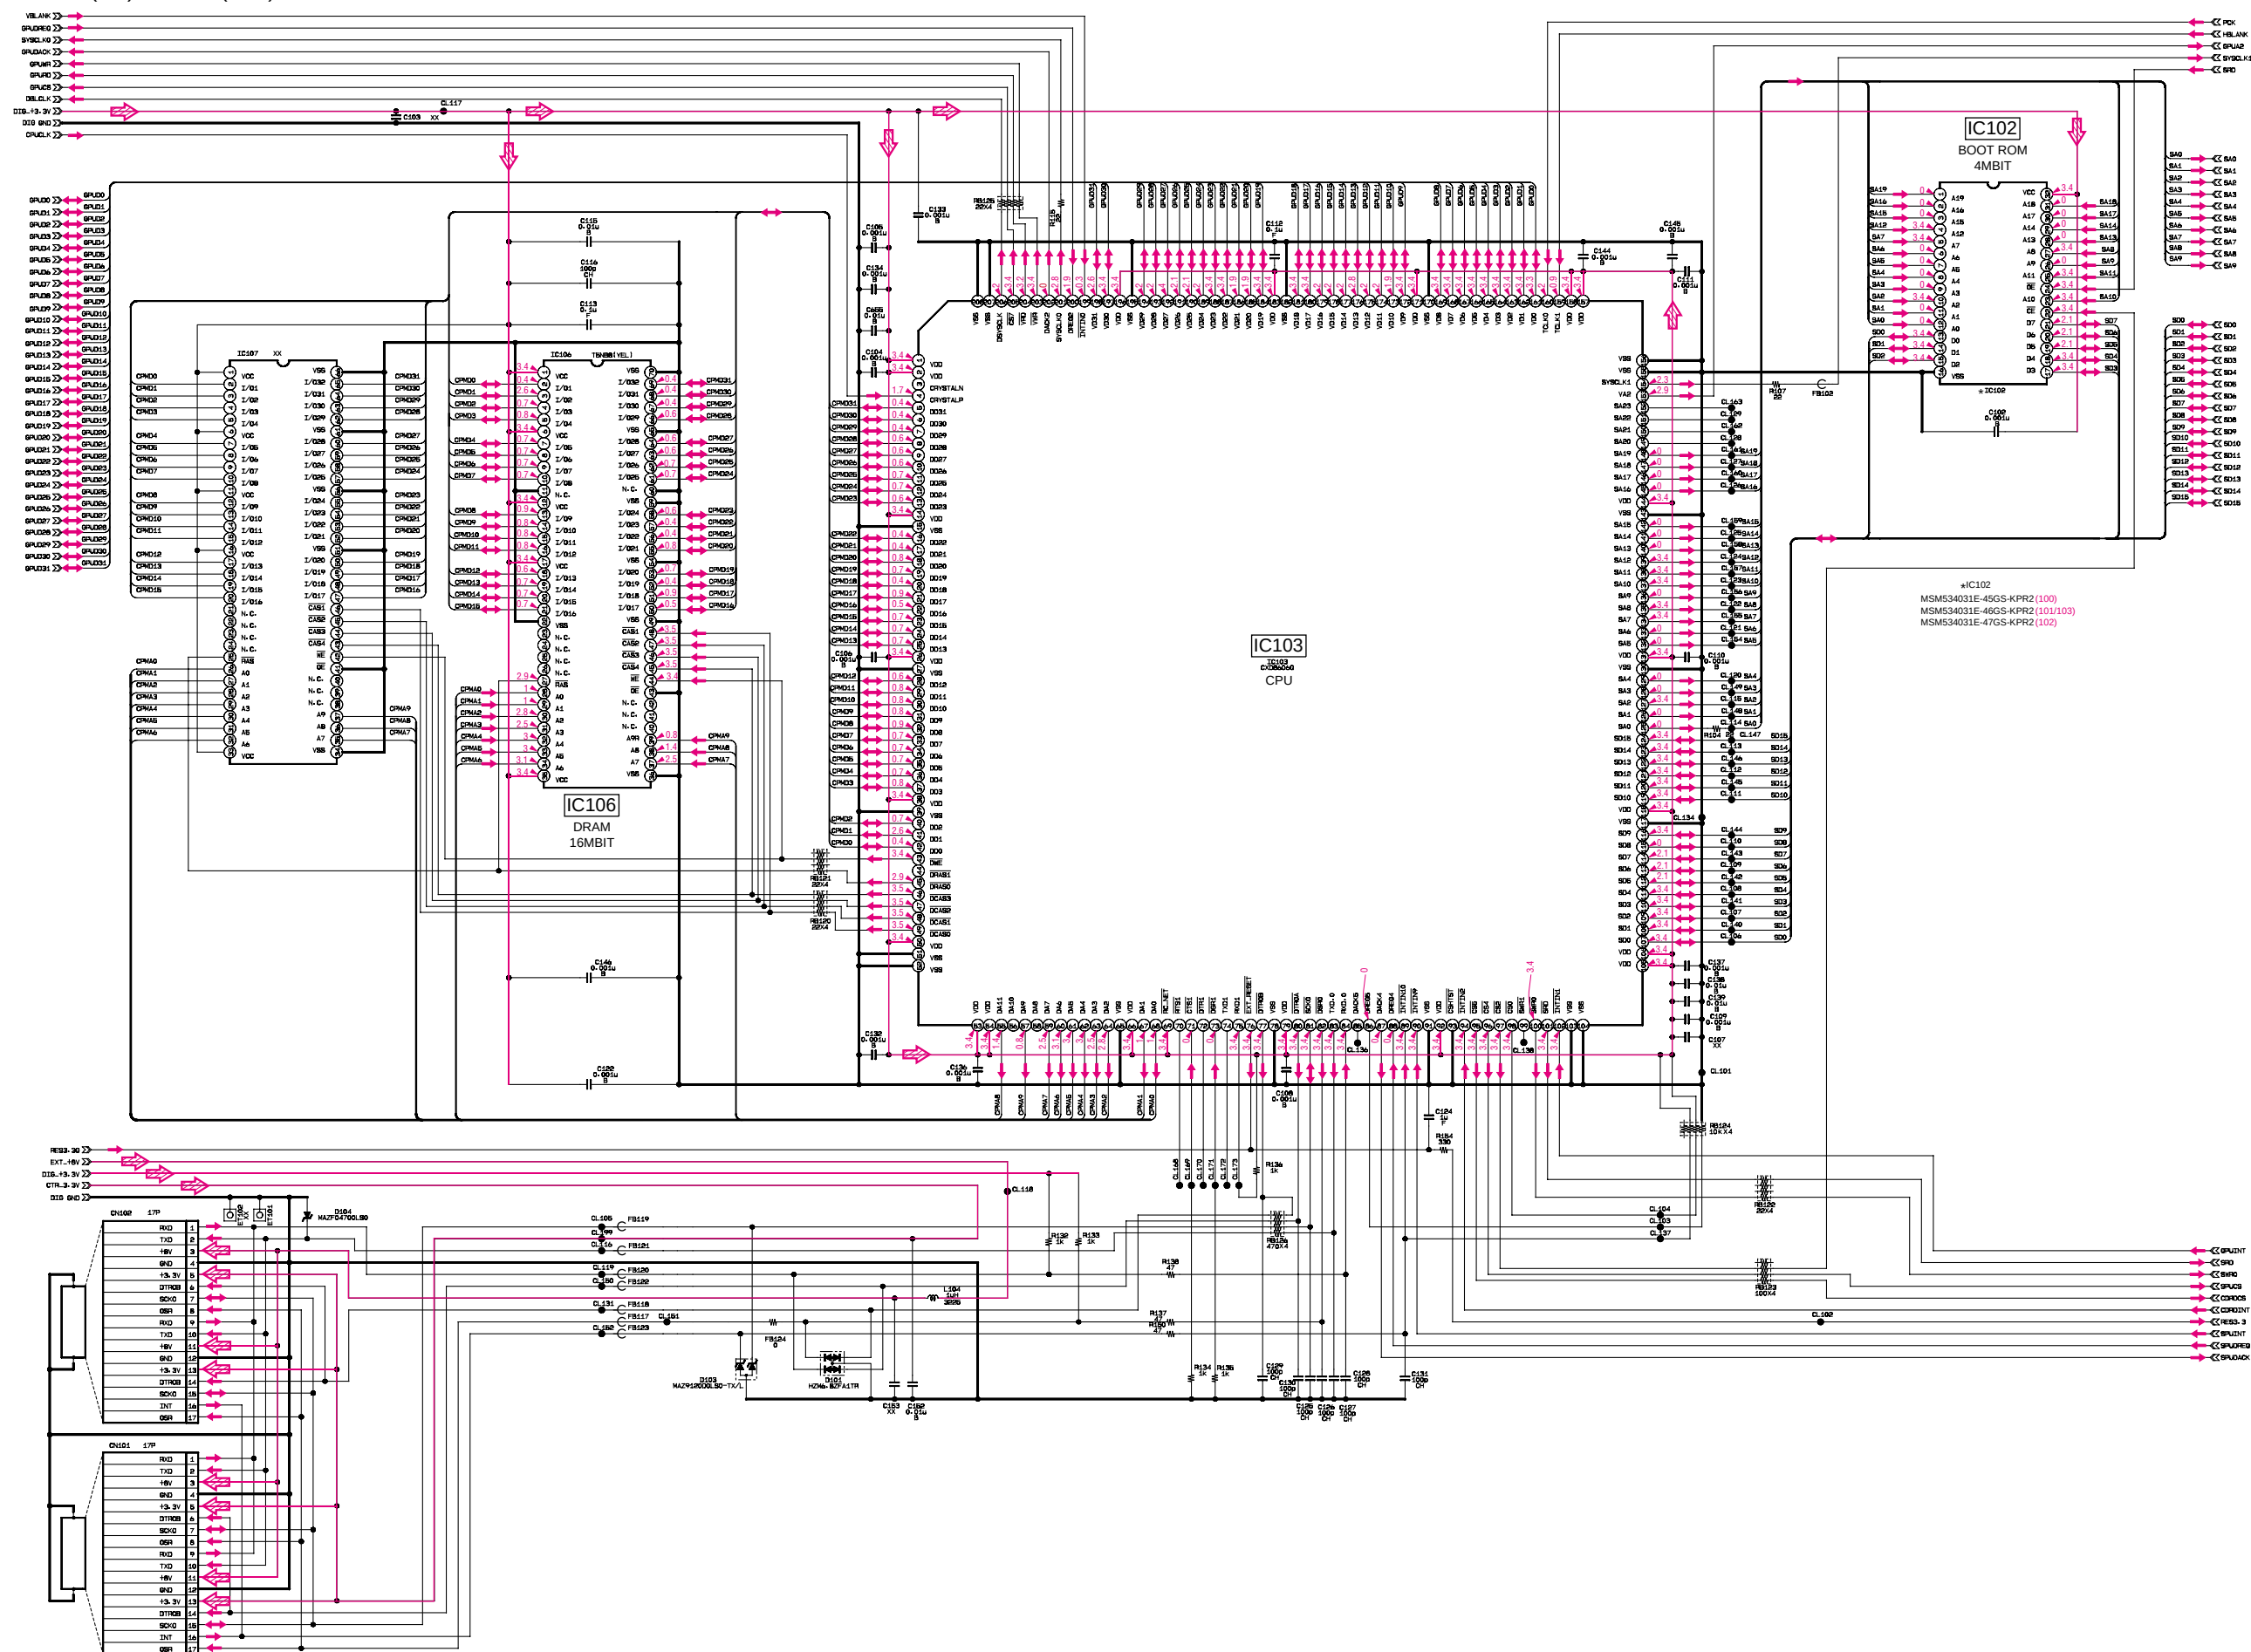


5-8. SCHEMATIC DIAGRAM (PM-41 (-11/-21/-31) BOARD (3/15))

PM-41 (-11/-21/-31) BOARD (3/15)

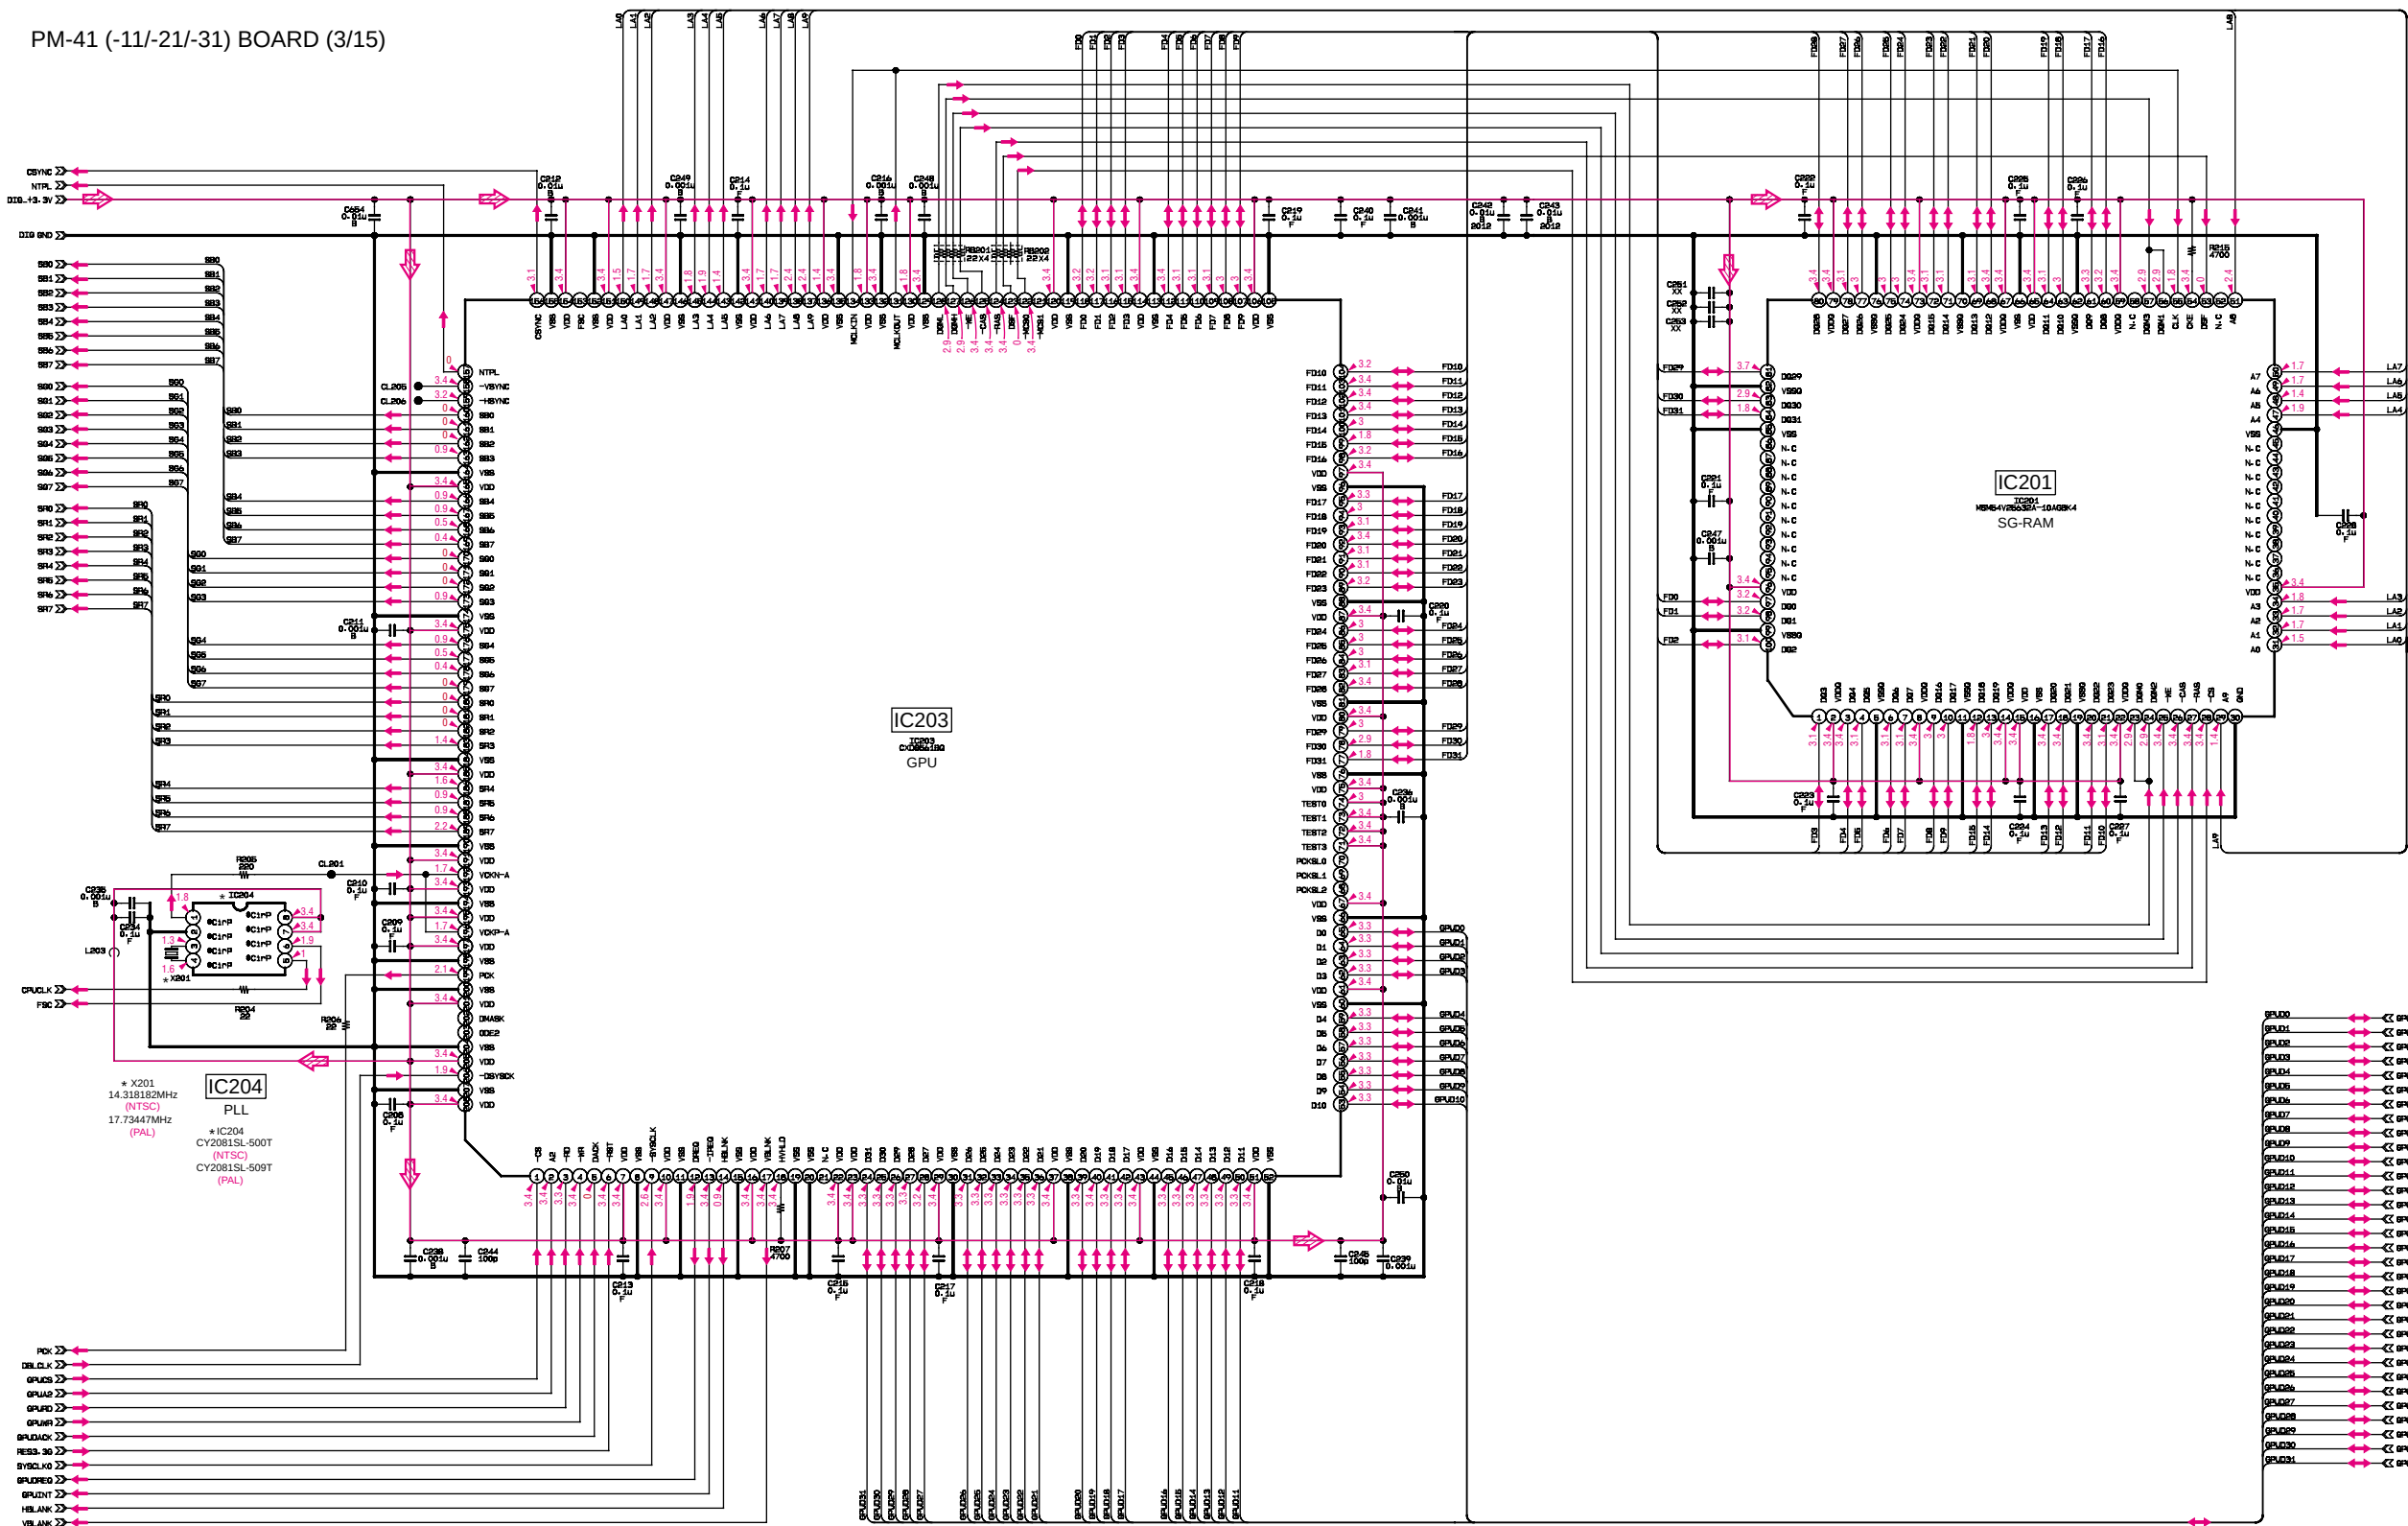


5-9. SCHEMATIC DIAGRAM (PM-41 (-41/-51) BOARD (4/15))

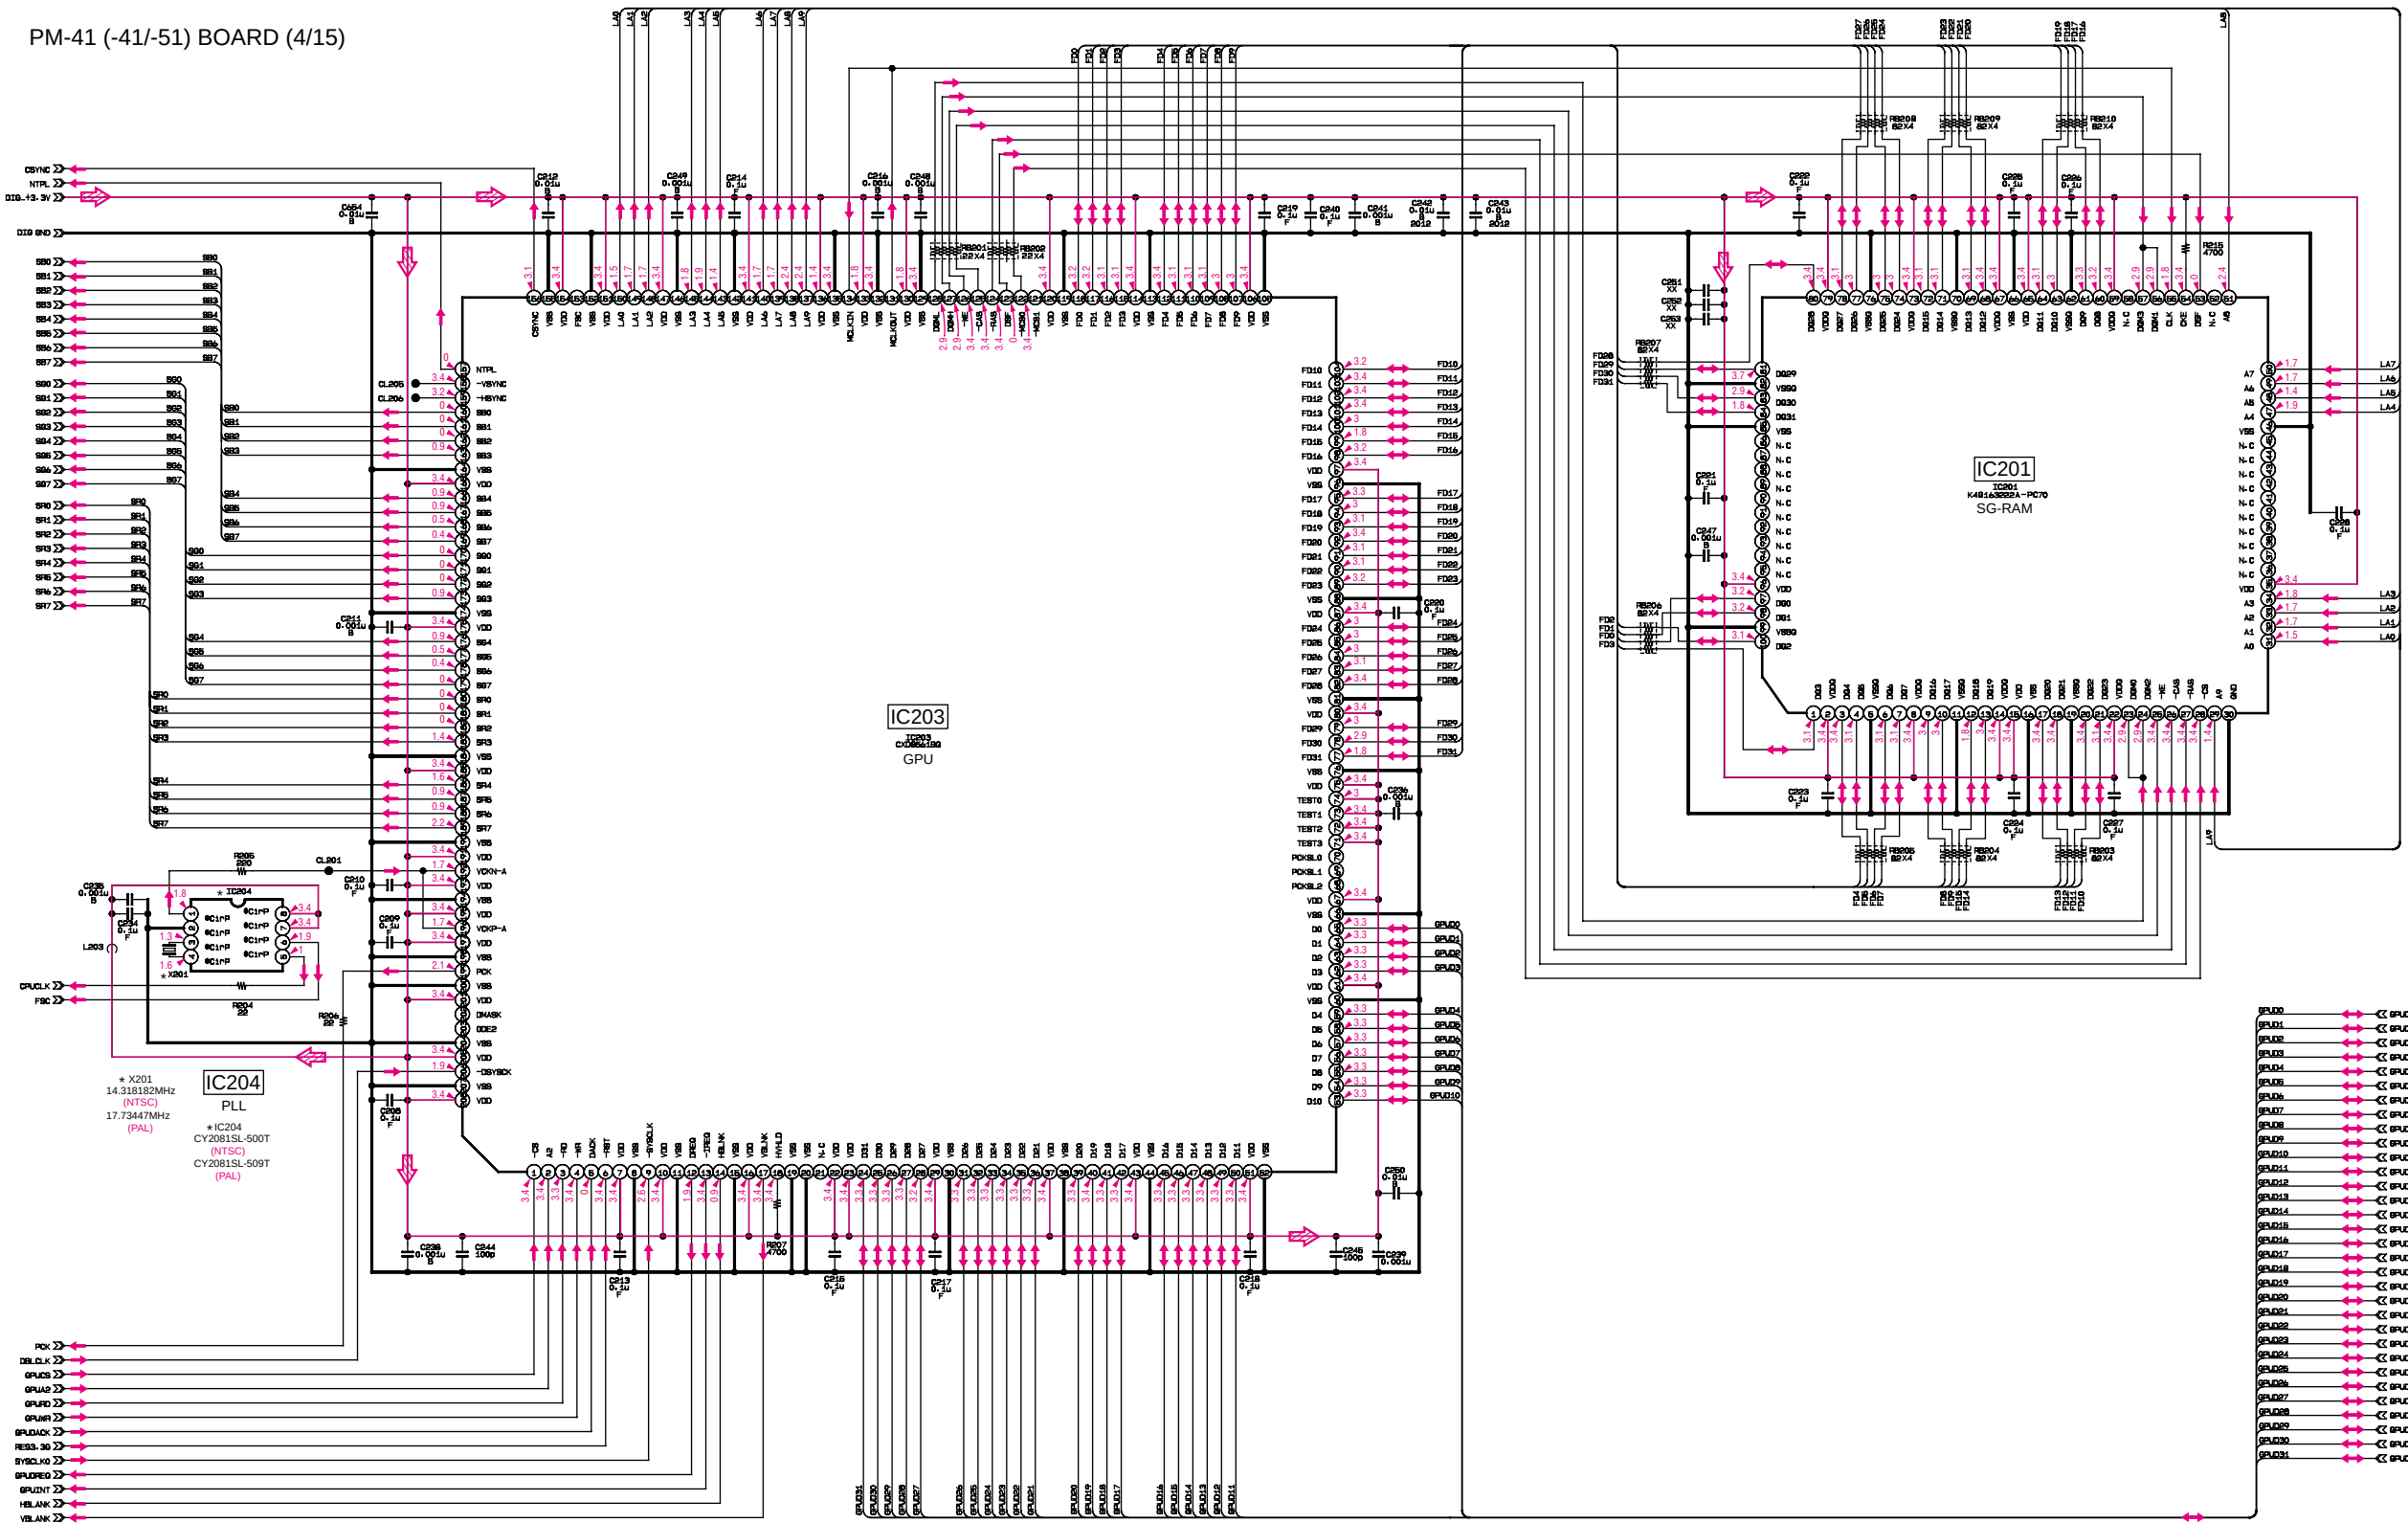


5-10. SCHEMATIC DIAGRAM (PM-41 (-61) BOARD (5/15))

PM-41 (-61) BOARD (5/15)

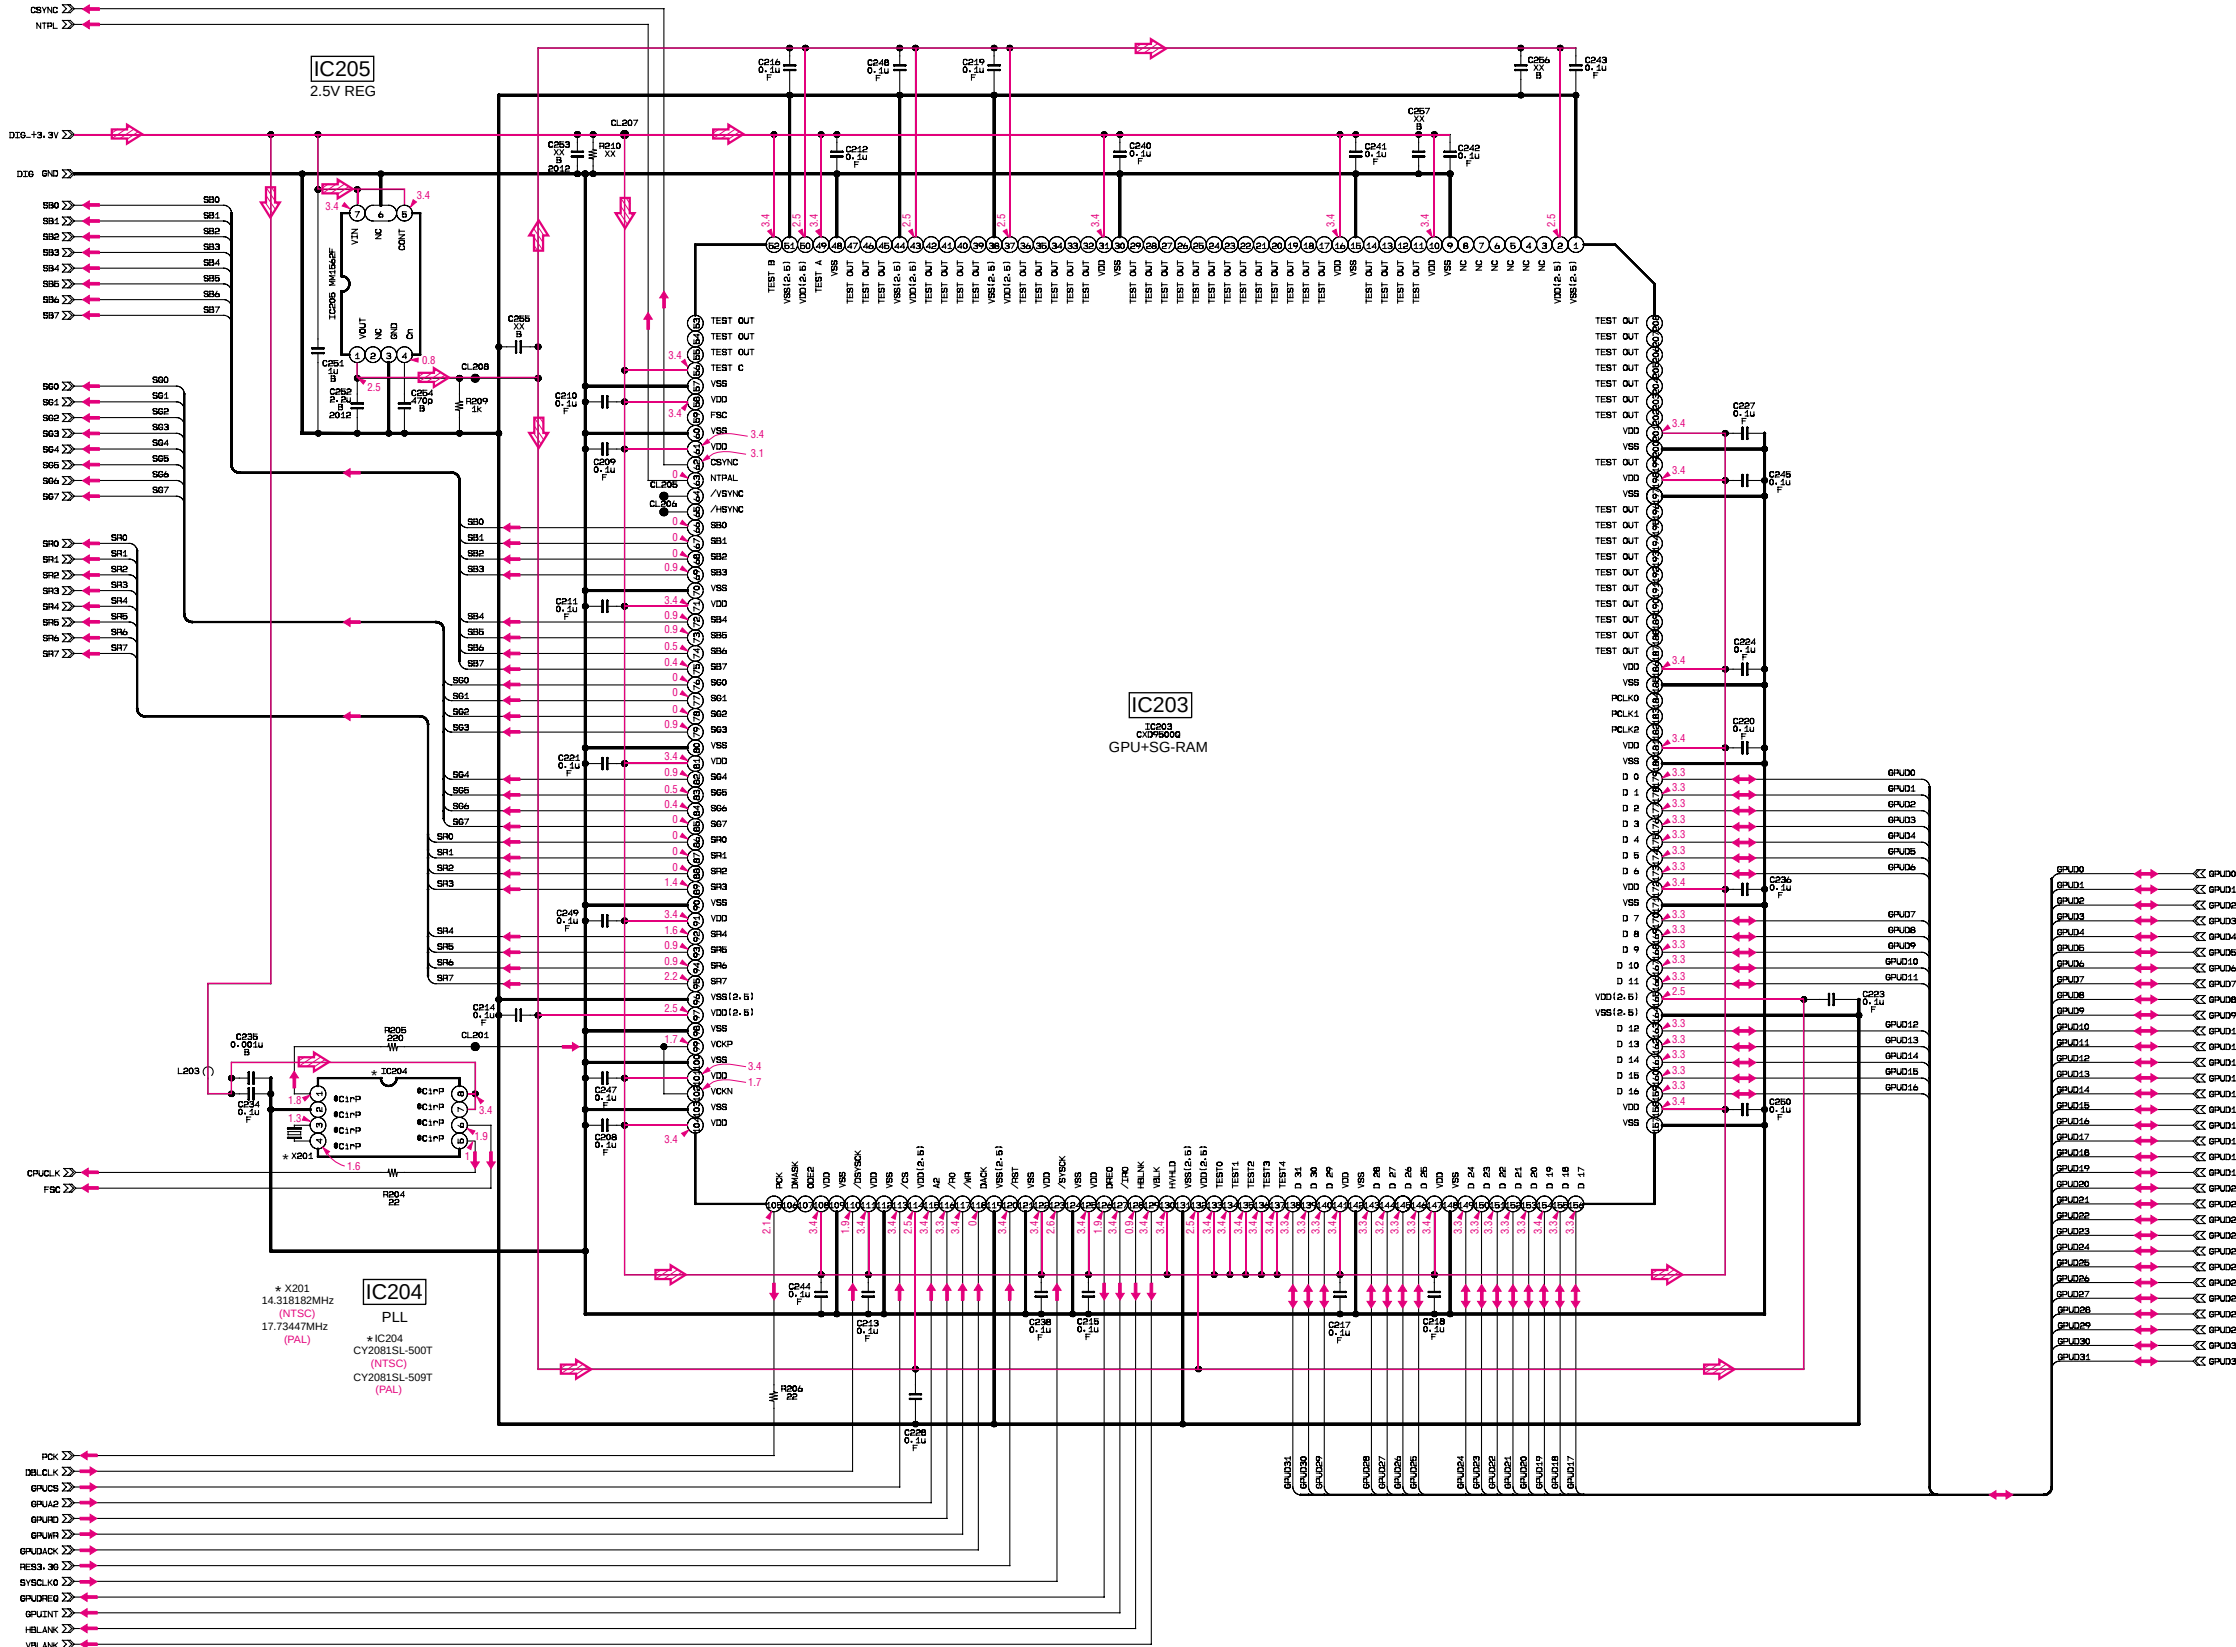



5-11. SCHEMATIC DIAGRAM (PM-41 (-71) BOARD (6/15))

PM-41 (-71) BOARD (6/15)

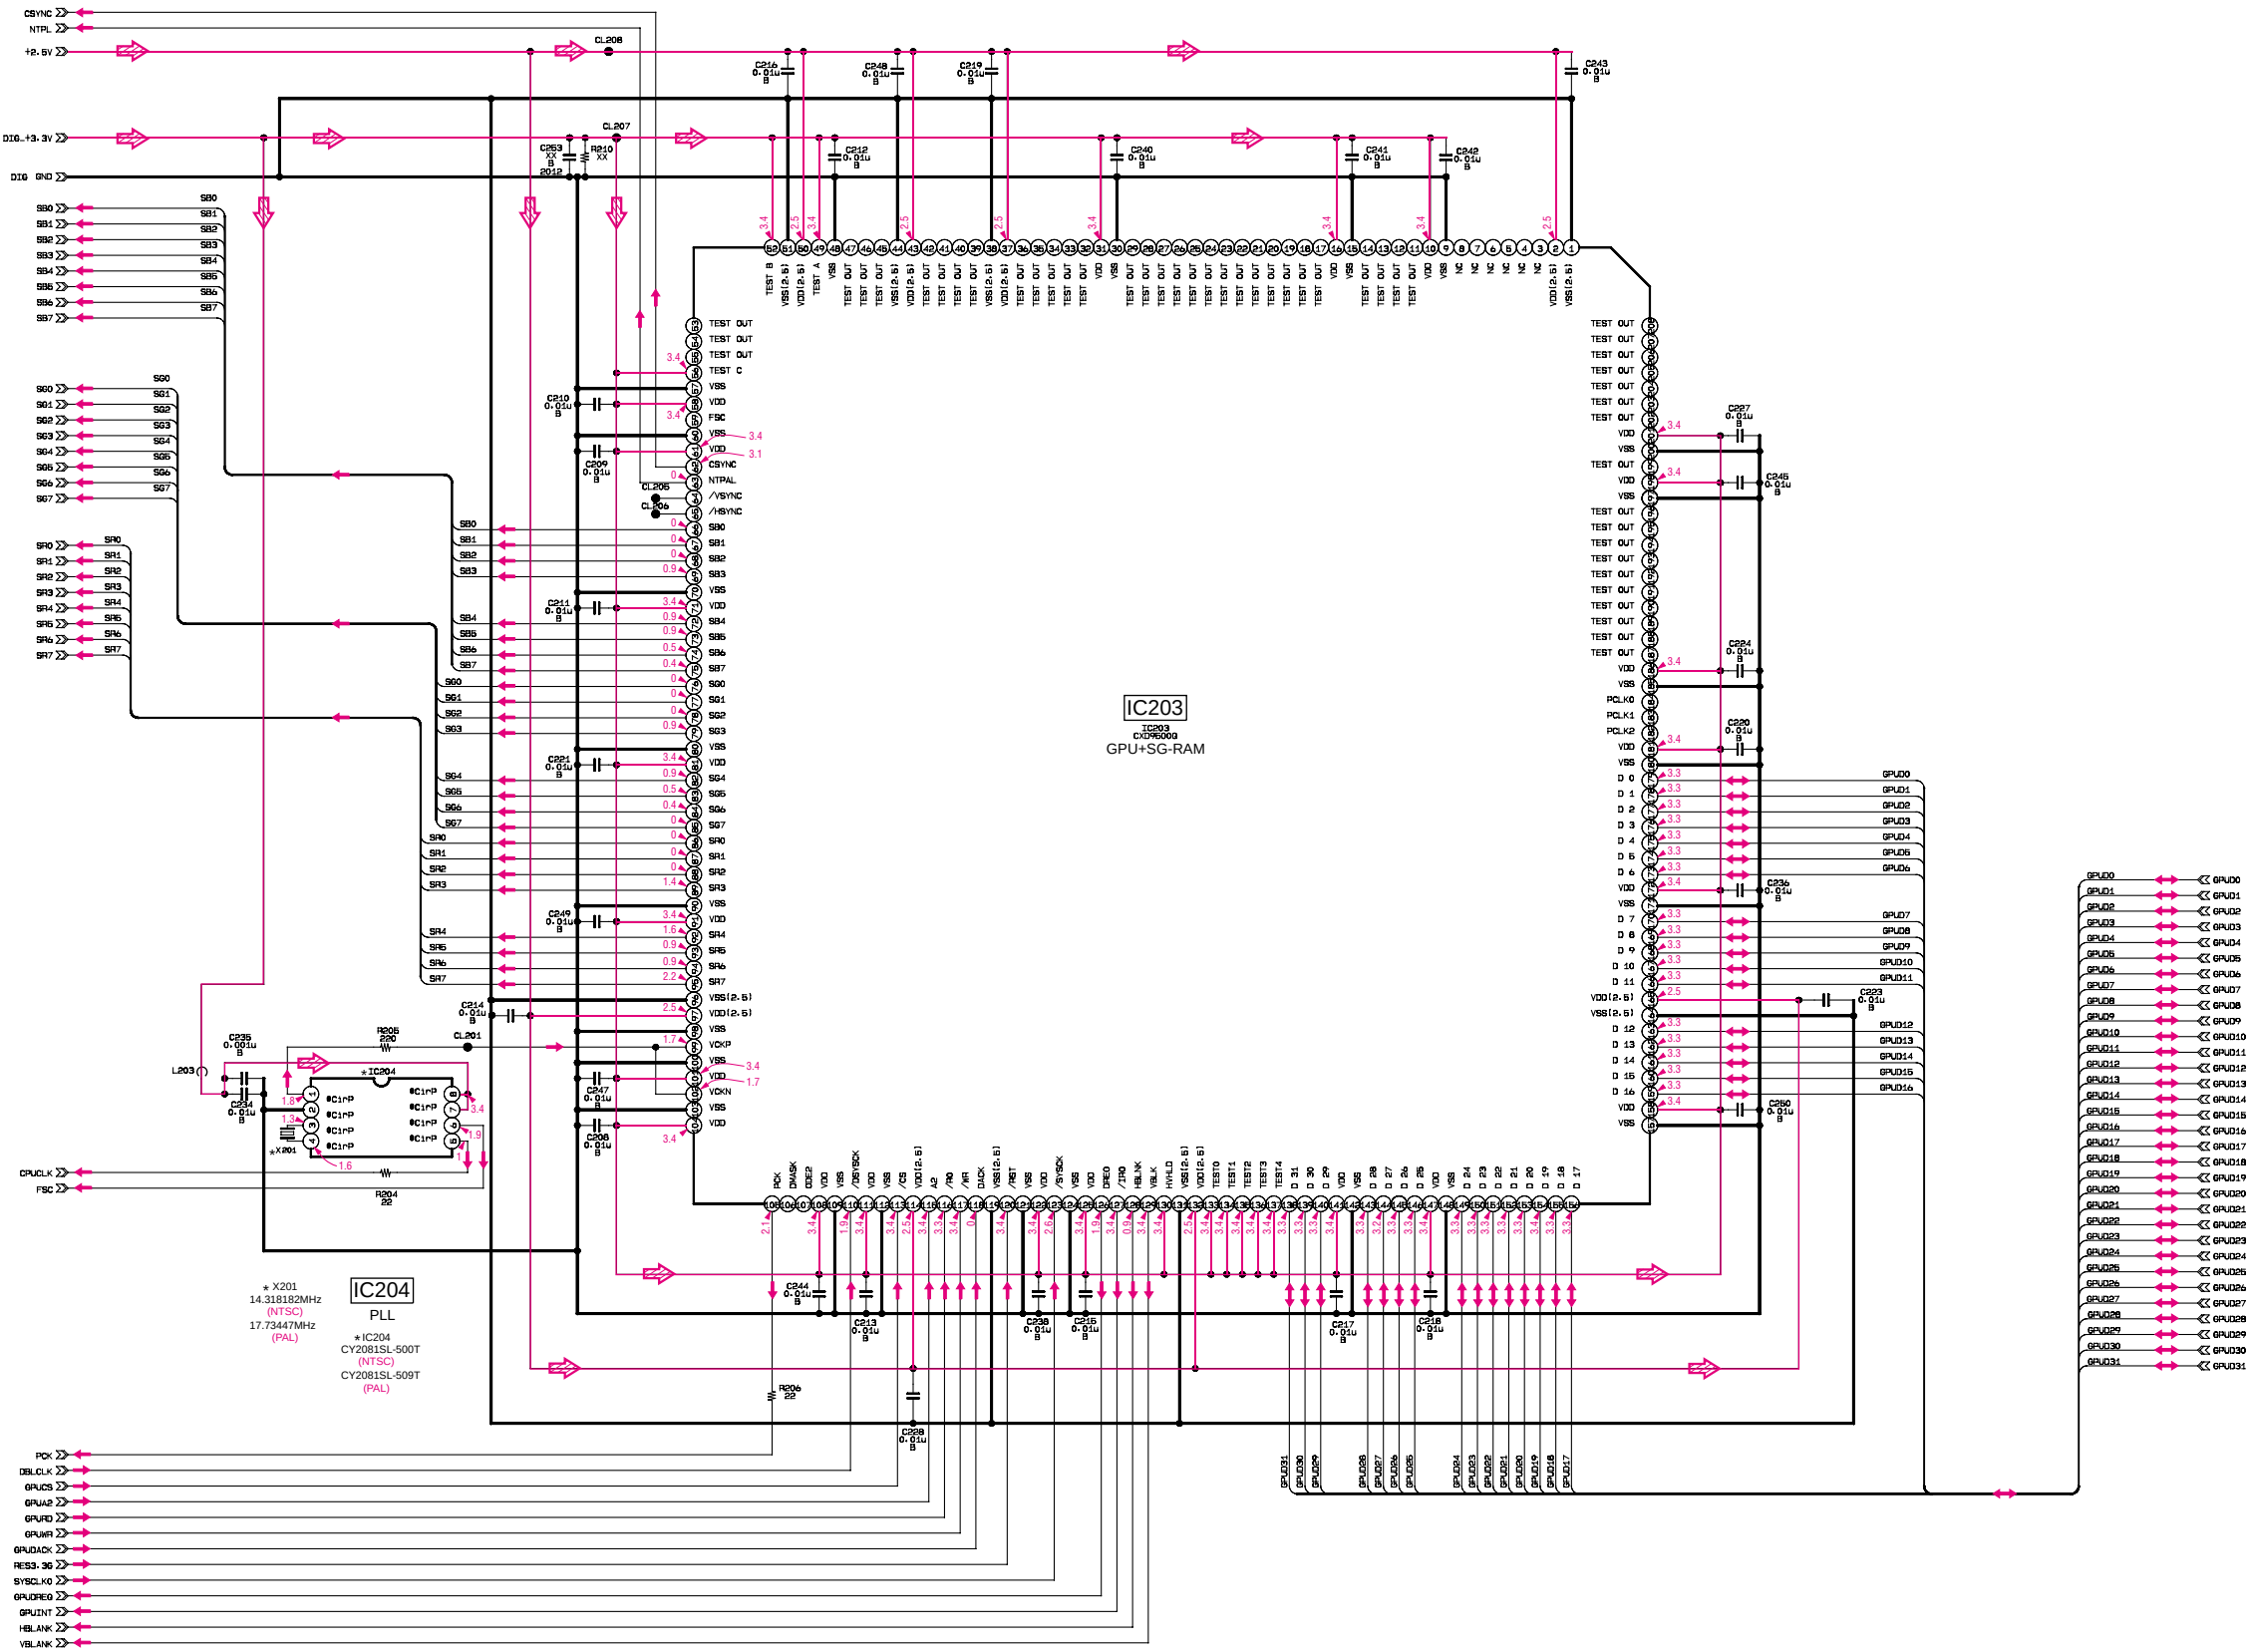


5-12. SCHEMATIC DIAGRAM (PM-41 (-11/-21/-31/-41/-51/-61) BOARD (7/15))

PM-41 (-11/-21/-31/-41/-51/-61) BOARD (7/15)

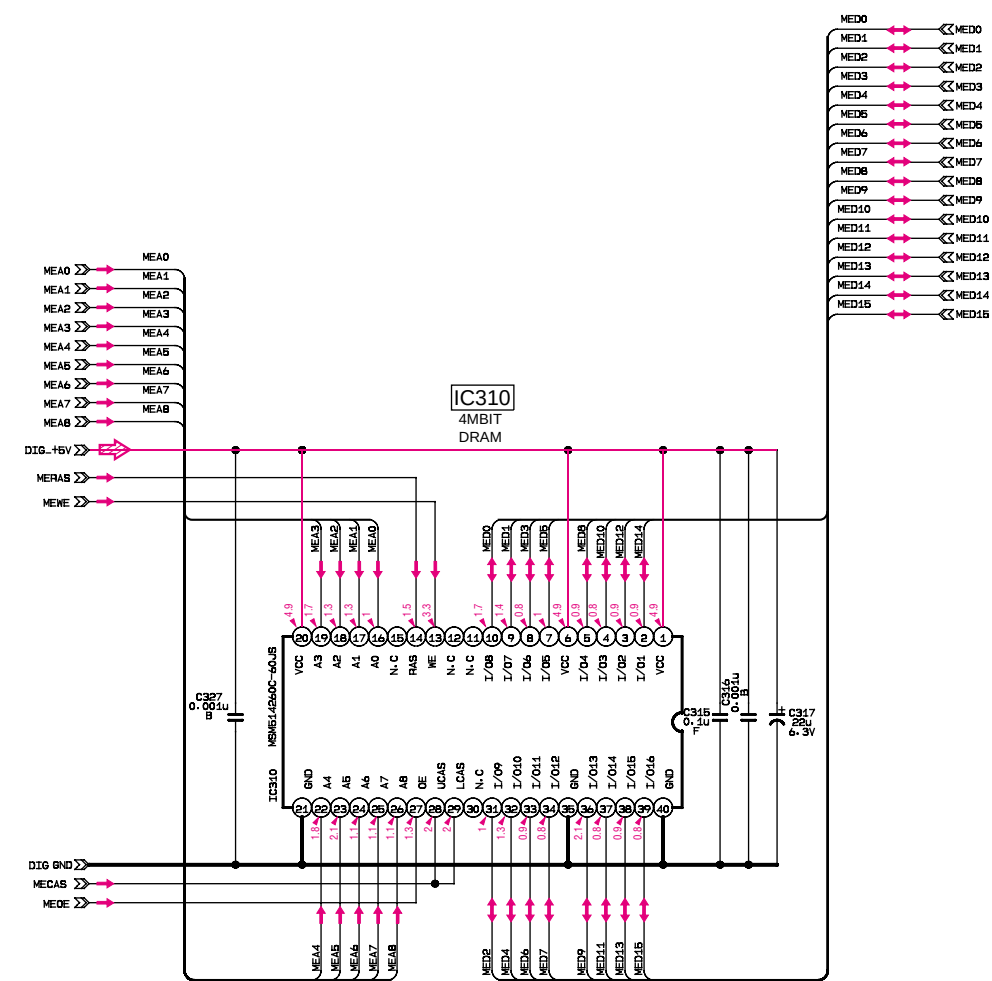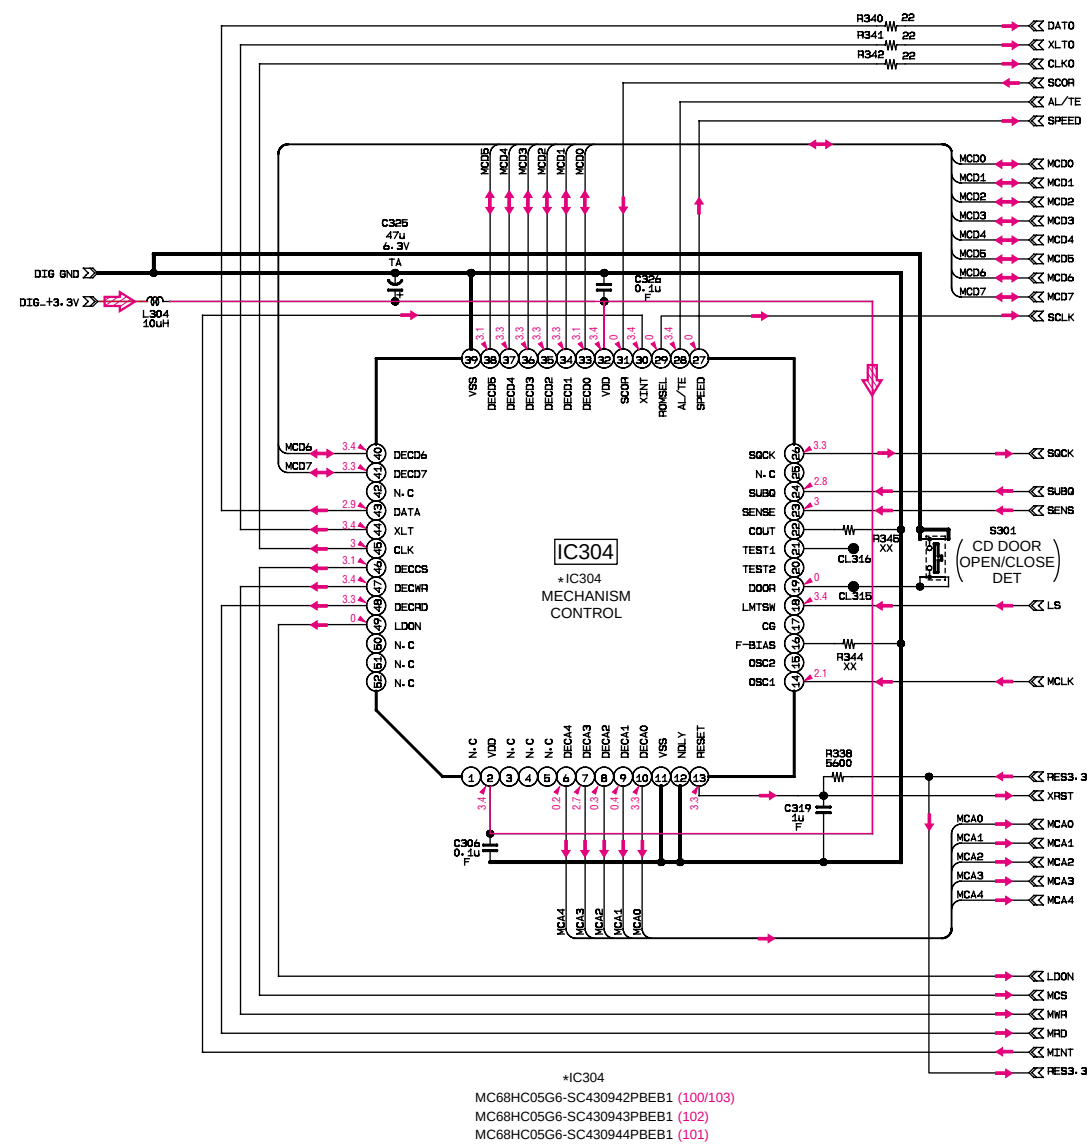


5-13. SCHEMATIC DIAGRAM (PM-41 (-71) BOARD (8/15))

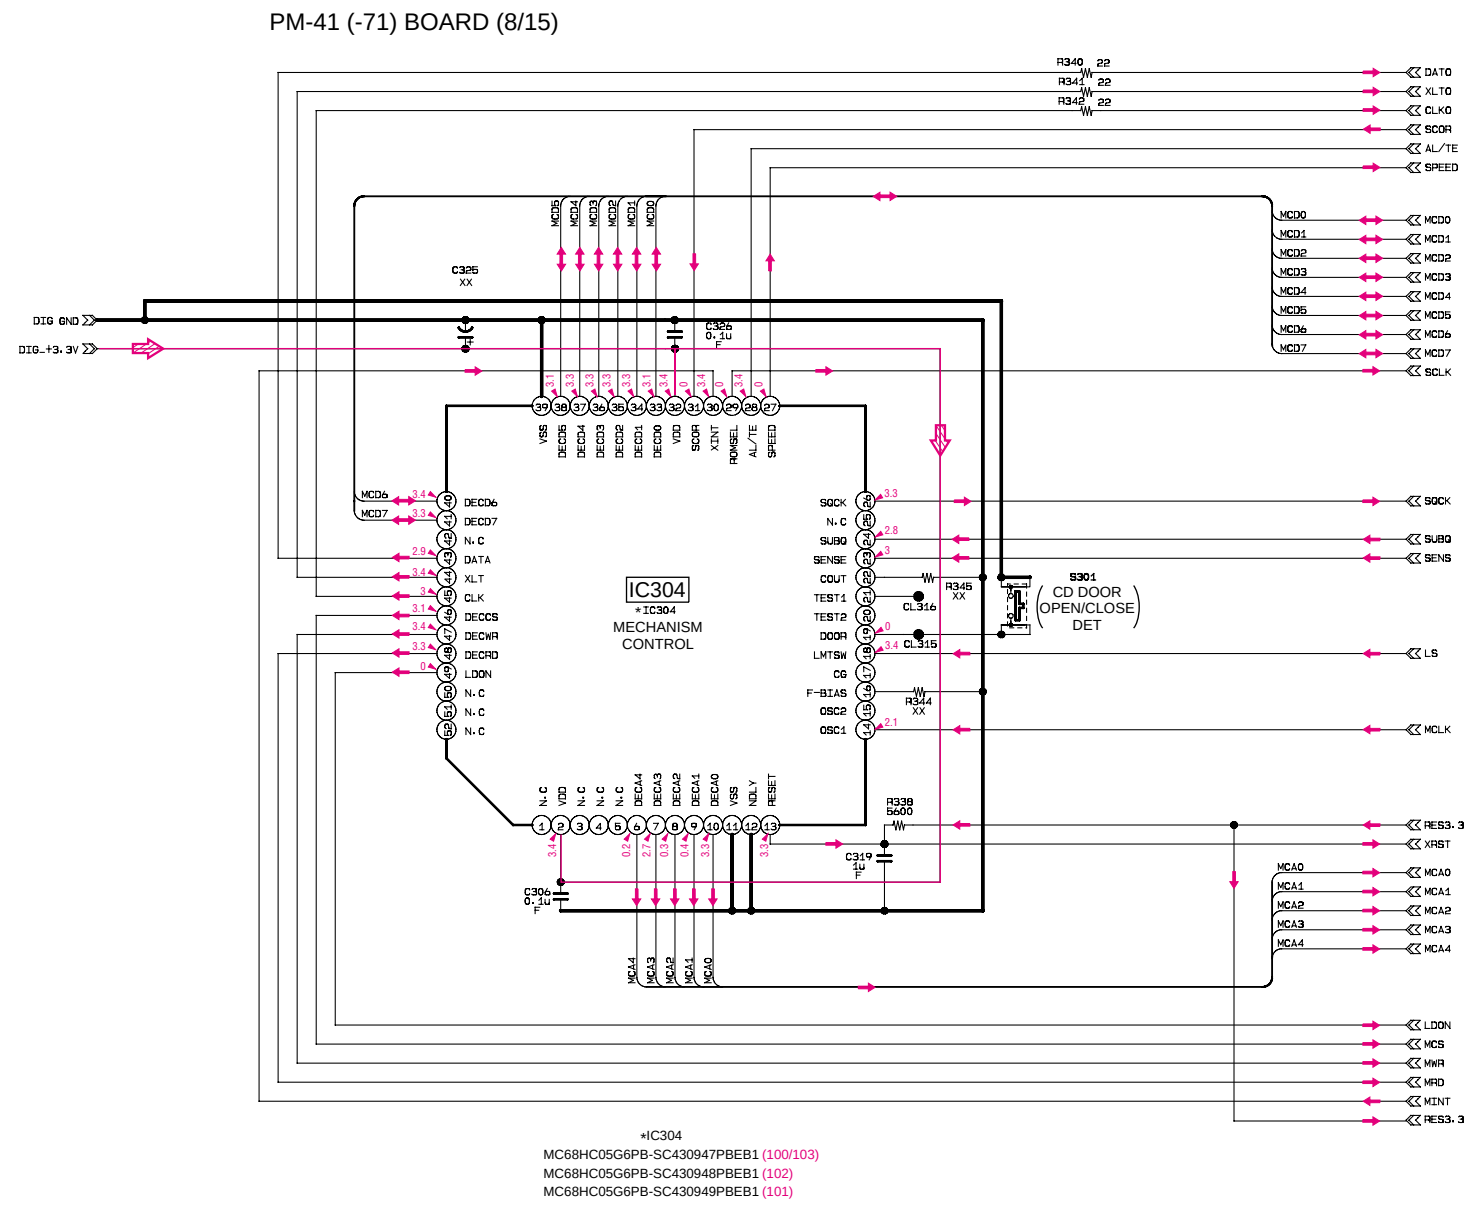


5-14. SCHEMATIC DIAGRAM (PM-41 (-11/-21/-31/-41/-51/-61) BOARD (9/15))

PM-41 (-11/-21/-31/-41/-51/-61) BOARD (9/15)

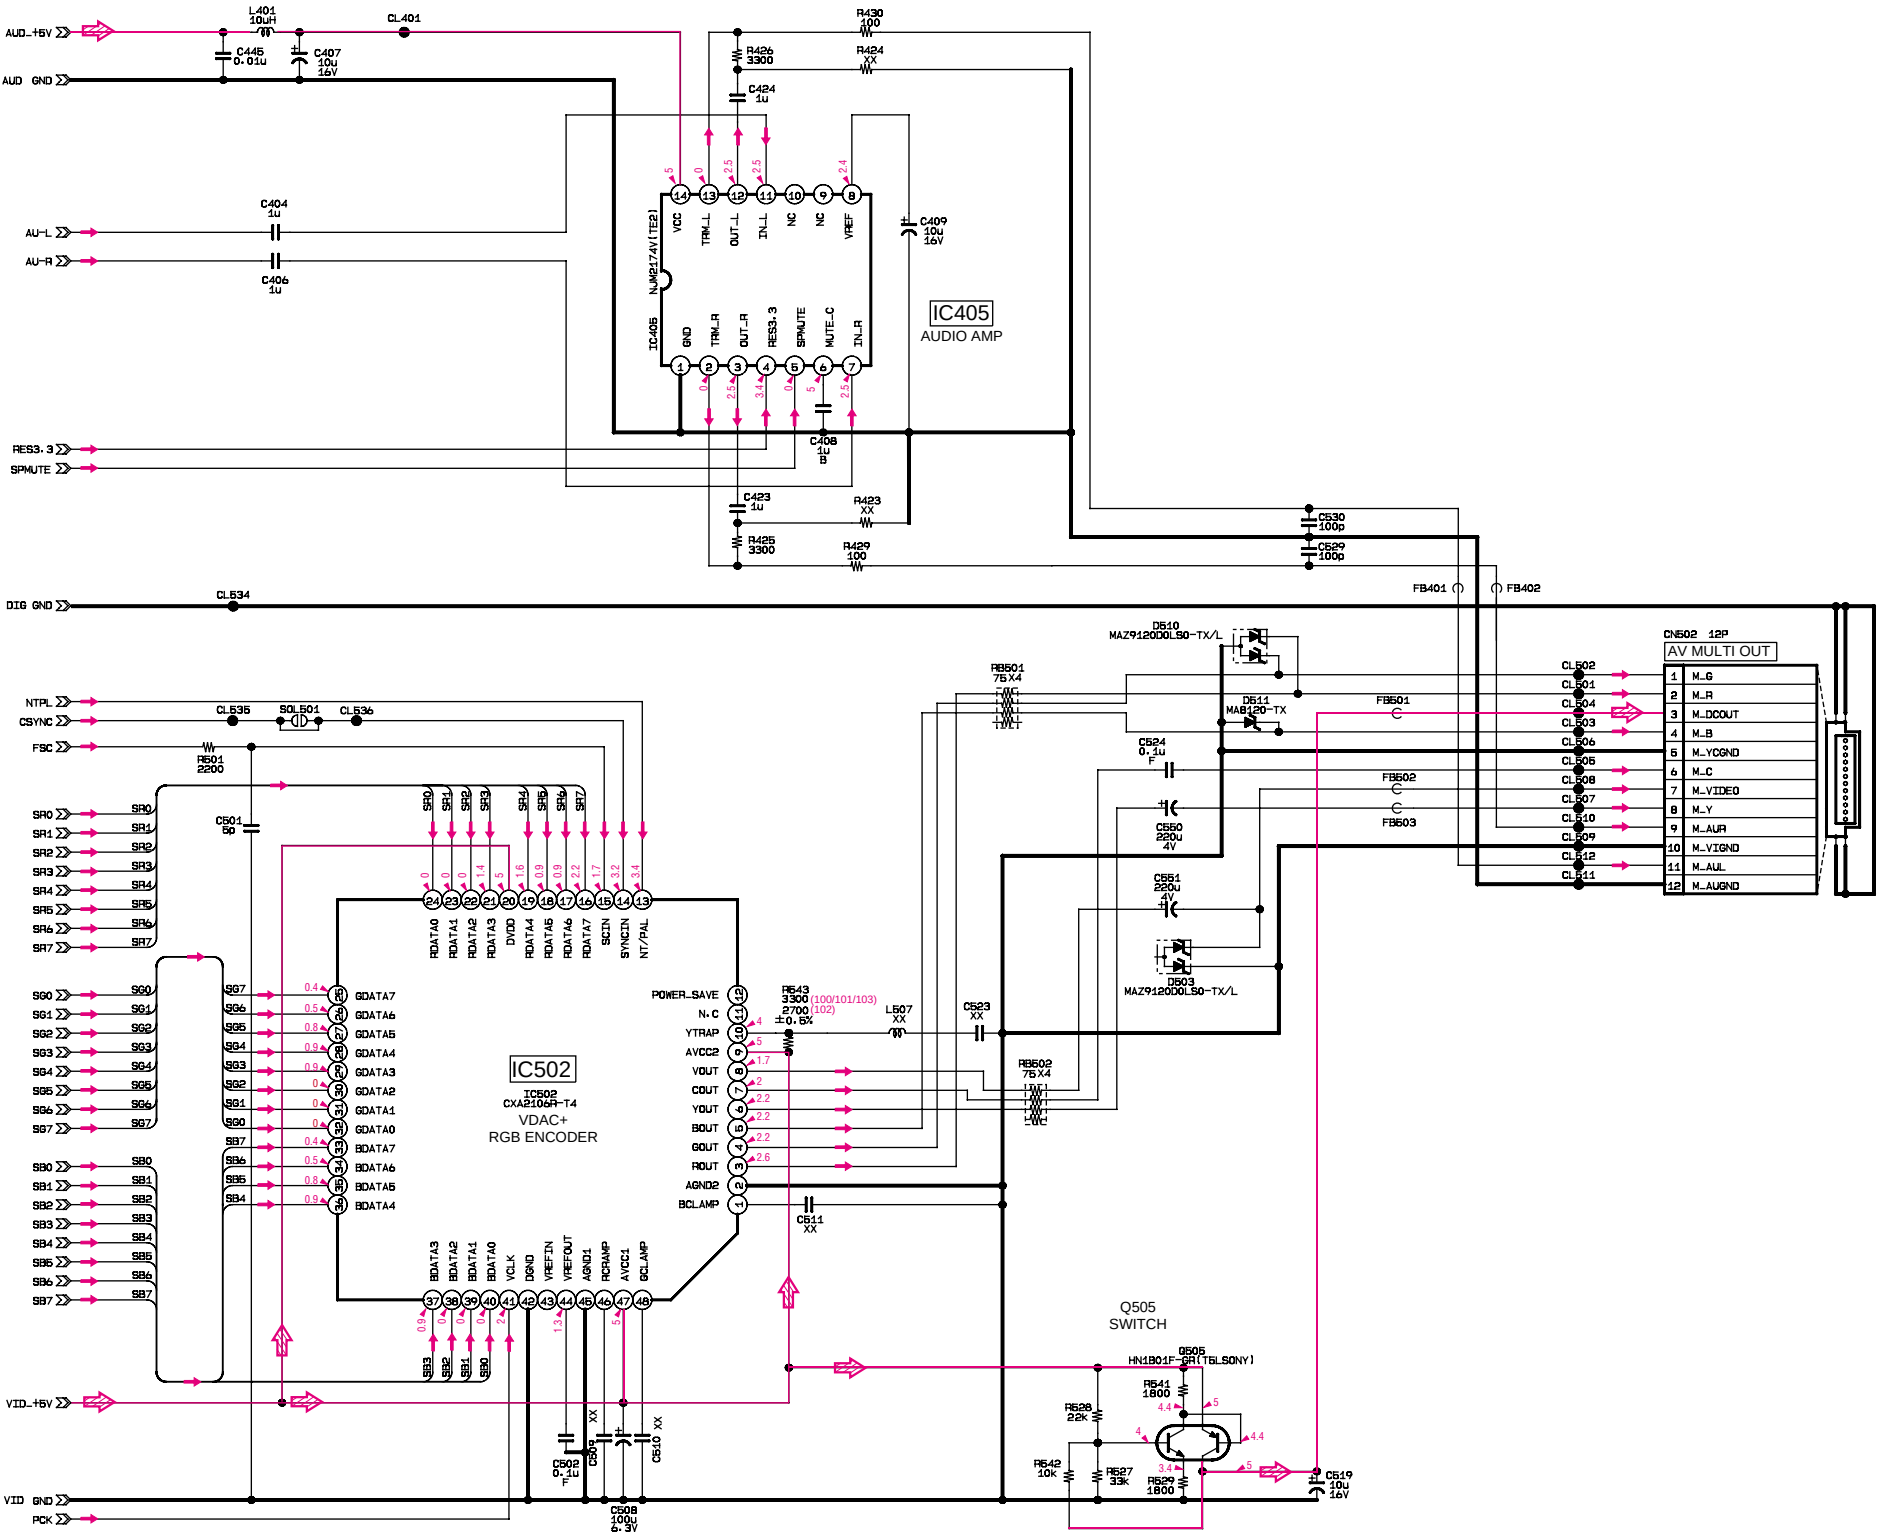


5-15. SCHEMATIC DIAGRAM (PM-41 (-71) BOARD (10/15))

PM-41 (-71) BOARD (10/15)

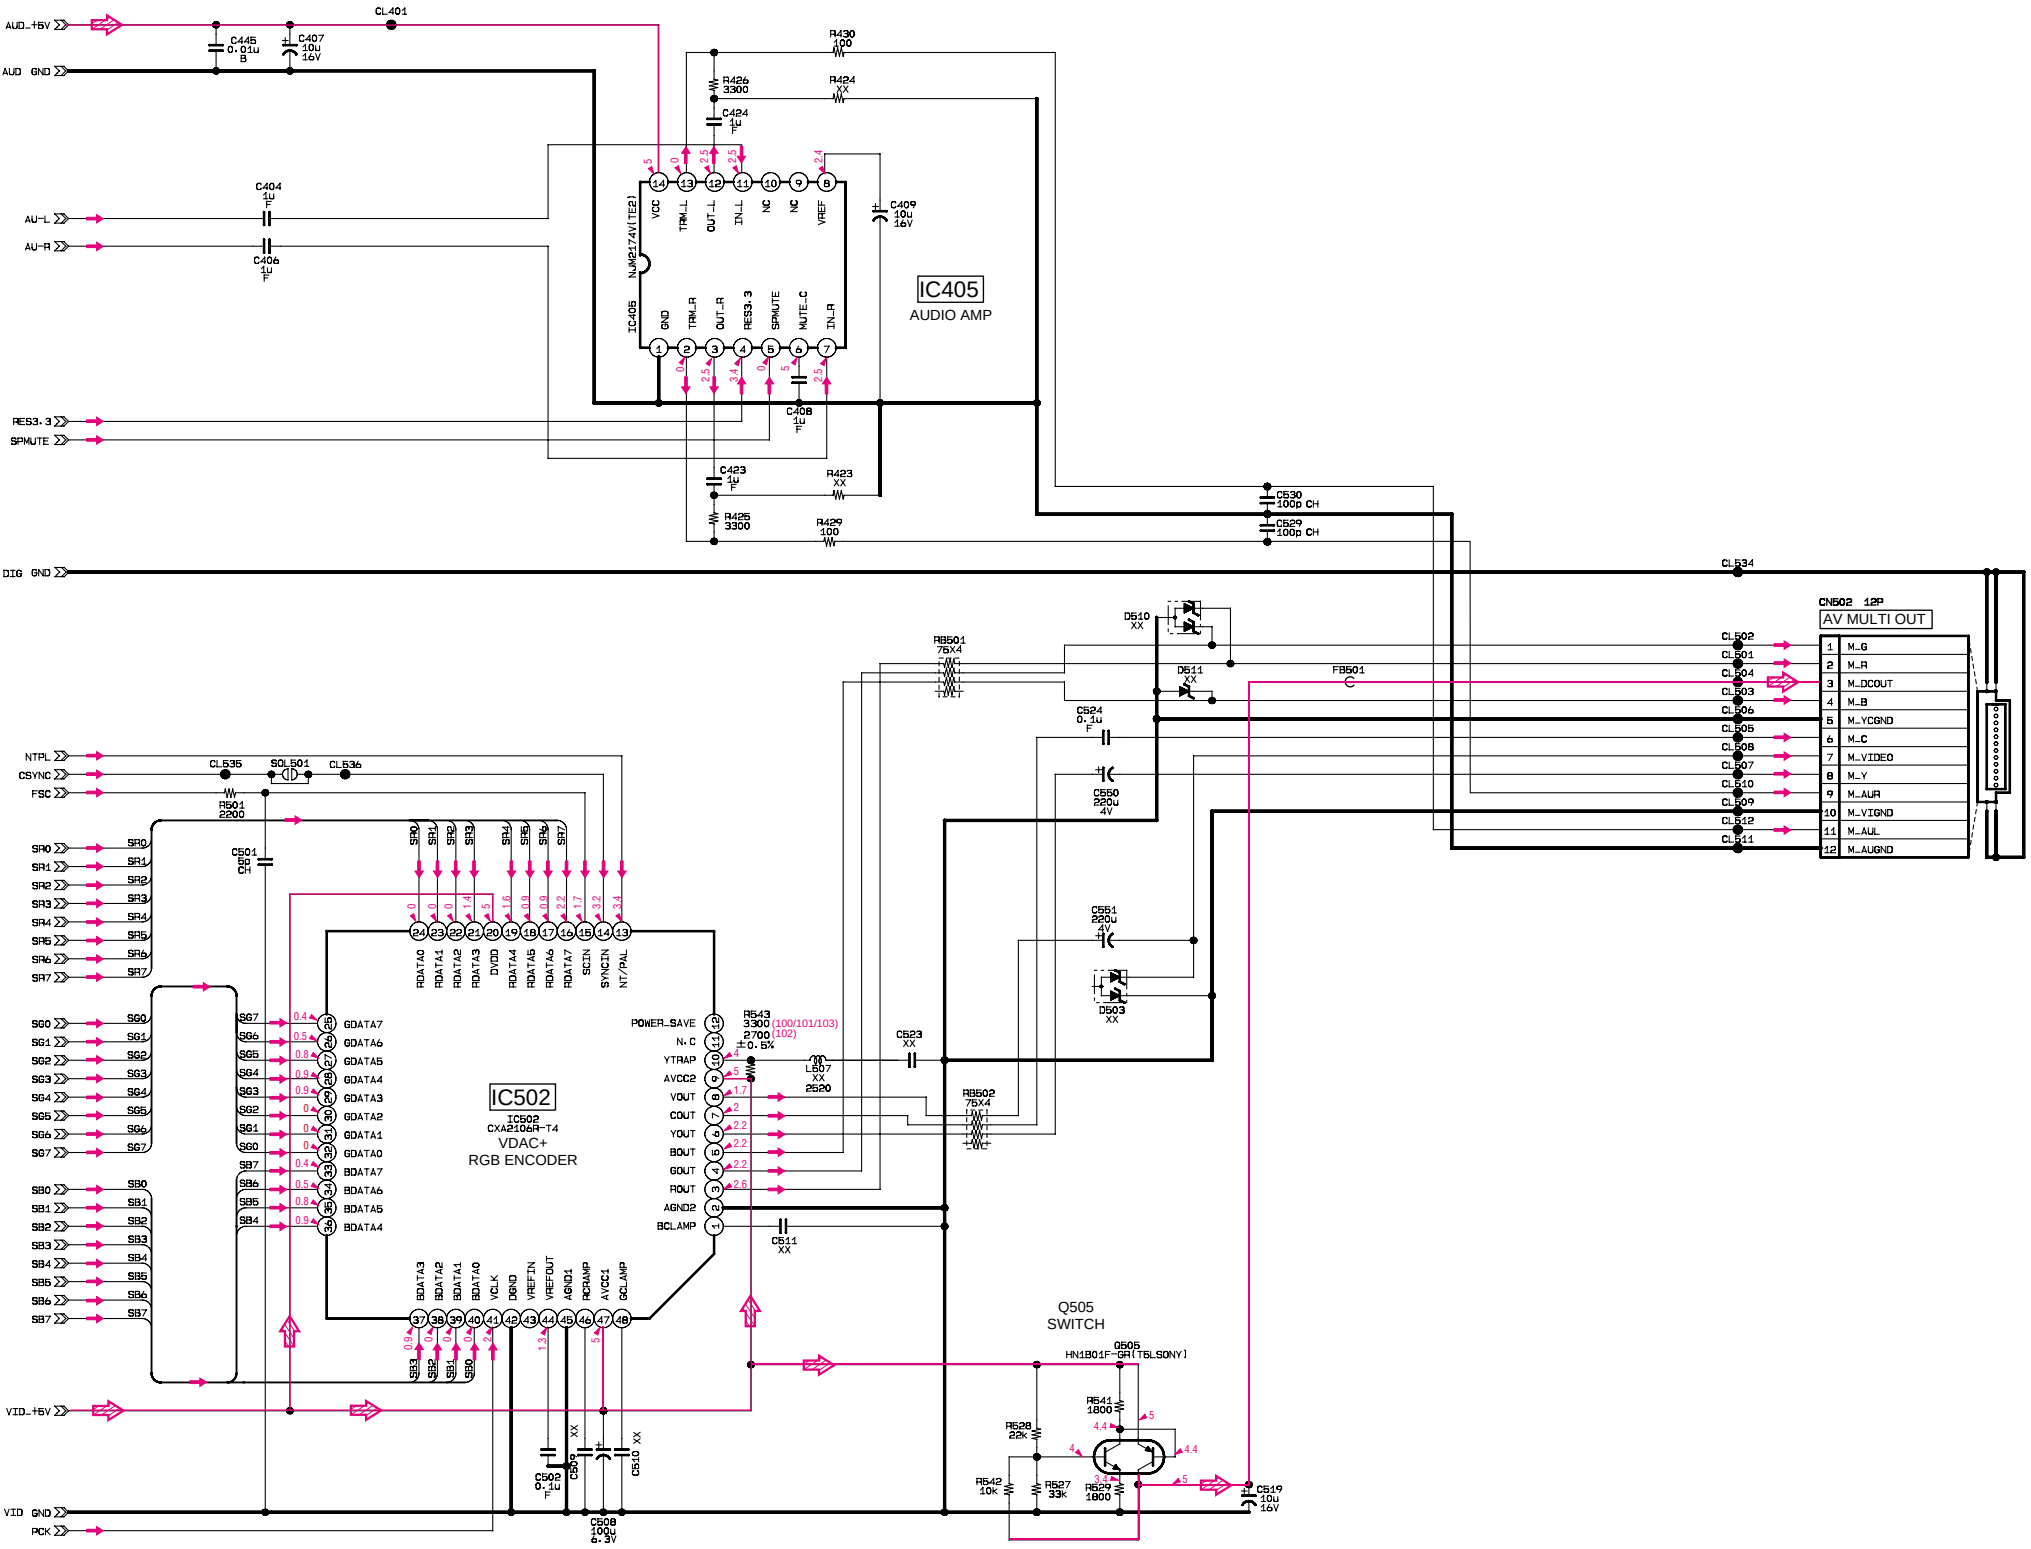


5-16. SCHEMATIC DIAGRAM (PM-41 (-11) BOARD (11/15))

PM-41 (-11) BOARD (11/15)

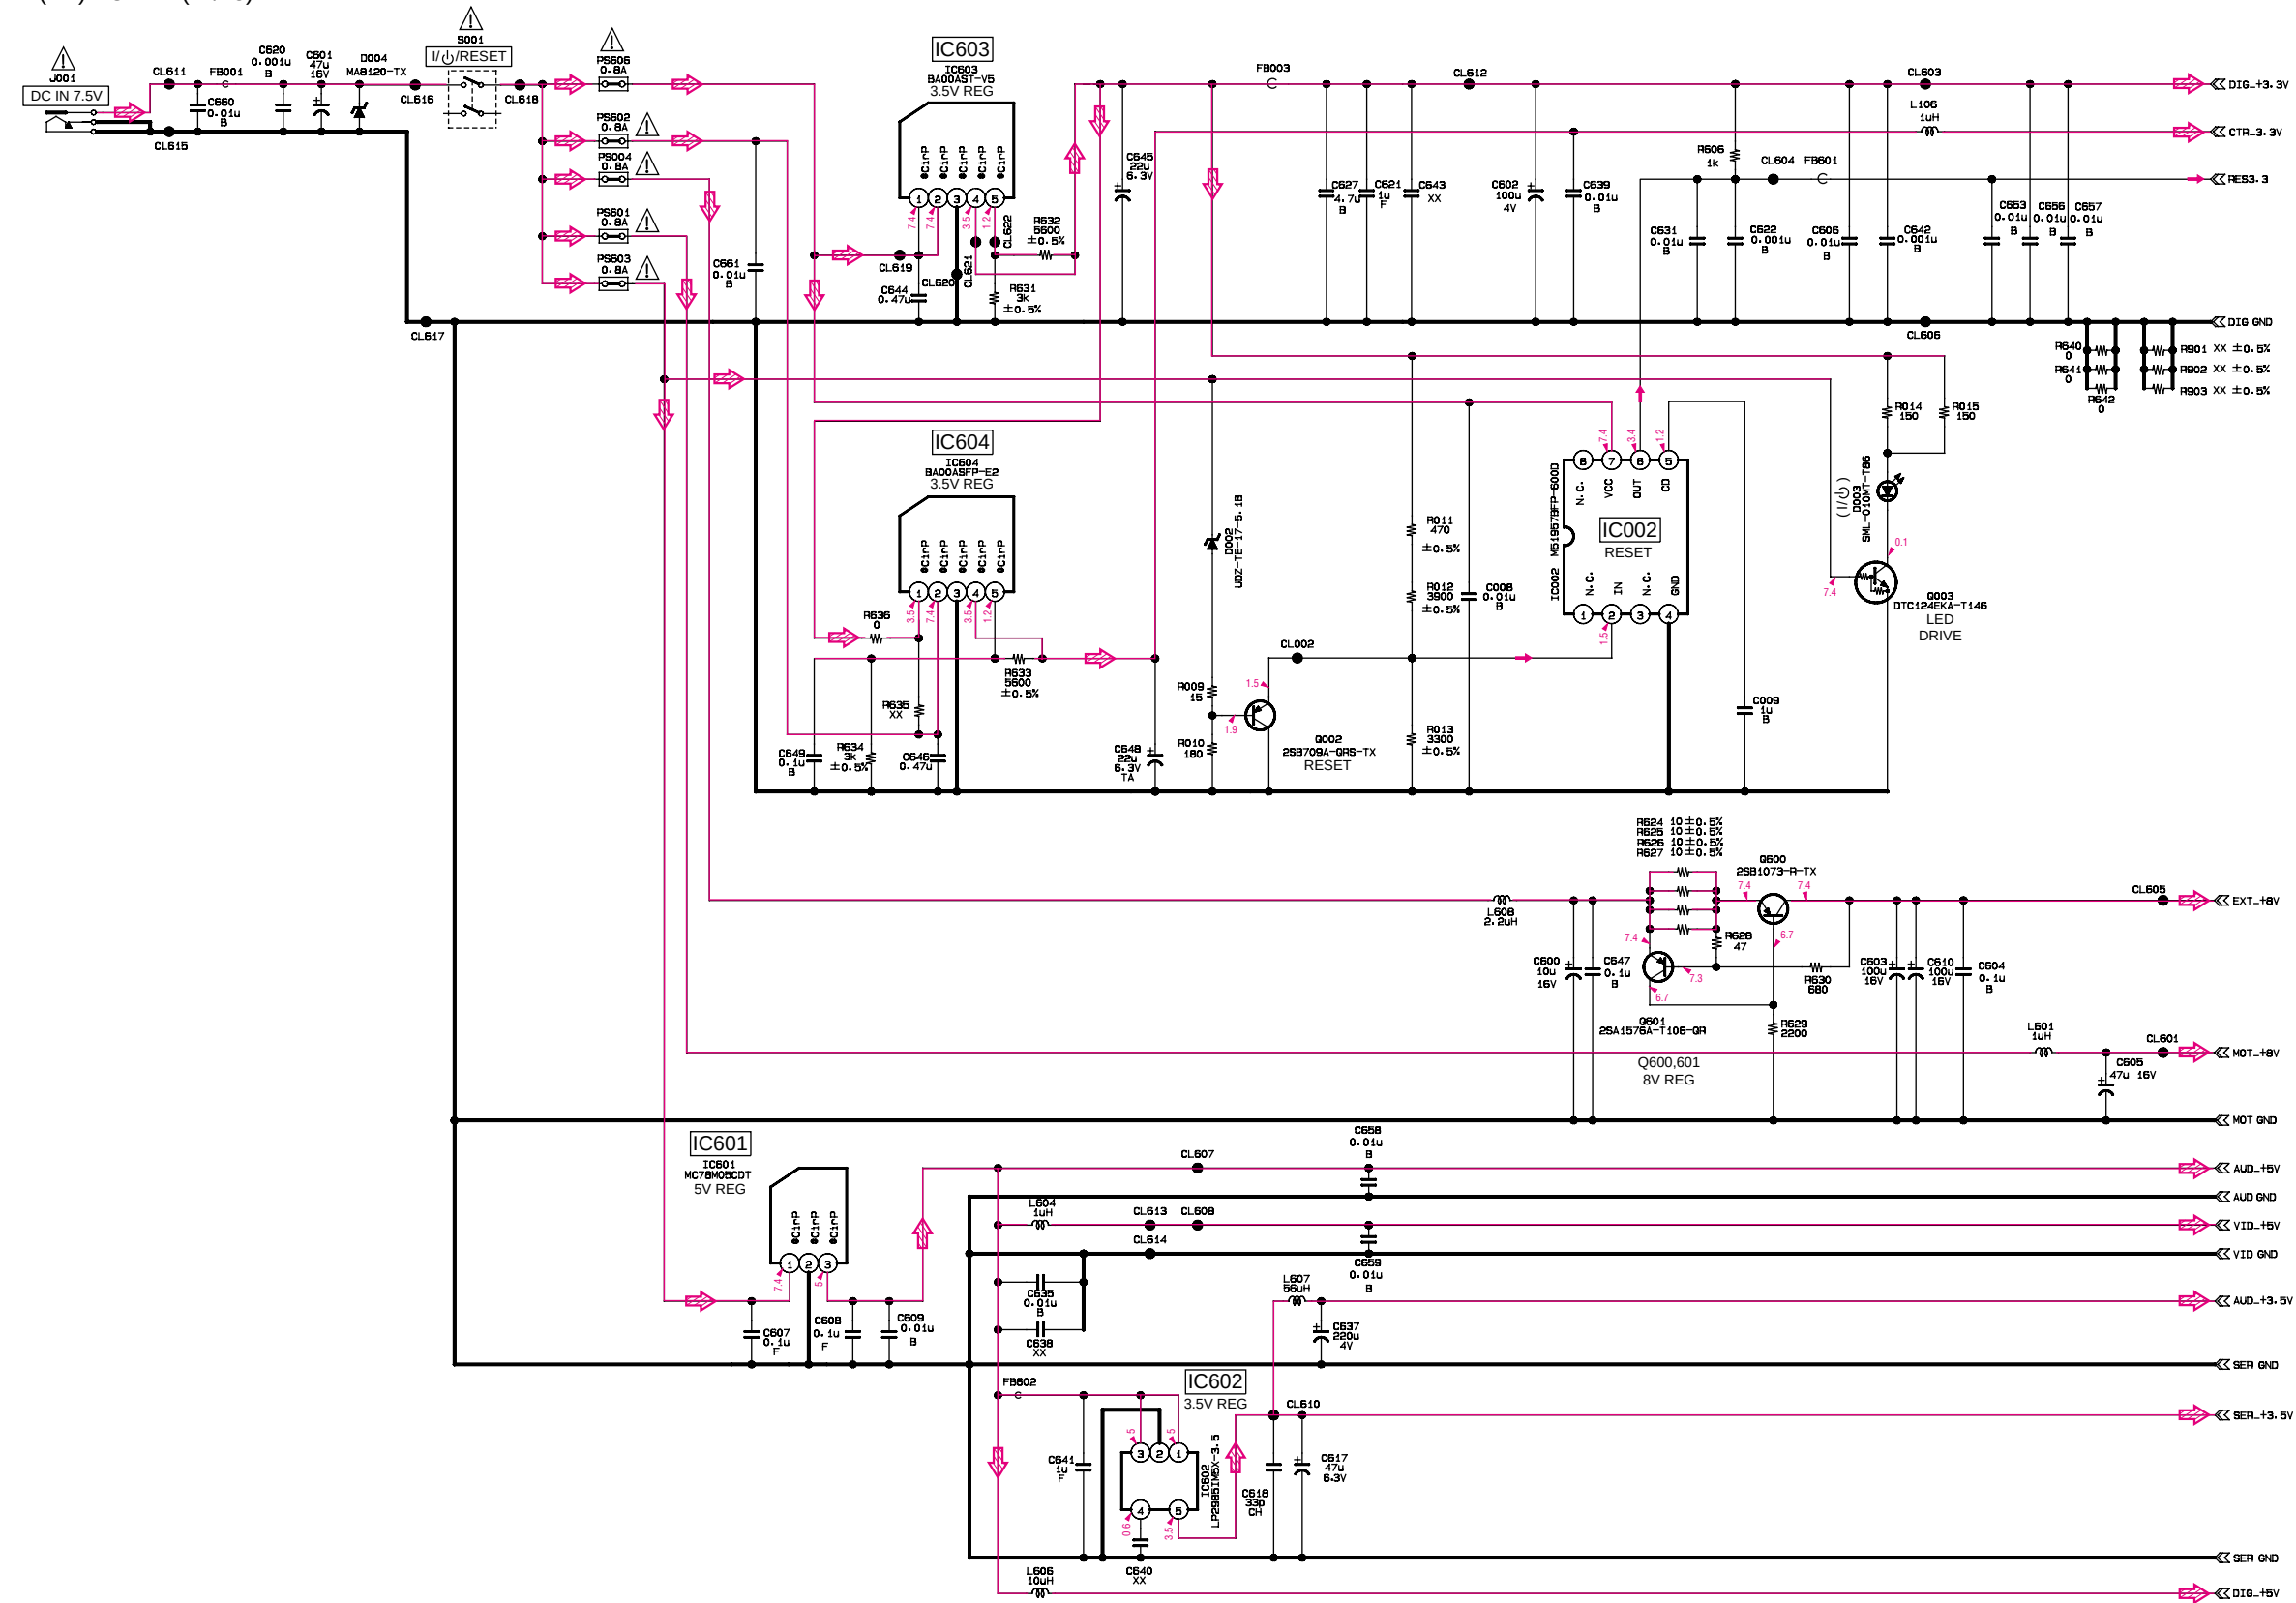


5-17. SCHEMATIC DIAGRAM (PM-41 (-21/-31/-41/-51/-61) BOARD (12/15))

PM-41 (-21/-31/-41/-51/-61) BOARD (12/15)

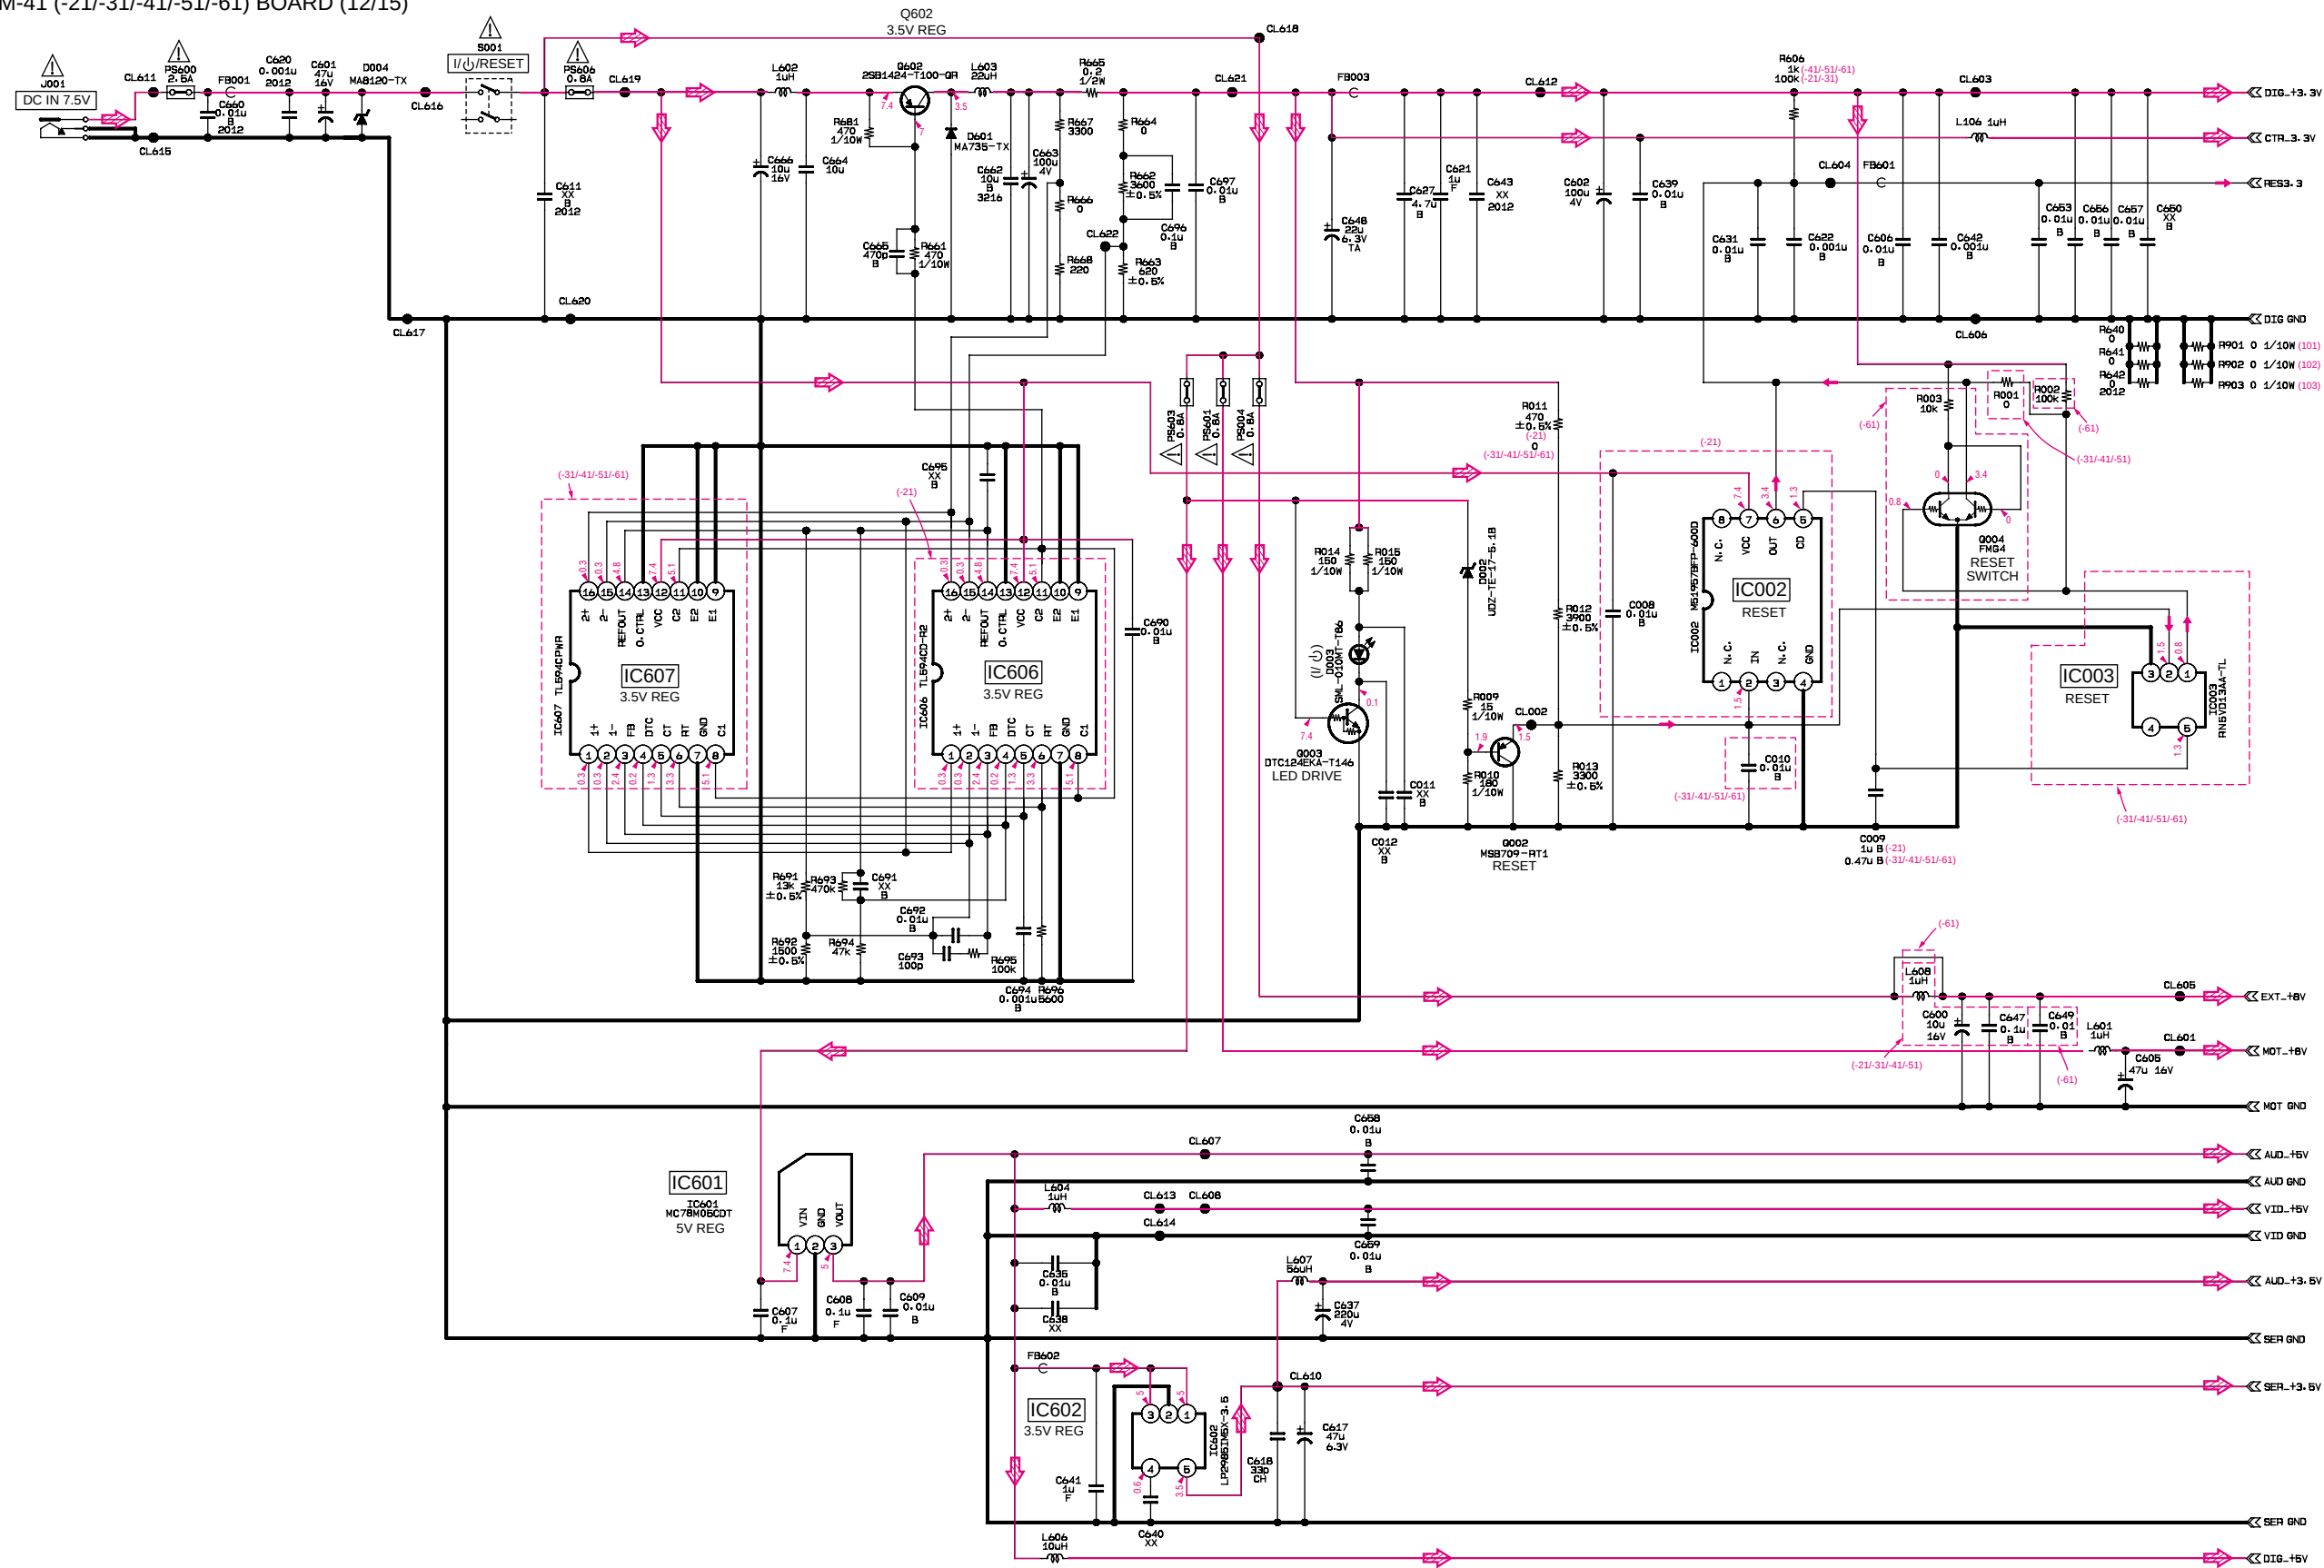


5-18. SCHEMATIC DIAGRAM (PM-41 (-71) BOARD (13/15))

PM-41 (-71) BOARD (13/15)

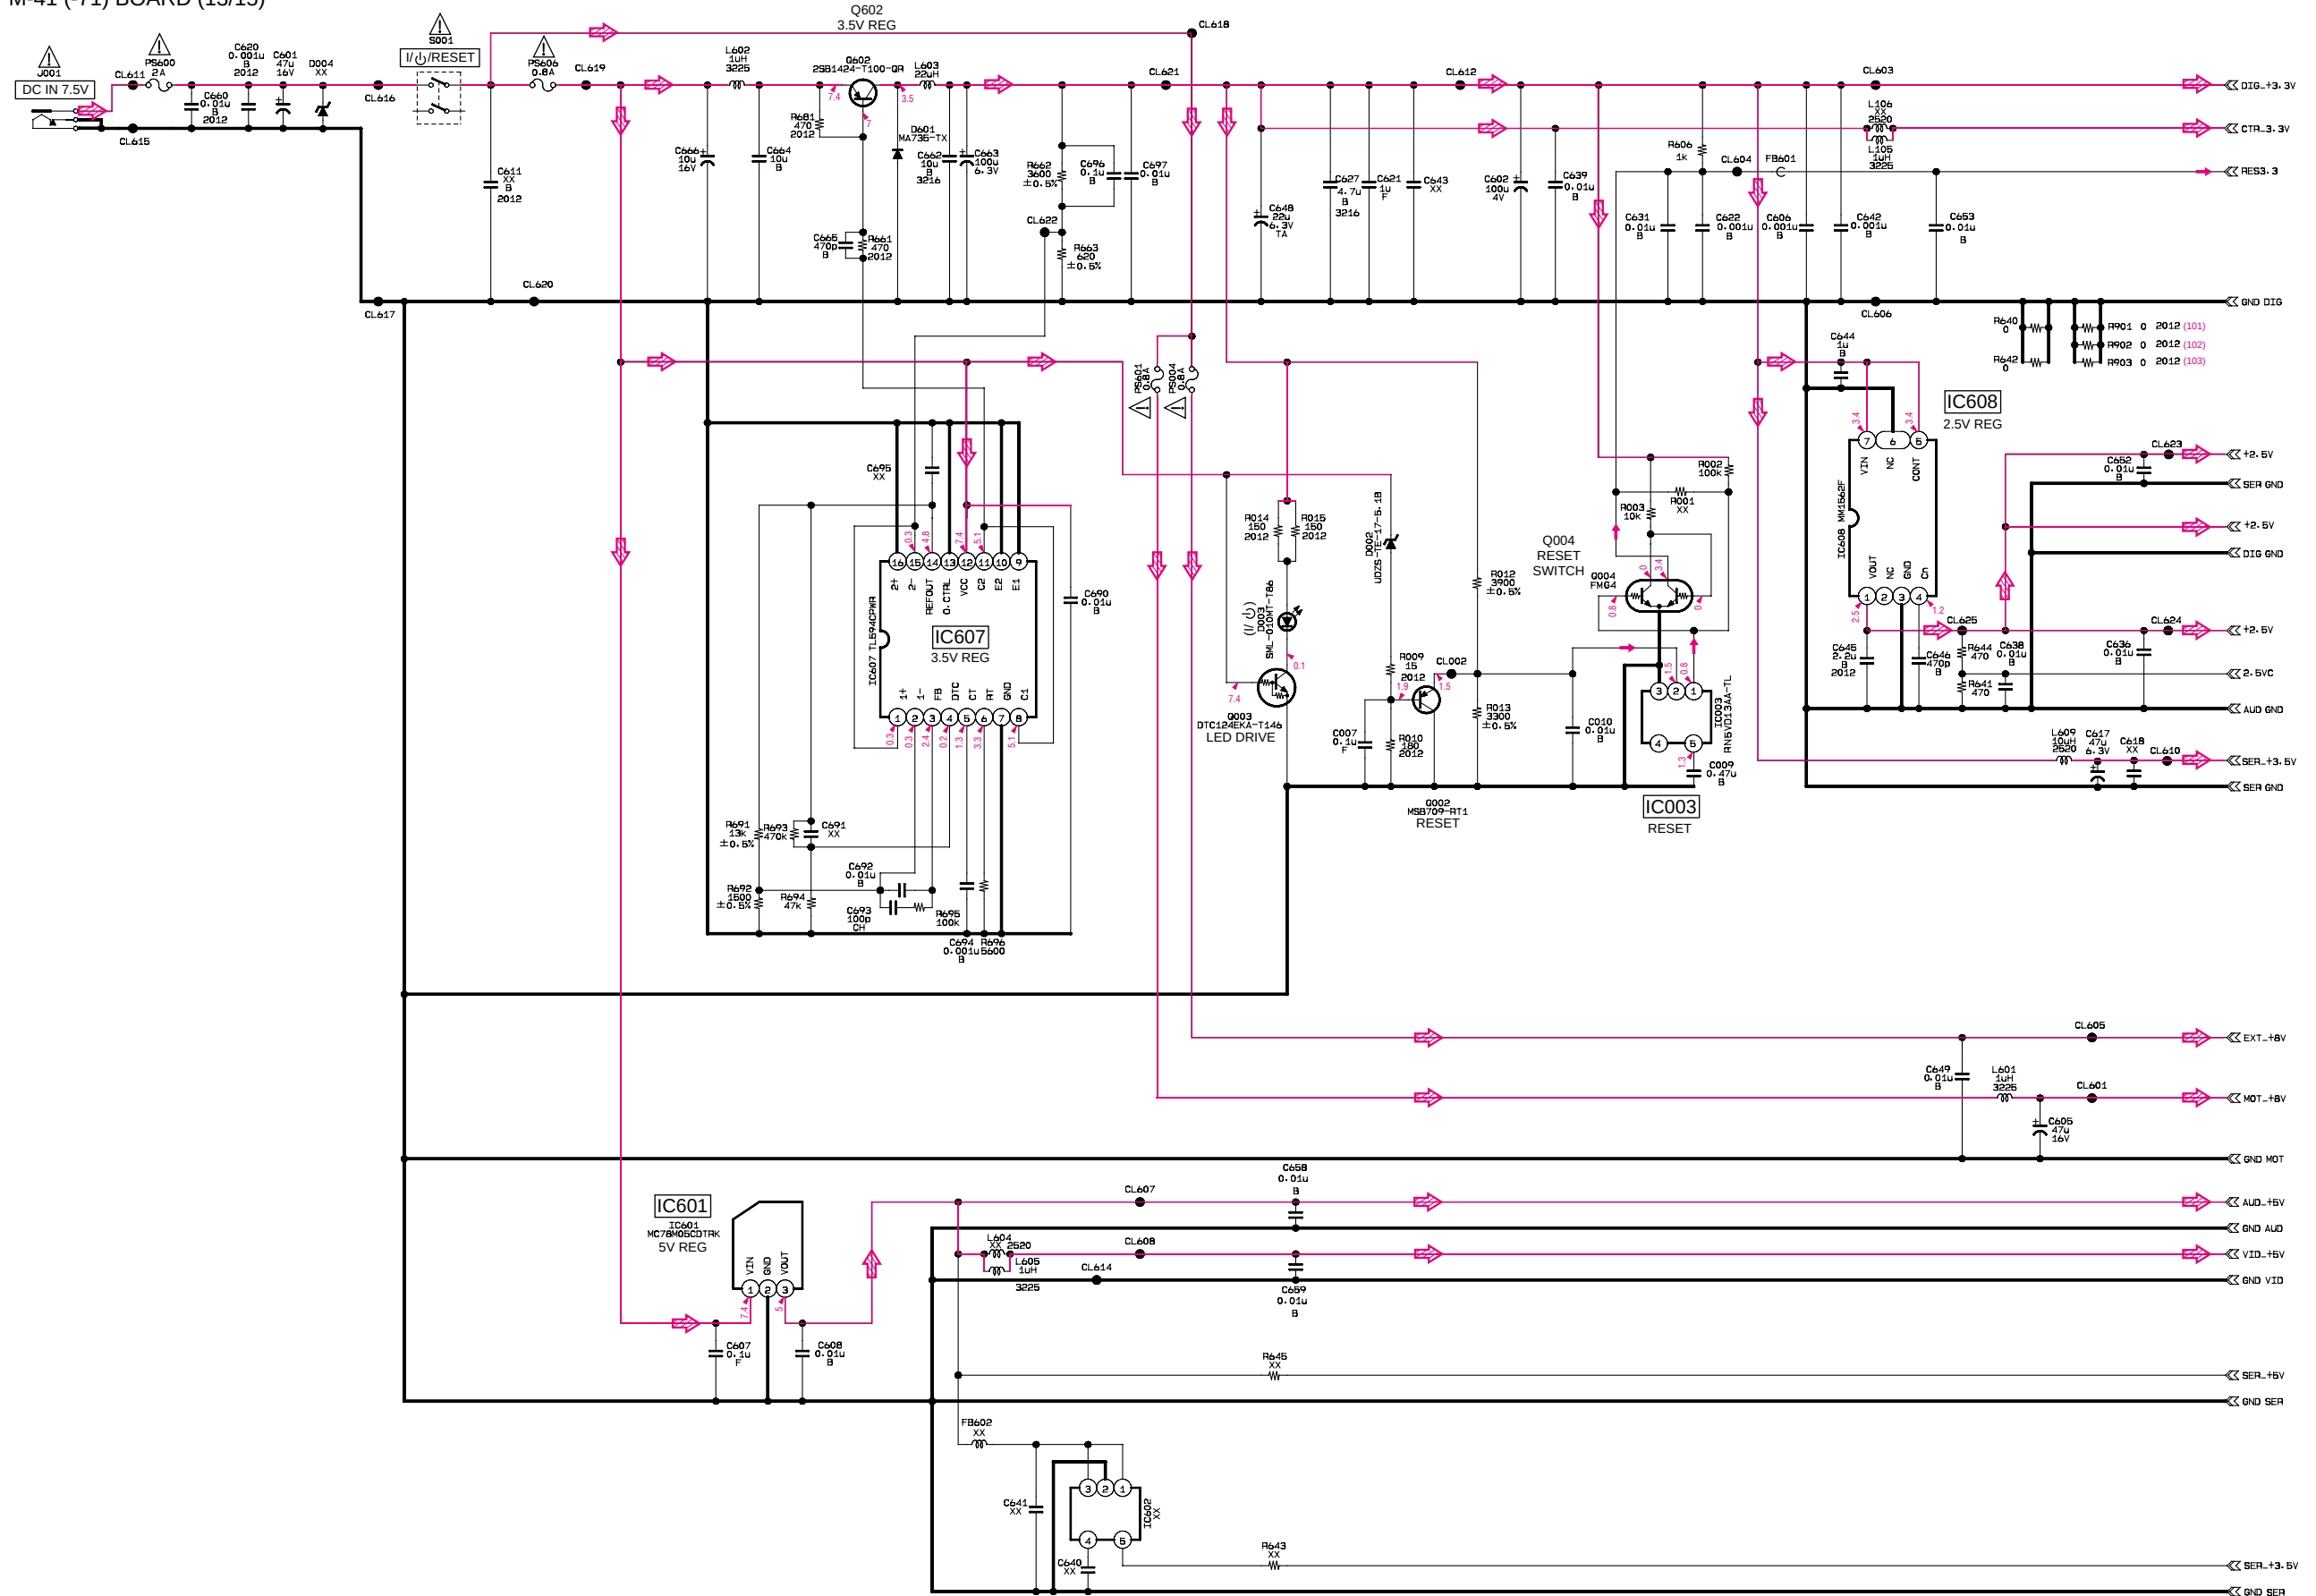


5-19. SCHEMATIC DIAGRAM (PM-41 (-11/-21/-31/-41/-51/-61) BOARD (14/15))

PM-41 (-11/-21/-31/-41/-51/-61) BOARD (14/15)

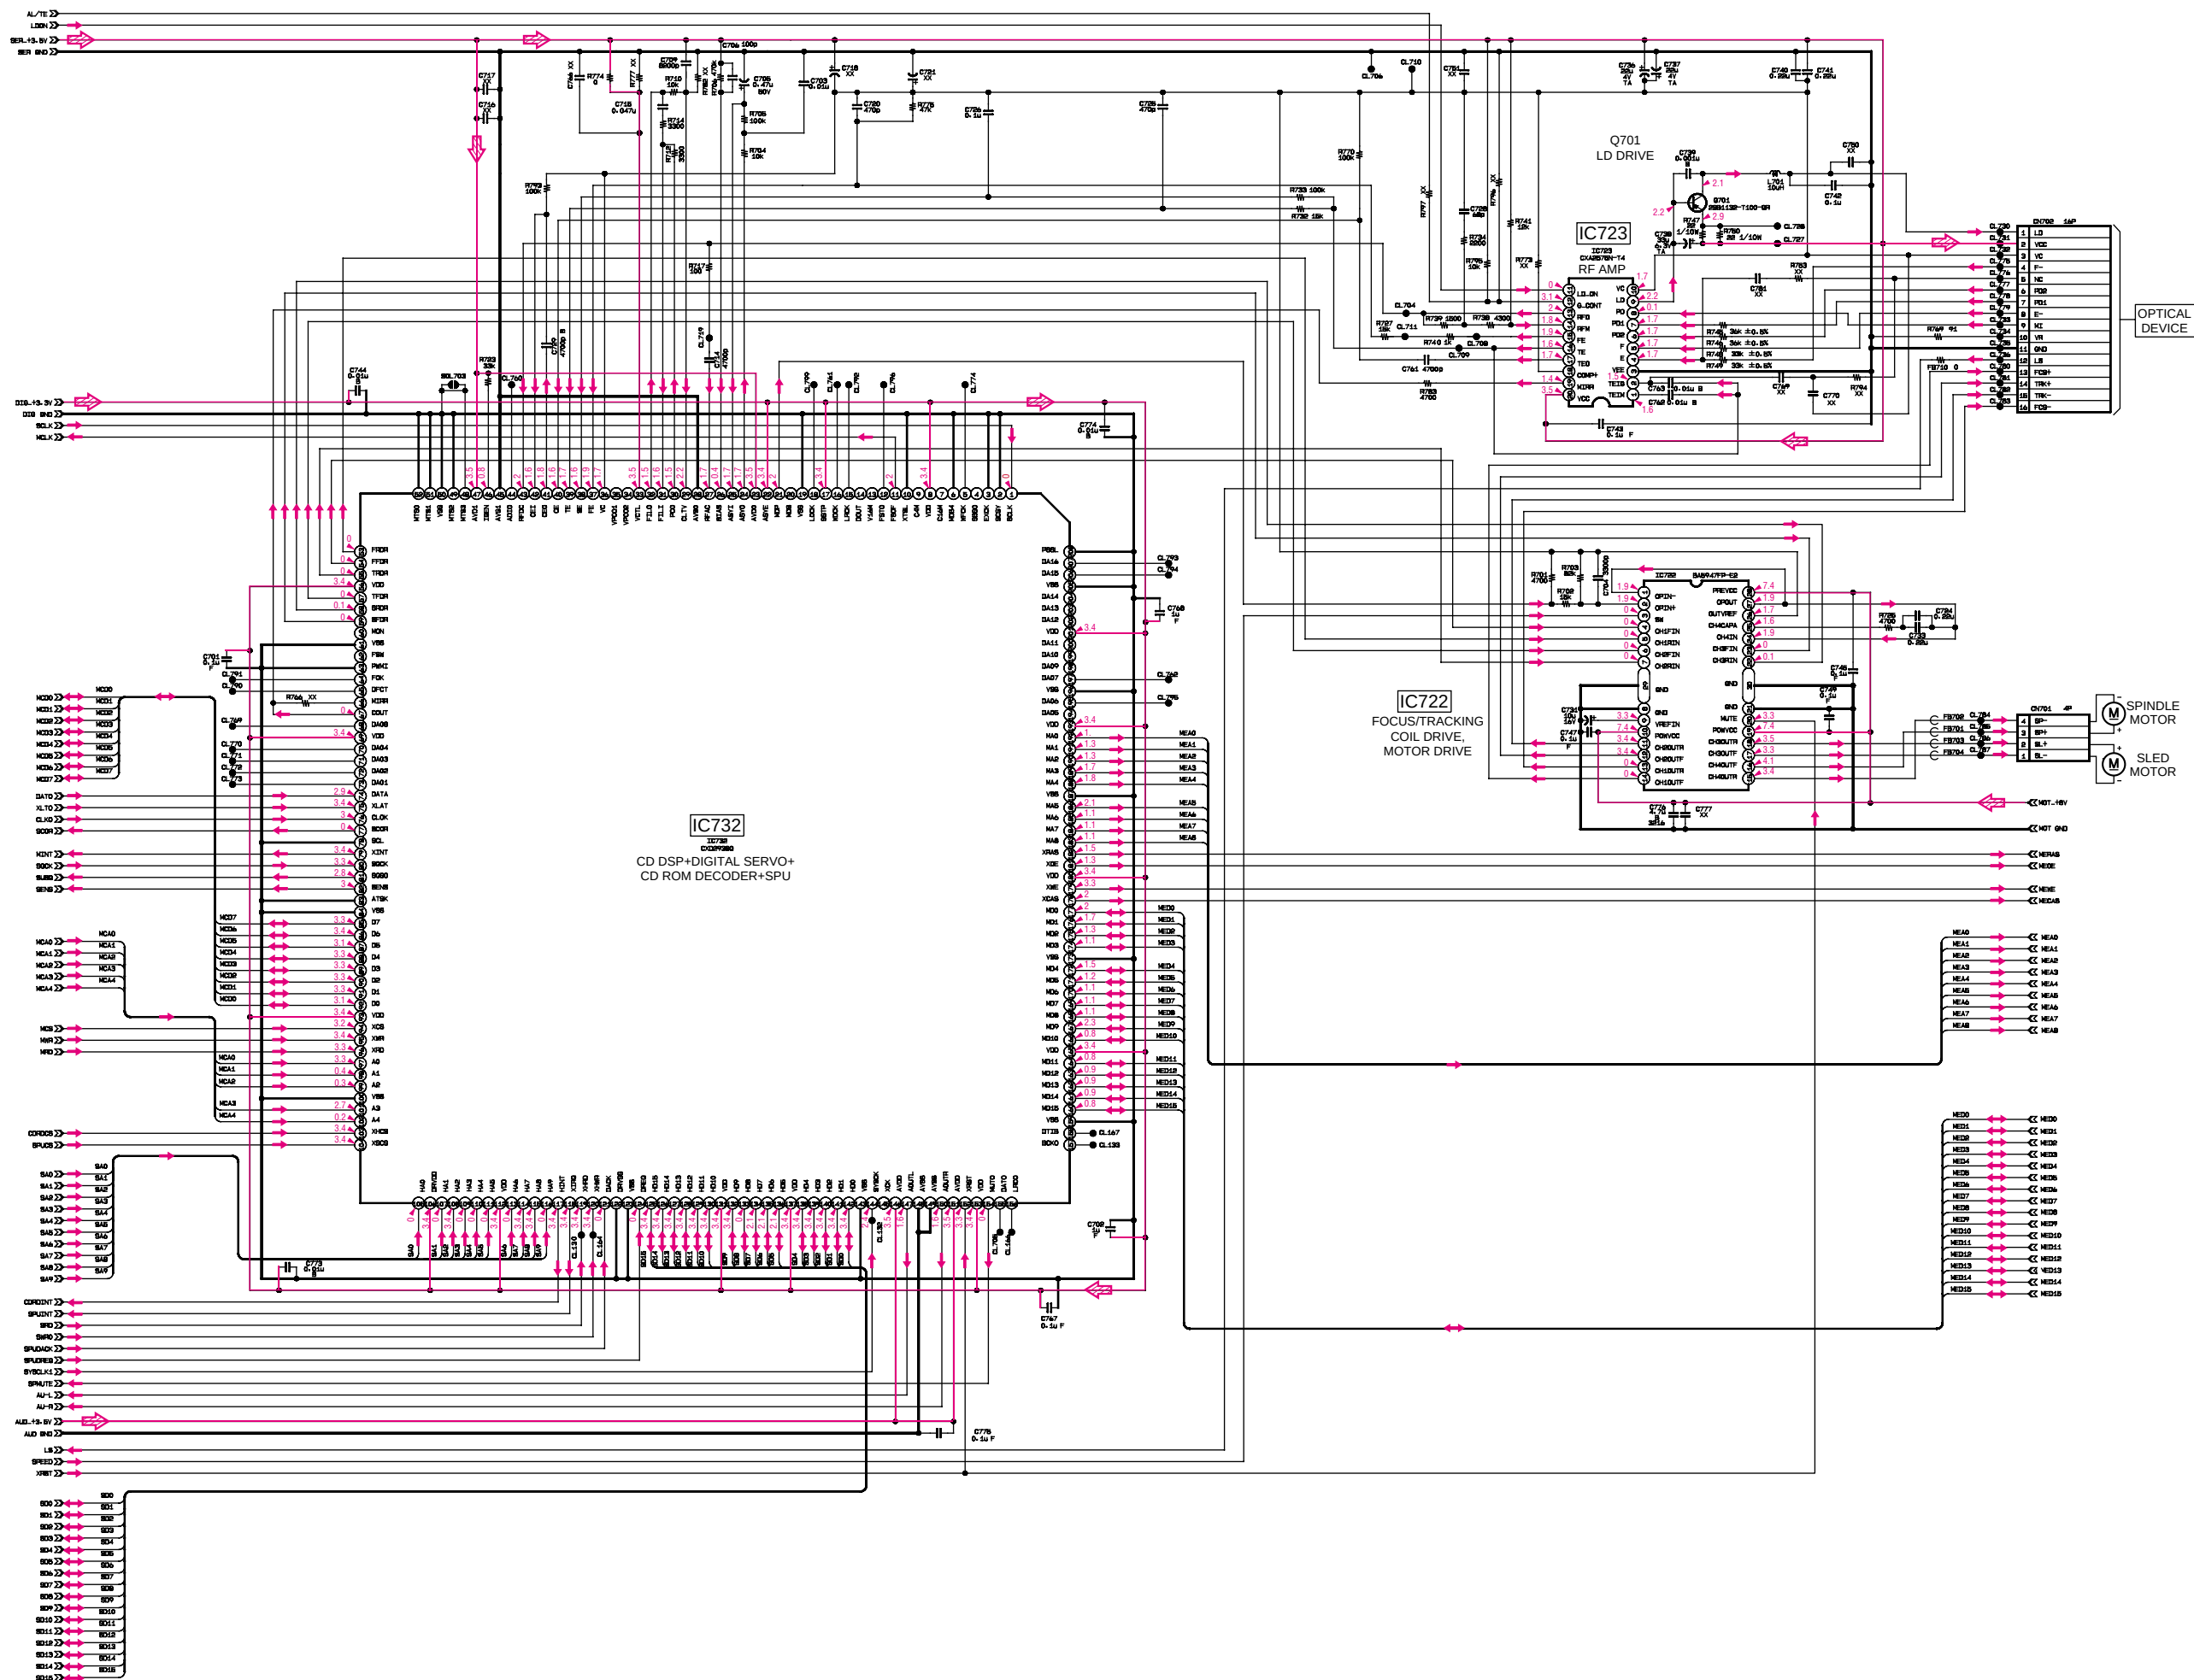

5-20. SCHEMATIC DIAGRAM (PM-41 (-71) BOARD (15/15))

PM-41 (-71) BOARD (15/15)

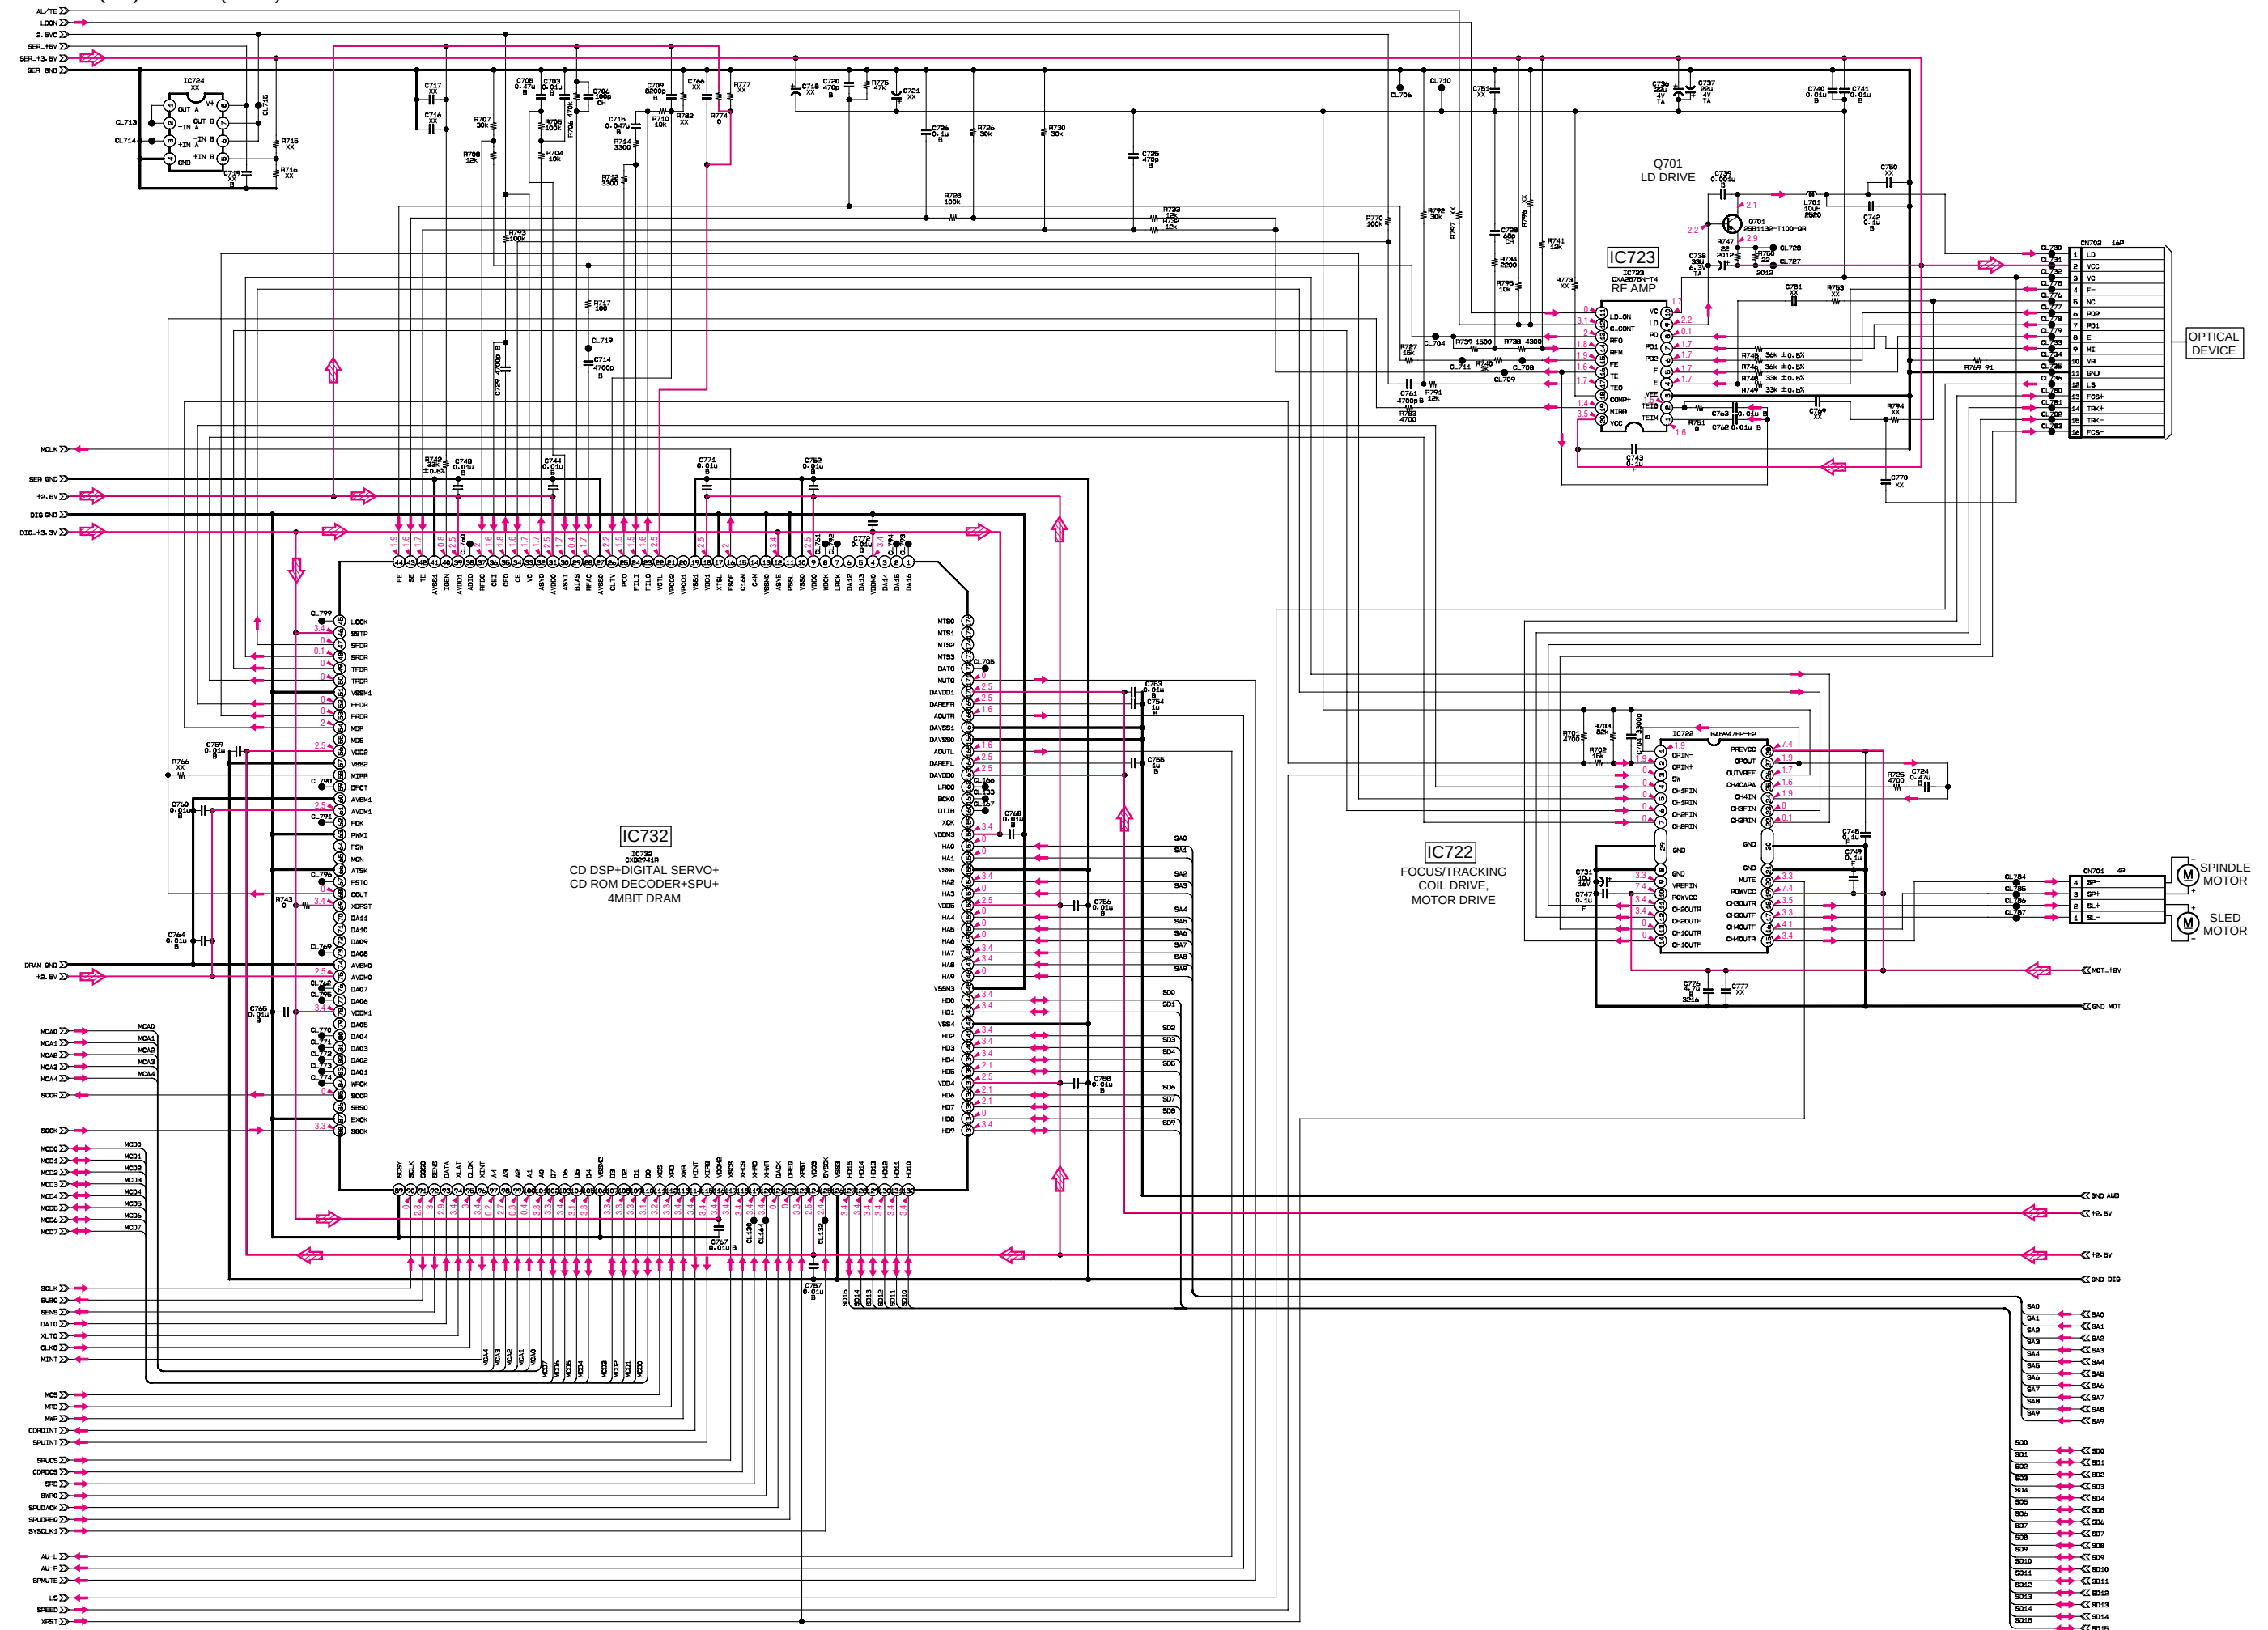

SECTION 6
ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
METAL: Metal-film resistor.
F: nonflammable
- SEMICONDUCTORS
In each case, u : μ , for example:
uA.. : μ A.. uPA.. : μ PA..
uPB.. : μ PB.. uPC.. : μ PC.. uPD.. : μ PD..

- CAPACITORS
uF : μ F
- COILS
uH : μ H

When indicating parts by reference number, please include the board.

NOTE:

- SC Classification :
S : Stocked parts
O : Ordered parts
U : Unsupplied parts

The components identified by mark $\triangle$ or dotted line with mark. $\triangle$ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque $\triangle$ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

SC	Ref. No.	Part No.	Description	Remark
O $\triangle$		A-6713-742-A	PM-41 BOARD, COMPLETE (100:-11/-21/-31)	
O $\triangle$		A-6713-768-A	PM-41 BOARD, COMPLETE (101:-21/-31)	
O $\triangle$		A-6713-776-A	PM-41 BOARD, COMPLETE (102:-21/-31)	
O $\triangle$		A-6713-853-A	PM-41 BOARD, COMPLETE (100:-41/-51)	
O $\triangle$		A-6713-854-A	PM-41 BOARD, COMPLETE (101:-41/-51)	
O $\triangle$		A-6713-855-A	PM-41 BOARD, COMPLETE (102:-41/-51)	
O $\triangle$		A-6713-864-A	PM-41 BOARD, COMPLETE (103:-41/-51)	
O $\triangle$		A-6713-902-A	PM-41 BOARD, COMPLETE (101:-61)	
O $\triangle$		A-6713-903-A	PM-41 BOARD, COMPLETE (100:-61)	
O $\triangle$		A-6713-904-A	PM-41 BOARD, COMPLETE (102:-61)	
O $\triangle$		A-6713-906-A	PM-41 BOARD, COMPLETE (103:-61)	
O $\triangle$		A-6715-470-A	PM-41 BOARD, COMPLETE (100:-71)	
O $\triangle$		A-6715-471-A	PM-41 BOARD, COMPLETE (101:-71)	
O $\triangle$		A-6715-483-A	PM-41 BOARD, COMPLETE (102:-71)	
O $\triangle$		A-6715-484-A	PM-41 BOARD, COMPLETE (103:-71)	

< CAPACITOR >				
O	C007	1-164-156-11	CERAMIC CHIP 0.1uF	25V
O	C008	1-163-021-91	CERAMIC CHIP 0.01uF	10% 50V
O	C009	1-125-837-91	CERAMIC CHIP 1uF	10% 6.3V
O	C009	1-125-891-11	CERAMIC CHIP 0.47uF	10% 10V
O	C010	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C101	1-125-764-41	CERAMIC CHIP 100PFX4	50V
O	C102	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
O	C104	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
O	C105	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
O	C106	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
O	C108	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
O	C109	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
O	C110	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
O	C111	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
O	C112	1-164-156-11	CERAMIC CHIP 0.1uF	25V
O	C113	1-164-156-11	CERAMIC CHIP 0.1uF	25V
O	C114	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
O	C115	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C116	1-162-927-11	CERAMIC CHIP 100PF	5% 50V
O	C118	1-162-927-11	CERAMIC CHIP 100PF	5% 50V

SC	Ref. No.	Part No.	Description	Remark
O	C122	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
O	C124	1-115-156-11	CERAMIC CHIP 1uF	10V
O	C125	1-162-927-11	CERAMIC CHIP 100PF	5% 50V
O	C126	1-162-927-11	CERAMIC CHIP 100PF	5% 50V
O	C127	1-162-927-11	CERAMIC CHIP 100PF	5% 50V
O	C128	1-162-927-11	CERAMIC CHIP 100PF	5% 50V
O	C129	1-162-927-11	CERAMIC CHIP 100PF	5% 50V
O	C130	1-162-927-11	CERAMIC CHIP 100PF	5% 50V
O	C131	1-162-927-11	CERAMIC CHIP 100PF	5% 50V
O	C132	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
O	C133	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
O	C134	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
O	C136	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
O	C137	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
O	C137	1-163-275-11	CERAMIC CHIP 0.001uF	5% 50V
O	C138	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C138	1-163-021-91	CERAMIC CHIP 0.01uF	10% 50V
O	C139	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C139	1-163-021-91	CERAMIC CHIP 0.01uF	10% 50V
O	C140	1-163-021-91	CERAMIC CHIP 0.01uF	10% 50V
O	C144	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
O	C145	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
O	C146	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
O	C150	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C151	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C152	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
O	C152	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C153	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
O	C208	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C208	1-164-156-11	CERAMIC CHIP 0.1uF	25V

SC	Ref. No.	Part No.	Description	Remark
O	C209	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C209	1-164-156-11	CERAMIC CHIP 0.1uF	25V
O	C210	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C210	1-164-156-11	CERAMIC CHIP 0.1uF	25V
O	C211	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
O	C211	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C211	1-164-156-11	CERAMIC CHIP 0.1uF	25V
O	C212	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C212	1-164-156-11	CERAMIC CHIP 0.1uF	25V
O	C213	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C213	1-164-156-11	CERAMIC CHIP 0.1uF	25V
O	C214	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C214	1-164-156-11	CERAMIC CHIP 0.1uF	25V
O	C215	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C215	1-164-156-11	CERAMIC CHIP 0.1uF	25V
O	C216	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
O	C216	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C216	1-164-156-11	CERAMIC CHIP 0.1uF	25V
O	C217	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C217	1-164-156-11	CERAMIC CHIP 0.1uF	25V
O	C218	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C218	1-164-156-11	CERAMIC CHIP 0.1uF	25V
O	C219	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C219	1-164-156-11	CERAMIC CHIP 0.1uF	25V
O	C220	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C220	1-164-156-11	CERAMIC CHIP 0.1uF	25V
O	C221	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C221	1-164-156-11	CERAMIC CHIP 0.1uF	25V
O	C222	1-164-156-11	CERAMIC CHIP 0.1uF	25V

SC	Ref. No.	Part No.	Description	Remark
O	C223	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C223	1-164-156-11	CERAMIC CHIP 0.1uF	25V
O	C224	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C224	1-164-156-11	CERAMIC CHIP 0.1uF	25V
O	C225	1-164-156-11	CERAMIC CHIP 0.1uF	25V
O	C226	1-164-156-11	CERAMIC CHIP 0.1uF	25V
O	C227	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C227	1-164-156-11	CERAMIC CHIP 0.1uF	25V
O	C228	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C228	1-164-156-11	CERAMIC CHIP 0.1uF	25V
O	C234	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C234	1-164-156-11	CERAMIC CHIP 0.1uF	25V
O	C235	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
O	C236	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
O	C236	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C236	1-164-156-11	CERAMIC CHIP 0.1uF	25V
O	C238	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
O	C238	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C238	1-164-156-11	CERAMIC CHIP 0.1uF	25V
O	C239	1-163-275-11	CERAMIC CHIP 0.001uF	5% 50V
O	C240	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C240	1-164-156-11	CERAMIC CHIP 0.1uF	25V
O	C241	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
O	C241	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C241	1-164-156-11	CERAMIC CHIP 0.1uF	25V
O	C242	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
O	C242	1-163-021-91	CERAMIC CHIP 0.01uF	10% 50V
O	C242	1-164-156-11	CERAMIC CHIP 0.1uF	25V
O	C243	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V

SC	Ref. No.	Part No.	Description	Remark		
O	C243	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V (-11/-21/-31/-41/-51)
O	C243	1-164-156-11	CERAMIC CHIP	0.1uF		25V (-61)
O	C244	1-162-927-11	CERAMIC CHIP	100PF	5%	50V (-11/-21/-31/-41/-51)
O	C244	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (-71)
O	C244	1-164-156-11	CERAMIC CHIP	0.1uF		25V (-61)
O	C245	1-162-927-11	CERAMIC CHIP	100PF	5%	50V (-11/-21/-31/-41/-51)
O	C245	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (-71)
O	C245	1-164-156-11	CERAMIC CHIP	0.1uF		25V (-61)
O	C247	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (-11/-21/-31/-41/-51)
O	C247	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (-71)
O	C247	1-164-156-11	CERAMIC CHIP	0.1uF		25V (-61)
O	C248	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (-11/-21/-31/-41/-51)
O	C248	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (-71)
O	C248	1-164-156-11	CERAMIC CHIP	0.1uF		25V (-61)
O	C249	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (-11/-21/-31/-41/-51)
O	C249	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (-71)
O	C249	1-164-156-11	CERAMIC CHIP	0.1uF		25V (-61)
O	C250	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (-11/-21/-31/-41/-51/-71)
O	C250	1-164-156-11	CERAMIC CHIP	0.1uF		25V (-61)
O	C251	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V (-61)
O	C252	1-125-838-11	CERAMIC CHIP	2.2uF	10%	6.3V (-61)
O	C254	1-162-962-11	CERAMIC CHIP	470PF	10%	50V (-61)
O	C306	1-164-156-11	CERAMIC CHIP	0.1uF		25V
O	C315	1-164-156-11	CERAMIC CHIP	0.1uF		25V (-11/-21/-31/-41/-51/-61)
O	C316	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (-11/-21/-31/-41/-51/-61)
O	C317	1-124-778-00	ELECT CHIP	22uF	20%	6.3V (-11/-21/-31/-41/-51/-61)
O	C319	1-115-156-11	CERAMIC CHIP	1uF		10V
O	C325	1-110-569-11	TANTAL. CHIP	47uF	20%	6.3V (-11/-21/-31/-41/-51/-61)
O	C326	1-164-156-11	CERAMIC CHIP	0.1uF		25V
O	C327	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (-11/-21/-31/-41/-51/-61)

SC	Ref. No.	Part No.	Description	Remark		
O	C404	1-115-156-11	CERAMIC CHIP	1uF		10V (-71)
O	C404	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V (-11/-21/-31/-41/-51/-61)
O	C406	1-115-156-11	CERAMIC CHIP	1uF		10V (-71)
O	C406	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V (-11/-21/-31/-41/-51/-61)
O	C407	1-124-779-00	ELECT CHIP	10uF	20%	16V (-71)
O	C407	1-128-004-11	ELECT CHIP	10uF	20%	16V (-11/-21/-31/-41/-51/-61)
O	C408	1-115-156-11	CERAMIC CHIP	1uF		10V (-71)
O	C408	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V (-11/-21/-31/-41/-51/-61)
O	C409	1-124-779-00	ELECT CHIP	10uF	20%	16V (-71)
O	C409	1-128-004-11	ELECT CHIP	10uF	20%	16V (-11/-21/-31/-41/-51/-61)
O	C423	1-115-156-11	CERAMIC CHIP	1uF		10V (-71)
O	C423	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V (-11/-21/-31/-41/-51/-61)
O	C424	1-115-156-11	CERAMIC CHIP	1uF		10V (-71)
O	C424	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V (-11/-21/-31/-41/-51/-61)
O	C445	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
O	C501	1-162-910-11	CERAMIC CHIP	5PF	0.25PF	50V
O	C502	1-164-156-11	CERAMIC CHIP	0.1uF		25V
O	C508	1-126-206-11	ELECT CHIP	100uF	20%	6.3V
O	C519	1-124-779-00	ELECT CHIP	10uF	20%	16V (-71)
O	C519	1-128-004-11	ELECT CHIP	10uF	20%	16V (-11/-21/-31/-41/-51/-61)
O	C524	1-164-156-11	CERAMIC CHIP	0.1uF		25V
O	C529	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
O	C530	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
O	C550	1-126-246-11	ELECT CHIP	220uF	20%	4V
O	C551	1-126-246-11	ELECT CHIP	220uF	20%	4V
O	C600	1-124-779-00	ELECT CHIP	10uF	20%	16V (-11/-21/-31/-41/-51)
O	C601	1-126-204-11	ELECT CHIP	47uF	20%	16V (-11/-21/-31/-41/-51/-61)
O	C601	1-137-765-21	ELECT CHIP	47uF	20%	16V (-71)
O	C602	1-126-209-11	ELECT CHIP	100uF	20%	4V
O	C603	1-117-681-11	ELECT CHIP	100uF	20%	16V (-11)
O	C604	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V (-11)
O	C605	1-126-204-11	ELECT CHIP	47uF	20%	16V (-11/-21/-31/-41/-51/-61)
O	C605	1-137-765-21	ELECT CHIP	47uF	20%	16V (-71)

SC	Ref. No.	Part No.	Description	Remark		
O	C606	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (-71)
O	C606	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V (-11/-21/-31/-41/-51/-61)
O	C607	1-164-156-11	CERAMIC CHIP	0.1uF		25V
O	C608	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (-71)
O	C608	1-164-156-11	CERAMIC CHIP	0.1uF		25V (-11/-21/-31/-41/-51/-61)
O	C609	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V (-11/-21/-31/-41/-51/-61)
O	C610	1-117-681-11	ELECT CHIP	100uF	20%	16V (-11)
O	C617	1-126-205-11	ELECT CHIP	47uF	20%	6.3V
O	C618	1-162-921-11	CERAMIC CHIP	33PF	5%	50V (-11/-21/-31/-41/-51/-61)
O	C620	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (-11)
O	C620	1-163-009-91	CERAMIC CHIP	0.001uF	10%	50V (-21/-31/-41/-51/-61/-71)
O	C621	1-115-156-11	CERAMIC CHIP	1uF		10V
O	C622	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
O	C627	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
O	C631	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
O	C635	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (-11/-21/-31/-41/-51/-61)
O	C636	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (-71)
O	C637	1-126-246-11	ELECT CHIP	220uF	20%	4V (-11/-21/-31/-41/-51/-61)
O	C638	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (-71)
O	C639	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
O	C641	1-115-156-11	CERAMIC CHIP	1uF		10V (-11/-21/-31/-41/-51/-61)
O	C642	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
O	C644	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V (-71)
O	C644	1-164-005-11	CERAMIC CHIP	0.47uF		25V (-11)
O	C645	1-124-778-00	ELECT CHIP	22uF	20%	6.3V (-11)
O	C645	1-125-838-11	CERAMIC CHIP	2.2uF	10%	6.3V (-71)
O	C646	1-162-962-11	CERAMIC CHIP	470PF	10%	50V (-71)
O	C646	1-164-005-11	CERAMIC CHIP	0.47uF		25V (-11)
O	C647	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V (-11/-21/-31/-41/-51)
O	C648	1-104-849-91	TANTAL. CHIP	22uF	20%	6.3V (-11/-21/-31/-41/-51/-61)
O	C648	1-119-750-11	TANTAL. CHIP	22uF	20%	6.3V (-71)
O	C649	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V (-11)

SC	Ref. No.	Part No.	Description	Remark		
O	C649	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (-61/-71)
O	C652	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (-71)
O	C653	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
O	C654	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (-11/-21/-31/-41/-51)
O	C655	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
O	C656	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (-11/-21/-31/-41/-51/-61)
O	C657	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (-11/-21/-31/-41/-51/-61)
O	C658	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
O	C659	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
O	C660	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (-11)
O	C660	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V (-21/-31/-41/-51/-61/-71)
O	C661	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (-11)
O	C662	1-127-692-11	CERAMIC CHIP	10uF	10%	6.3V (-21/-31/-41/-51/-61/-71)
O	C663	1-126-206-11	ELECT CHIP	100uF	20%	6.3V (-71)
O	C663	1-126-209-11	ELECT CHIP	100uF	20%	4V (-21/-31/-41/-51/-61)
O	C664	1-117-808-91	CERAMIC CHIP	10uF	10%	10V (-21/-31/-41/-51/-61/-71)
O	C665	1-162-962-11	CERAMIC CHIP	470PF	10%	50V (-21/-31/-41/-51/-61/-71)
O	C666	1-124-779-00	ELECT CHIP	10uF	20%	16V (-21/-31/-41/-51/-61/-71)
O	C690	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (-21/-31/-41/-51/-61/-71)
O	C692	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (-21/-31/-41/-51/-61/-71)
O	C693	1-162-927-11	CERAMIC CHIP	100PF	5%	50V (-21/-31/-41/-51/-61/-71)
O	C694	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (-21/-31/-41/-51/-61/-71)
O	C696	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V (-21/-31/-41/-51/-61/-71)
O	C697	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (-21/-31/-41/-51/-61/-71)
O	C701	1-164-156-11	CERAMIC CHIP	0.1uF		25V (-11/-21/-31/-41/-51/-61)
O	C702	1-115-156-11	CERAMIC CHIP	1uF		10V (-11/-21/-31/-41/-51/-61)
O	C703	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
O	C704	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V
O	C705	1-125-891-11	CERAMIC CHIP	0.47uF	10%	10V (-71)
O	C705	1-126-191-11	ELECT CHIP	0.47uF	20%	50V (-11/-21/-31/-41/-51/-61)
O	C706	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
O	C709	1-164-174-11	CERAMIC CHIP	0.0082uF	10%	25V
O	C714	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V

SC	Ref. No.	Part No.	Description	Remark	SC	Ref. No.	Part No.	Description	Remark	SC	Ref. No.	Part No.	Description	Remark
O	C715	1-165-176-11	CERAMIC CHIP	0.047uF 10% 16V	O	C760	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V (-71)				< ON BOARD CONTACT >	
O	C720	1-162-962-11	CERAMIC CHIP	470PF 10% 50V										S IC204 8-759-496-22 IC CY2081SL-500T (NTSC)
O	C724	1-115-467-11	CERAMIC CHIP	0.22uF 10% 10V (-11/-21/-31/-41/-51/-61)	O	C761	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V	O	ET101	1-694-592-31	ON BOARD CONTACT	S IC204 8-759-496-23 IC CY2081SL-509T (PAL)
					O	C762	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	O	ET102	1-694-592-31	ON BOARD CONTACT (-11/-21/-31/-41/-51/-61)	S IC205 8-759-837-19 IC MM1562FFBE (-61)
O	C724	1-125-891-11	CERAMIC CHIP	0.47uF 10% 10V (-71)	O	C763	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V					S IC304 6-800-550-01 IC MC68HC05G6PB-SC430947PBEB1 (100:-71,103:-71)
O	C725	1-162-962-11	CERAMIC CHIP	470PF 10% 50V	O	C764	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V (-71)				< FERRITE BEAD >	S IC304 6-800-551-01 IC MC68HC05G6PB-SC430948PBEB1 (102:-71)
										O	FB001	1-469-176-21	INDUCTOR, FERRITE BEAD (-11/-21/-31/-41/-51/-61)	S IC304 6-800-552-01 IC MC68HC05G6PB-SC430949PBEB1 (101:-71)
O	C726	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	O	C765	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V (-71)	O	FB003	1-469-324-21	FERRITE, EMI (SMD) (-11/-21/-31/-41/-51/-61)	S IC304 8-759-598-55 IC MC68HC05G6-SC430942PBEB1 (100:-11/-21/-31/-41/-51/-61, 103:-41/-51/-61)
O	C728	1-162-925-11	CERAMIC CHIP	68PF 5% 50V	O	C767	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V (-71)	O	FB102	1-469-110-21	FERRITE, EMI (SMD)	
O	C729	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V	O	C767	1-164-156-11	CERAMIC CHIP	0.1uF 25V (-11/-21/-31/-41/-51/-61)	O	FB117	1-469-667-21	FERRITE, EMI (SMD)	S IC304 8-759-598-56 IC MC68HC05G6-SC430943PBEB1 (102:-21/-31/-41/-51/-61)
O	C731	1-124-779-00	ELECT CHIP	10uF 20% 16V (-71)	O	C768	1-115-156-11	CERAMIC CHIP	1uF 10V (-11/-21/-31/-41/-51/-61)	O	FB118	1-469-667-21	FERRITE, EMI (SMD)	S IC304 8-759-598-57 IC MC68HC05G6-SC430944PBEB1 (101:-21/-31/-41/-51/-61)
O	C731	1-128-004-11	ELECT CHIP	10uF 20% 16V (-11/-21/-31/-41/-51/-61)	O	C768	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V (-71)	O	FB120	1-414-760-21	FERRITE, EMI (SMD)	S IC310 8-759-342-01 IC MB814260-70PJER (-11/-21/-31/-41/-51/-61)
					O	C771	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V (-71)	O	FB121	1-414-760-21	FERRITE, EMI (SMD)	
O	C736	1-104-847-11	TANTAL. CHIP	22uF 20% 4V	O	C772	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V (-71)	O	FB122	1-414-760-21	FERRITE, EMI (SMD)	
O	C737	1-104-847-11	TANTAL. CHIP	22uF 20% 4V	O	C772	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V (-71)	O	FB123	1-469-667-21	FERRITE, EMI (SMD)	S IC405 6-700-780-01 IC NJM2790V(TE2) (-71)
O	C738	1-104-752-11	TANTAL. CHIP	33uF 20% 6.3V (-11/-21/-31/-41/-51/-61)	O	C773	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V (-11/-21/-31/-41/-51/-61)	O	FB124	1-216-864-11	METAL CHIP 0 5% 1/16W	S IC405 8-759-598-10 IC NJM2174V(TE2) (-11/-21/-31/-41/-51/-61)
O	C738	1-165-877-91	TANTAL. CHIP	33uF 20% 6.3V (-71)	O	C774	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V (-11/-21/-31/-41/-51/-61)	O	FB401	1-500-113-22	BEAD, FERRITE (CHIP) (-11/-21/-31/-41/-51/-61)	S IC502 8-752-086-02 IC CXA2106R-T4
					O	C775	1-164-156-11	CERAMIC CHIP	0.1uF 25V (-11/-21/-31/-41/-51/-61)	O	FB402	1-500-113-22	BEAD, FERRITE (CHIP) (-11/-21/-31/-41/-51/-61)	S IC601 8-759-391-69 IC MC78M05CDTRK
O	C739	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	O	C776	1-115-566-11	CERAMIC CHIP	4.7uF 10% 10V	O	FB501	1-550-907-21	BEAD, FERRITE (CHIP)	S IC602 8-759-598-12 IC LP2985IM5X-3.5 (-11/-21/-31/-41/-51/-61)
O	C740	1-115-467-11	CERAMIC CHIP	0.22uF 10% 10V (-11/-21/-31/-41/-51/-61)						O	FB502	1-500-113-22	BEAD, FERRITE (CHIP) (-11/-21/-31/-41/-51/-61)	S IC603 8-759-691-04 IC BA00AST (-11)
O	C740	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V (-71)	O	C776	1-115-566-11	CERAMIC CHIP	4.7uF 10% 10V	O	FB502	1-500-113-22	BEAD, FERRITE (CHIP) (-11/-21/-31/-41/-51/-61)	S IC604 8-759-643-48 IC BA00ASFP-E2 (-11)
O	C741	1-115-467-11	CERAMIC CHIP	0.22uF 10% 10V (-11/-21/-31/-41/-51/-61)										S IC606 8-759-346-78 IC TL594CD-R2 (-21)
O	C741	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V (-71)						O	FB503	1-500-113-22	BEAD, FERRITE (CHIP) (-11/-21/-31/-41/-51/-61)	S IC607 8-759-680-31 IC TL594CPWR (-31/-41/-51/-61/-71)
										O	FB601	1-414-813-11	FERRITE, EMI (SMD)	S IC608 8-759-837-19 IC MM1562FFBE (-71)
										O	FB602	1-469-324-21	FERRITE, EMI (SMD) (-11/-21/-31/-41/-51/-61)	S IC722 8-759-677-90 IC BA5947FP-E2
O	C742	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	O	CN101	1-694-748-11	TERMINAL BOARD (FRONT)		O	FB602	1-469-324-21	FERRITE, EMI (SMD) (-11/-21/-31/-41/-51/-61)	S IC723 8-752-087-83 IC CXA2575N-T4
O	C743	1-164-156-11	CERAMIC CHIP	0.1uF 25V	O	CN102	1-694-748-11	TERMINAL BOARD (FRONT)		O	FB701	1-469-324-21	FERRITE, EMI (SMD) (-11/-21/-31/-41/-51/-61)	S IC732 8-752-395-18 IC CXD2938Q (-11/-21/-31/-41/-51/-61)
O	C744	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V									< JACK >	S IC732 8-752-415-88 IC CXD2941R (-71)
O	C745	1-164-156-11	CERAMIC CHIP	0.1uF 25V						O	FB702	1-469-324-21	FERRITE, EMI (SMD) (-11/-21/-31/-41/-51/-61)	
O	C747	1-164-156-11	CERAMIC CHIP	0.1uF 25V	O	CN502	1-779-029-71	CONNECTOR, SQUARE TYPE 12P (AV MULTI OUT)						O△ J001 1-695-565-11 JACK, DC (POLARITY UNIFIED TYPE) (DC IN 7.5V)
O	C748	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V (-71)	O	CN701	1-573-290-21	PIN, CONNECTOR (1.5mm) (SMD) 4P		O	FB703	1-469-324-21	FERRITE, EMI (SMD) (-11/-21/-31/-41/-51/-61)	
O	C749	1-164-156-11	CERAMIC CHIP	0.1uF 25V	O	CN702	1-779-071-21	CONNECTOR, FFC/FPC 16P		O	FB704	1-469-324-21	FERRITE, EMI (SMD) (-11/-21/-31/-41/-51/-61)	
O	C752	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V (-71)						O	FB710	1-216-864-11	METAL CHIP 0 5% 1/16W (-11/-21/-31/-41/-51/-61)	O L104 1-412-052-21 INDUCTOR 1uH
O	C753	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V (-71)	O	D002	8-719-976-99	DIODE DTZ5.1B					< IC >	O L105 1-412-052-21 INDUCTOR 1uH (-71)
					O	D003	8-719-059-94	LED SML-010MT-T86 (U/C)						O L106 1-412-052-21 INDUCTOR 1uH (-11/-21/-31/-41/-51/-61)
O	C754	1-125-837-91	CERAMIC CHIP	1uF 10% 6.3V (-71)	O	D004	8-719-158-49	DIODE RD12S-B2 (-11/-21/-31/-41/-51/-61)						O L203 1-469-667-21 FERRITE, EMI (SMD)
					O	D101	8-719-066-17	DIODE FTZ6.8E-T148		S	IC002	8-759-197-94	IC M51957BFP-600D (-11/-21)	O L304 1-412-951-11 INDUCTOR 10uH (-11/-21/-31/-41/-51/-61)
O	C755	1-125-837-91	CERAMIC CHIP	1uF 10% 6.3V (-71)	O	D103	8-719-067-59	DIODE MAZ9120D0LS0-TX/L		S	IC003	8-759-824-75	IC RN5VD13AA-TL (-31/-41/-51/-61/-71)	
O	C756	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V (-71)	O	D104	8-719-065-68	DIODE MAZF04700LS0		S	IC102	6-800-362-01	IC MSM534031E-45GS-KPR2 (100)	O L401 1-412-951-11 INDUCTOR 10uH (-11/-21/-31/-41/-51/-61)
O	C757	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V (-71)	O	D503	8-719-067-59	DIODE MAZ9120D0LS0-TX/L (-11/-21/-31/-41/-51/-61)		S	IC102	6-800-363-01	IC MSM534031E-46GS-KPR2 (101/103)	O L601 1-412-052-21 INDUCTOR 1uH
O	C758	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V (-71)	O	D510	8-719-067-59	DIODE MAZ9120D0LS0-TX/L (-11/-21/-31/-41/-51/-61)		S	IC102	6-800-364-01	IC MSM534031E-47GS-KPR2 (102)	O L602 1-412-052-21 INDUCTOR 1uH (-21/-31/-41/-51/-61/-71)
O	C759	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V (-71)	O	D511	8-719-158-49	DIODE RD12S-B2 (-11/-21/-31/-41/-51/-61)		S	IC103	8-759-387-16	IC CXD8606Q	O L603 1-424-674-11 INDUCTOR 22uH (-21/-31/-41/-51/-61/-71)
					O	D601	8-719-060-81	DIODE MA735-TX (-21/-31/-41/-51/-61/-71)		S	IC201	8-759-377-18	IC TC51V18325BJ-60S(YE)	O L604 1-412-052-21 INDUCTOR 1uH (-11/-21/-31/-41/-51/-61)
										S	IC201	8-759-369-81	IC KM4132G271Q-12 (-11/-21/-31)	
										S	IC201	8-759-684-14	IC K4G163222A-PC70 (-41/-51)	
										S	IC203	8-759-366-69	IC CXD8561Q (-11/-21/-31/-41/-51)	
										S	IC203	8-759-656-47	IC CXD9500Q (-61/-71)	

The components identified by mark Δ or dotted line with mark. Δ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
---	--

SC	Ref. No.	Part No.	Description	Remark	SC	Ref. No.	Part No.	Description	Remark	SC	Ref. No.	Part No.	Description	Remark	SC	Ref. No.	Part No.	Description	Remark
O	L605	1-412-052-21	INDUCTOR	1uH (-71)	O	R104	1-216-801-11	METAL CHIP	22 5% 1/16W	O	R628	1-216-805-11	METAL CHIP	47 5% 1/16W (-11)	O	R702	1-216-835-11	METAL CHIP	15K 5% 1/16W
O	L606	1-412-951-11	INDUCTOR	10uH (-11/-21/-31/-41/-51/-61)	O	R107	1-216-009-91	RES-CHIP	22 5% 1/10W (-11/-21/-31/-41/-51/-61)	O	R629	1-216-825-11	METAL CHIP	2.2K 5% 1/16W (-11)	O	R703	1-216-844-11	METAL CHIP	82K 5% 1/16W
O	L607	1-412-960-21	INDUCTOR	56uH (-11/-21/-31/-41/-51/-61)	O	R107	1-216-801-11	METAL CHIP	22 5% 1/16W (-71)	O	R630	1-216-819-11	METAL CHIP	680 5% 1/16W (-11)	O	R704	1-216-833-11	METAL CHIP	10K 5% 1/16W
O	L608	1-412-052-21	INDUCTOR	1uH (-21/-31/-41/-51)	O	R115	1-216-801-11	METAL CHIP	22 5% 1/16W	O	R631	1-208-793-11	METAL CHIP	3K 0.5% 1/10W (-11)	O	R705	1-216-845-11	METAL CHIP	100K 5% 1/16W
O	L608	1-469-523-91	INDUCTOR	2.2uH (-11)	O	R132	1-216-821-11	METAL CHIP	1K 5% 1/16W	O	R632	1-208-800-11	METAL CHIP	5.6K 0.5% 1/10W (-11)	O	R706	1-216-853-11	METAL CHIP	470K 5% 1/16W
O	L609	1-412-951-11	INDUCTOR	10uH (-71)	O	R133	1-216-821-11	METAL CHIP	1K 5% 1/16W	O	R633	1-208-800-11	METAL CHIP	5.6K 0.5% 1/10W (-11)	O	R707	1-218-727-11	RES-CHIP	30K 5% 1/16W (-71)
O	L701	1-412-951-11	INDUCTOR	10uH	O	R134	1-216-821-11	METAL CHIP	1K 5% 1/16W	O	R634	1-208-793-11	METAL CHIP	3K 0.5% 1/10W (-11)	O	R708	1-216-834-11	METAL CHIP	12K 5% 1/16W (-71)
< IC LINK >					O	R135	1-216-821-11	METAL CHIP	1K 5% 1/16W	O	R636	1-216-864-11	METAL CHIP	0 5% 1/16W (-11)	O	R710	1-216-833-11	METAL CHIP	10K 5% 1/16W
S△	PS004	1-576-123-21	LINK, IC (CCP2E20)	0.8A (-11/-21/-31/-41/-51/-61)	O	R136	1-216-821-11	METAL CHIP	1K 5% 1/16W	O	R640	1-216-864-11	METAL CHIP	0 5% 1/16W	O	R712	1-216-827-11	METAL CHIP	3.3K 5% 1/16W
S△	PS004	1-576-611-21	FUSE, MICRO (1608 TYPE)	0.8A (-71)	O	R137	1-216-805-11	METAL CHIP	47 5% 1/16W	O	R641	1-216-817-11	METAL CHIP	470 5% 1/16W (-71)	O	R714	1-216-827-11	METAL CHIP	3.3K 5% 1/16W
S△	PS600	1-576-398-21	LINK, IC (CCP2E63)	2.5A (-21/-31/-41/-51/-61)	O	R137	1-216-805-11	METAL CHIP	47 5% 1/16W	O	R641	1-216-864-11	METAL CHIP	0 5% 1/16W (-11/-21/-31/-41/-51/-61)	O	R717	1-216-809-11	METAL CHIP	100 5% 1/16W
S△	PS600	1-576-415-11	FUSE, MICRO (1608 TYPE)	2A (-71)	O	R150	1-216-805-11	METAL CHIP	47 5% 1/16W	O	R642	1-216-295-91	SHORT	0	O	R723	1-216-839-11	METAL CHIP	33K 5% 1/16W
S△	PS601	1-576-123-21	LINK, IC (CCP2E20)	0.8A (-11/-21/-31/-41/-51/-61)	O	R154	1-216-815-11	METAL CHIP	330 5% 1/16W	O	R642	1-216-864-11	METAL CHIP	0 5% 1/16W (-11)	O	R725	1-216-829-11	METAL CHIP	4.7K 5% 1/16W
S△	PS601	1-576-611-21	FUSE, MICRO (1608 TYPE)	0.8A (-71)	O	R204	1-216-801-11	METAL CHIP	22 5% 1/16W	O	R644	1-216-817-11	METAL CHIP	470 5% 1/16W (-71)	O	R726	1-218-727-11	RES-CHIP	30K 5% 1/16W (-71)
S△	PS602	1-576-123-21	LINK, IC (CCP2E20)	0.8A (-11)	O	R205	1-216-813-11	METAL CHIP	220 5% 1/16W	O	R661	1-216-041-00	METAL CHIP	470 5% 1/10W (-21/-31/-41/-51/-61/-71)	O	R727	1-216-835-11	METAL CHIP	15K 5% 1/16W
S△	PS603	1-576-123-21	LINK, IC (CCP2E20)	0.8A (-11/-21/-31/-41/-51/-61)	O	R206	1-216-801-11	METAL CHIP	22 5% 1/16W	O	R662	1-218-860-11	METAL CHIP	3.6K 0.5% 1/16W (-21/-31/-41/-51/-61/-71)	O	R728	1-216-845-11	METAL CHIP	100K 5% 1/16W (-71)
S△	PS606	1-576-123-21	LINK, IC (CCP2E20)	0.8A (-11/-21/-31/-41/-51/-61)	O	R207	1-216-829-11	METAL CHIP	4.7K 5% 1/16W (-11/-21/-31/-41/-51)	O	R663	1-218-687-11	METAL CHIP	620 0.5% 1/16W (-21/-31/-41/-51/-61/-71)	O	R730	1-218-727-11	RES-CHIP	30K 5% 1/16W (-71)
S△	PS606	1-576-611-21	FUSE, MICRO (1608 TYPE)	0.8A (-71)	O	R209	1-216-821-11	METAL CHIP	1K 5% 1/16W (-61)	O	R664	1-216-864-11	METAL CHIP	0 5% 1/16W (-21/-31/-41/-51/-61/-71)	O	R732	1-216-834-11	METAL CHIP	12K 5% 1/16W (-71)
< TRANSISTOR >					O	R215	1-216-829-11	METAL CHIP	4.7K 5% 1/16W (-11/-21/-31/-41/-51)	O	R665	1-220-760-11	RES-CHIP	0.2 5% 1/2W (-21/-31/-41/-51/-61)	O	R732	1-216-835-11	METAL CHIP	15K 5% 1/16W (-11/-21/-31/-41/-51/-61)
O	Q002	8-729-010-05	TRANSISTOR	MSB709-RT1	O	R338	1-216-830-11	METAL CHIP	5.6K 5% 1/16W	O	R666	1-216-864-11	METAL CHIP	0 5% 1/16W (-21/-31/-41/-51/-61)	O	R733	1-216-834-11	METAL CHIP	12K 5% 1/16W (-71)
O	Q003	8-729-901-00	TRANSISTOR	DTC124EK	O	R340	1-216-801-11	METAL CHIP	22 5% 1/16W	O	R667	1-216-827-11	METAL CHIP	3.3K 5% 1/16W (-21/-31/-41/-51/-61)	O	R733	1-216-845-11	METAL CHIP	100K 5% 1/16W (-11/-21/-31/-41/-51/-61)
O	Q004	8-729-403-17	TRANSISTOR	XN1215 (-61/-71)	O	R341	1-216-801-11	METAL CHIP	22 5% 1/16W	O	R668	1-216-813-11	METAL CHIP	220 5% 1/16W (-21/-31/-41/-51/-61)	O	R734	1-216-825-11	METAL CHIP	2.2K 5% 1/16W
O	Q505	8-729-049-77	TRANSISTOR	HN1B01F-GR(T5LSONY)	O	R342	1-216-801-11	METAL CHIP	22 5% 1/16W	O	R681	1-216-041-00	METAL CHIP	470 5% 1/10W (-21/-31/-41/-51/-61/-71)	O	R738	1-218-707-11	RES-CHIP	4.3K 5% 1/16W
O	Q600	8-729-015-33	TRANSISTOR	2SB1073-QR-TX (-11)	O	R425	1-216-827-11	METAL CHIP	3.3K 5% 1/16W	O	R691	1-218-874-11	METAL CHIP	13K 0.5% 1/16W (-21/-31/-41/-51/-61/-71)	O	R739	1-216-823-11	METAL CHIP	1.5K 5% 1/16W
O	Q601	8-729-026-52	TRANSISTOR	2SA1576A-T106-R (-11)	O	R426	1-216-827-11	METAL CHIP	3.3K 5% 1/16W	O	R692	1-218-851-11	METAL CHIP	1.5K 0.5% 1/16W (-21/-31/-41/-51/-61/-71)	O	R740	1-216-821-11	METAL CHIP	1K 5% 1/16W
O	Q602	8-729-053-92	TRANSISTOR	2SB1424-T100-QR (-21/-31/-41/-51/-61/-71)	O	R429	1-216-809-11	METAL CHIP	100 5% 1/16W	O	R693	1-216-853-11	METAL CHIP	470K 5% 1/16W (-21/-31/-41/-51/-61/-71)	O	R741	1-216-834-11	METAL CHIP	12K 5% 1/16W
O	Q701	8-729-903-46	TRANSISTOR	2SB1132-P	O	R430	1-216-809-11	METAL CHIP	100 5% 1/16W	O	R694	1-216-841-11	METAL CHIP	47K 5% 1/16W (-21/-31/-41/-51/-61/-71)	O	R742	1-218-883-11	METAL CHIP	33K 0.5% 1/16W (-71)
< RESISTOR >					O	R501	1-216-825-11	METAL CHIP	2.2K 5% 1/16W	O	R695	1-216-845-11	METAL CHIP	100K 5% 1/16W (-21/-31/-41/-51/-61/-71)	O	R743	1-216-864-11	METAL CHIP	0 5% 1/16W (-71)
O	R001	1-216-864-11	METAL CHIP	0 5% 1/16W (-31/-41/-51)	O	R527	1-216-839-11	METAL CHIP	33K 5% 1/16W	O	R696	1-216-830-11	METAL CHIP	5.6K 5% 1/16W (-21/-31/-41/-51/-61/-71)	O	R745	1-218-884-11	METAL CHIP	36K 0.5% 1/16W
O	R002	1-216-845-11	METAL CHIP	100K 5% 1/16W (-61/-71)	O	R528	1-216-837-11	METAL CHIP	22K 5% 1/16W	O	R701	1-216-829-11	METAL CHIP	4.7K 5% 1/16W	O	R746	1-218-884-11	METAL CHIP	36K 0.5% 1/16W
O	R003	1-216-833-11	METAL CHIP	10K 5% 1/16W (-61/-71)	O	R529	1-216-824-11	METAL CHIP	1.8K 5% 1/16W	O	R699	1-216-805-11	METAL CHIP	47 5% 1/16W	O	R747	1-216-009-91	RES-CHIP	22 5% 1/10W
O	R009	1-216-005-00	METAL CHIP	15 5% 1/10W	O	R541	1-216-824-11	METAL CHIP	1.8K 5% 1/16W	O	R702	1-216-805-11	METAL CHIP	47 5% 1/16W	O	R748	1-218-883-11	METAL CHIP	33K 0.5% 1/16W
O	R010	1-216-031-00	METAL CHIP	180 5% 1/10W	O	R542	1-216-833-11	METAL CHIP	10K 5% 1/16W	O	R703	1-216-801-11	METAL CHIP	22 5% 1/10W	O	R749	1-218-883-11	METAL CHIP	33K 0.5% 1/16W
O	R011	1-216-864-11	METAL CHIP	0 5% 1/16W (-31/-41/-51/-61)	O	R543	1-218-857-11	METAL CHIP	2.7K 0.5% 1/16W (102)	O	R704	1-216-801-11	METAL CHIP	22 5% 1/10W	O	R750	1-216-009-91	RES-CHIP	22 5% 1/10W
O	R011	1-218-839-11	METAL CHIP	470 0.5% 1/16W (-11/-21)	O	R543	1-218-859-11	METAL CHIP	3.3K 0.5% 1/16W (100/101/103)	O	R705	1-216-801-11	METAL CHIP	22 5% 1/10W	O	R751	1-216-864-11	METAL CHIP	0 5% 1/16W (-71)
O	R012	1-218-861-11	METAL CHIP	3.9K 0.5% 1/16W	O	R606	1-216-821-11	METAL CHIP	1K 5% 1/16W (-11/-41/-51/-61/-71)	O	R706	1-216-801-11	METAL CHIP	22 5% 1/10W	O	R769	1-218-667-11	RES-CHIP	91 5% 1/16W
O	R013	1-218-859-11	METAL CHIP	3.3K 0.5% 1/16W	O	R606	1-216-845-11	METAL CHIP	100K 5% 1/16W (-21/-31)	O	R707	1-216-801-11	METAL CHIP	22 5% 1/10W	O	R770	1-216-845-11	METAL CHIP	100K 5% 1/16W
O	R014	1-216-029-00	METAL CHIP	150 5% 1/10W	O	R624	1-211-952-91	METAL CHIP	10 0.5% 1/10W (-11)	O	R708	1-216-801-11	METAL CHIP	22 5% 1/10W	O	R774	1-216-864-11	METAL CHIP	0 5% 1/16W
O	R015	1-216-029-00	METAL CHIP	150 5% 1/10W	O	R625	1-211-952-91	METAL CHIP	10 0.5% 1/10W (-11)	O	R709	1-216-801-11	METAL CHIP	22 5% 1/10W	O	R775	1-216-841-11	METAL CHIP	47K 5% 1/16W

The components identified by mark △ or dotted line with mark. △ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
---	--

SC	Ref. No.	Part No.	Description				Remark
O	R792	1-218-727-11	RES-CHIP	30K	5%	1/16W	(-71)
O	R793	1-216-845-11	METAL CHIP	100K	5%	1/16W	
O	R795	1-216-833-11	METAL CHIP	10K	5%	1/16W	
O	R901	1-216-295-91	SHORT	0			(101)
O	R902	1-216-295-91	SHORT	0			(102)
O	R903	1-216-295-91	SHORT	0			(103)
< NETWORK RESISTOR >							
O	RB120	1-234-030-11	RES, NETWORK (CHIP TYPE) 22X4				
O	RB121	1-234-030-11	RES, NETWORK (CHIP TYPE) 22X4				
O	RB122	1-234-030-11	RES, NETWORK (CHIP TYPE) 22X4				
O	RB123	1-233-955-11	RES, NETWORK (CHIP TYPE) 100X4				
O	RB124	1-233-967-11	RES, NETWORK (CHIP TYPE) 10KX4				
O	RB125	1-234-030-11	RES, NETWORK (CHIP TYPE) 22X4				
O	RB126	1-233-959-21	RES, NETWORK (CHIP TYPE) 470X4				
O	RB201	1-234-030-11	RES, NETWORK (CHIP TYPE) 22X4				
O	RB202	1-234-030-11	RES, NETWORK (CHIP TYPE) 22X4				
O	RB203	1-234-467-21	RES, NETWORK (CHIP TYPE) 82X4	(-11/-21/-31/-41/-51)			
O	RB204	1-234-467-21	RES, NETWORK (CHIP TYPE) 82X4	(-41/-51)			
O	RB205	1-234-467-21	RES, NETWORK (CHIP TYPE) 82X4	(-41/-51)			
O	RB206	1-234-467-21	RES, NETWORK (CHIP TYPE) 82X4	(-41/-51)			
O	RB207	1-234-467-21	RES, NETWORK (CHIP TYPE) 82X4	(-41/-51)			
O	RB208	1-234-467-21	RES, NETWORK (CHIP TYPE) 82X4	(-41/-51)			
O	RB209	1-234-467-21	RES, NETWORK (CHIP TYPE) 82X4	(-41/-51)			
O	RB210	1-234-467-21	RES, NETWORK (CHIP TYPE) 82X4	(-41/-51)			
O	RB501	1-234-482-21	RES, NETWORK (CHIP TYPE) 75X4				
O	RB502	1-234-482-21	RES, NETWORK (CHIP TYPE) 75X4				
< SWITCH >							
O△	S001	1-762-745-22	SWITCH, PUSH (I/⏻/RESET)				
O	S301	1-771-764-11	SWITCH, PUSH (1 KEY) (CD DOOR OPEN/CLOSE DET)				
< VIBRATOR >							
S	X201	1-767-783-21	VIBRATOR, CRYSTAL (14.318182MHz) (NTSC)				
S	X201	1-767-940-22	VIBRATOR, CRYSTAL (17.73447MHz) (PAL)				

SC	Ref. No.	Part No.	Description	Remark
ACCESSORIES				

<SCPH-100>				
O△	AC	1-476-267-16	ADAPTOR, AC (SCPH-112)	
O	AV	1-792-028-11	CORD, CONNECTION (A/V CABLE)	
O	CONT	1-757-144-33	CORD, CONNECTION (ANALOG CONTROLLER)	
O	MANUAL	3-068-146-02	MANUAL, INSTRUCTION (JAPANESE)	
<SCPH-101>				
O△	AC	1-476-409-21	ADAPTOR, AC (SCPH-113)	
O	AV	1-792-028-11	CORD, CONNECTION (A/V CABLE)	
O	CONT	1-757-144-33	CORD, CONNECTION (ANALOG CONTROLLER)	
O	MANUAL	3-065-224-12	MANUAL, INSTRUCTION (ENGLISH,FRENCH, SPANISH)	
<SCPH-102>				
O△	AC	1-476-410-12	ADAPTOR, AC (SCPH-114) (102C)	
O△	AC	1-476-411-11	ADAPTOR, AC (SCPH-115) (102B)	
O△	AC	1-476-412-11	ADAPTOR, AC (SCPH-116) (102A)	
O	AV	1-792-028-11	CORD, CONNECTION (A/V CABLE)	
O	CONT	1-757-144-33	CORD, CONNECTION (ANALOG CONTROLLER)	
O△	CONV	1-573-291-11	CONNECTOR, CONVERSION (102C)	
O	MANUAL	3-066-615-11	MANUAL, INSTRUCTION (ENGLISH) (102A)	
O	MANUAL	3-066-615-21	MANUAL, INSTRUCTION (ENGLISH) (102B)	
O	MANUAL	3-066-615-31	MANUAL, INSTRUCTION (FRENCH,SPANISH, GERMAN,ITALIAN,DUTCH,PORTUGUESE) (102C)	
O	MANUAL	3-066-615-53	MANUAL, INSTRUCTION (ENGLISH,RUSSIAN, ARABIC) (102D)	
O	RF	1-476-040-31	ADAPTOR, RF (102B)	
<SCPH-103>				
O△	AC	1-476-410-12	ADAPTOR, AC (SCPH-114)	
O△	AC	1-476-411-11	ADAPTOR, AC (SCPH-115)	
O△	AC	1-476-587-11	ADAPTOR, AC (SCPH-117)	
O△	AC	1-477-217-11	ADAPTOR, AC (SCPH-123D) (103D)	
O	AV	1-792-028-11	CORD, CONNECTION (A/V CABLE)	
O	CONT	1-757-144-33	CORD, CONNECTION (ANALOG CONTROLLER)	
O	MANUAL	3-066-615-42	MANUAL, INSTRUCTION (ENGLISH, TRADITIONAL CHINESE,HUNGARIAN)	

The components identified by mark △ or dotted line with mark. △ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
---	--